

Vendor: SFAM

LEG ASSEMBLY INSTRUCTIONS 6129

1: Identify Legs



BACK WOOD LEG



FRONT WOOD LEG



SKUs:

10161292
10261294
10361296
10161230
10261232
10361234
10461236

INCLUDED HARDWARE



3X FRONT WOOD LEGS FOR SOFA, 2X FOR LOVESEAT AND CHAIR and 4X FOR OTTOMAN




2X BACK WOOD



4X PHILLIPS FLAT HEAD 8x3 SCREWS


Screwdriver **NOT** included.

2: Assemble front legs.

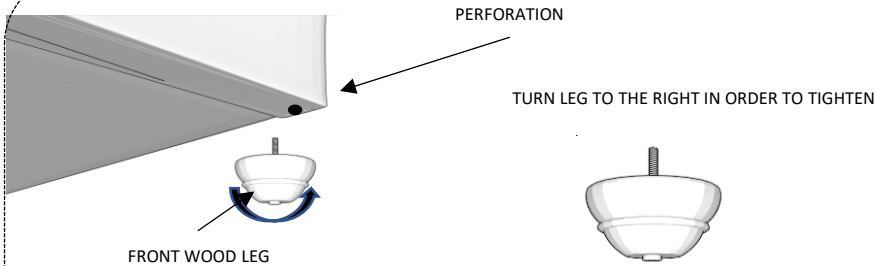


Locate the perforation in the bottom part of frame and insert the bolt of the front wood leg. Turn leg to the right until completely tight.

3: Screw back legs.

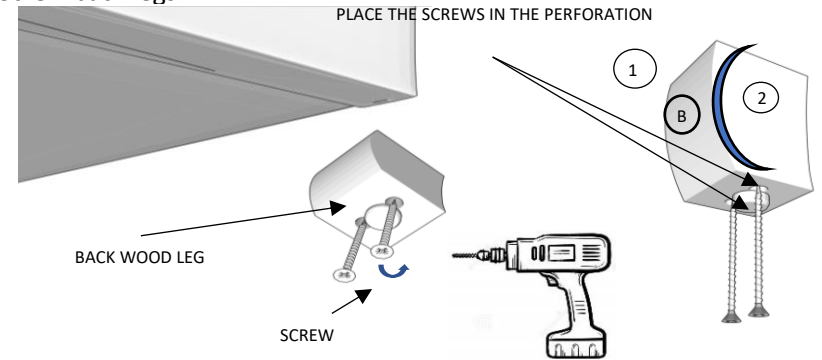

- 1 Place the leg in the back corner of the sofa against the wood rail inside the frame. Use the 2
- 2 Side **B** must be facing the front part of the frame.

4: Identify direction of back legs.

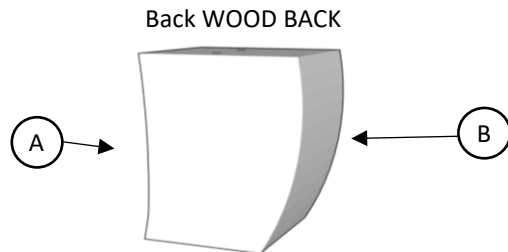

- 1 Side **B** must be facing the front part of the frame.
- 2 Side **A** must be facing the back part of the frame.

5: Inspect Final Assembly

