


Vendor: SFAM

LEGS ASSEMBLY INSTRUCTIONS


Creation Date: 11/February/2025

Revision Date: 3/April/2025

1

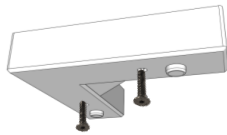

BACK WOOD LEG

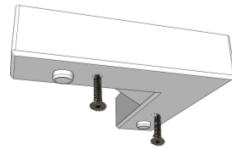

FRONT WOOD LEG



3



BACK WOOD LEG

FRONT WOOD LEG

INCLUDED

4 WOOD LEGS
8X ALLEN 4mm FLAT
HEAD 8x3 SCREWS



SKU:

10162028



10262020

10462024

10362022

10962024

2

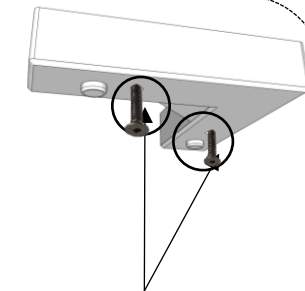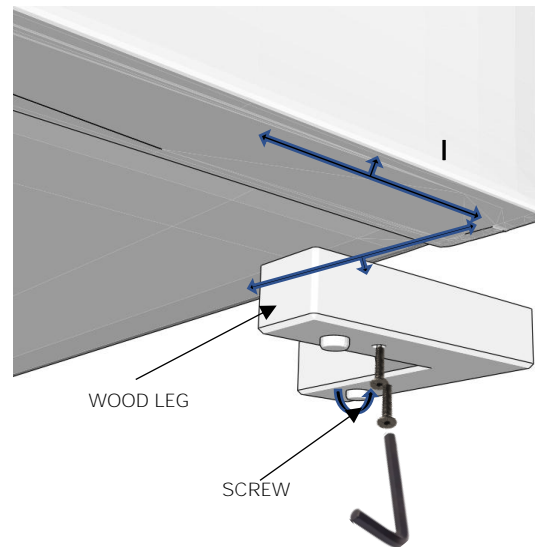

PLACE THE SCREWS IN THE SCREW HOLES.



(A)

Place the leg 1/4" of space from the edge of the furniture.

(B)

Use allen key as shown to secure screws.