

Vendor: SFAM

## LEG ASSEMBLY INSTRUCTIONS 6219

Creation Date: 29/May/2025  
Revision Date: 29/May/2025

### 1: Identify Legs




BACK WOOD LEG



FRONT WOOD LEG




### 2: Assemble front legs.

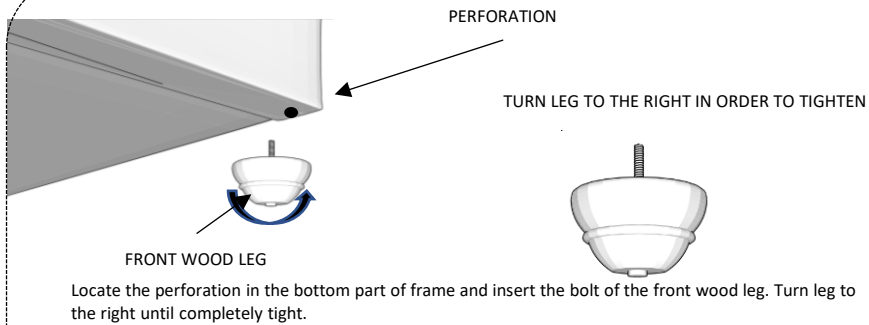

FRONT WOOD LEG

Locate the perforation in the bottom part of frame and insert the bolt of the front wood leg. Turn leg to the right until completely tight.

### 3: Identify direction and position of back legs.

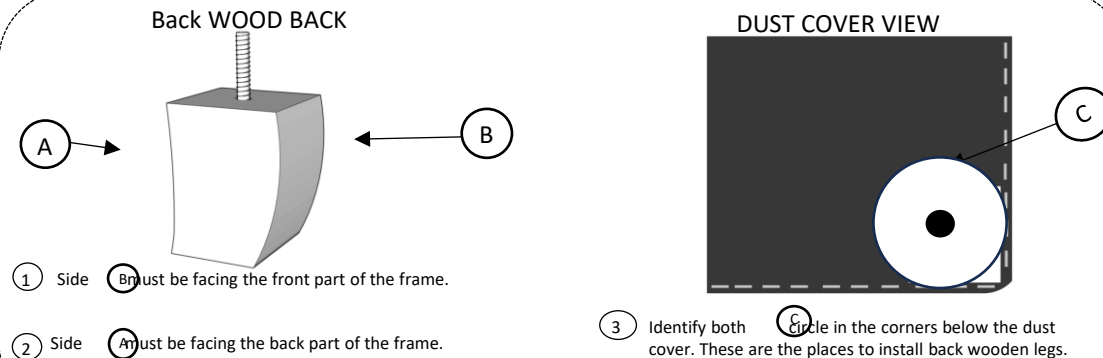

① Side B must be facing the front part of the frame.

② Side A must be facing the back part of the frame.

③ Identify both circle in the corners below the dust cover. These are the places to install back wooden legs.

### SKUs:

-10462199  
-10962199  
-10362197  
-10262195  
-10162193

### INCLUDED HARDWARE




3X FRONT WOOD LEGS FOR SOFA, 2X FOR  
LOVESEAT AND CHAIR and 4X FOR OTTOMAN



2X BACK WOOD LEGS

### 4: Screw leg.

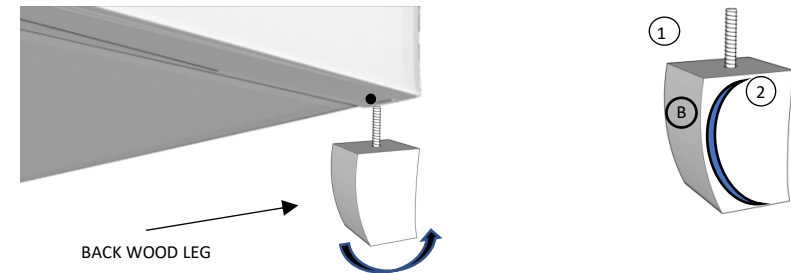

- ① Locate the perforation in the bottom part of frame and insert the bolt of the front wood leg. Turn leg to the right until completely tight.
- ② Side B must be facing the front part of the frame.

### 5: Inspect Final Assembly

