


Assembly Instructions BHOD 1082 Group


LEG ASSEMBLY

Step 1 - Working on a clean surface, turn the unit on its back with the base facing your work area. Position the leg as shown, approximately 1/4" from outside edges of bottom surface.

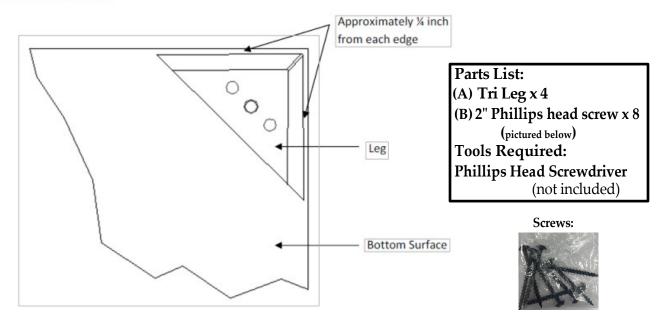

Screwdriver:

Step 2 – Fasten the leg by inserting (2) - 2 inch screws per leg in the holes provided and screw until the leg is secure.

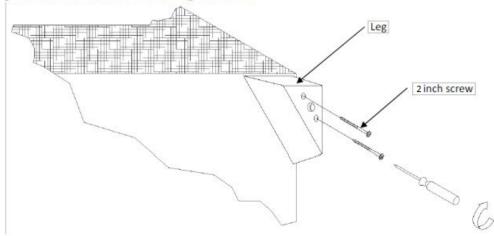

Repeat steps 1 and 2 for the remaining legs. Turn the unit upright and place in the desired location.

Manufactured for Rooms to Go

Creation Date:10/24/24