

HMRI 4175

Apt Sofa - 10241735


Chair - 10341737

Ottoman - 10411739

FRONT OF  
FRAME

SIDE OF  
FRAME

SCREW LEG  
BOLT INTO  
T-NUT BRACKET  
ON BOTTOM OF  
FRAME, TURN  
TILL TIGHT  
THEN ALIGN  
EDGE OF  
BOTTOM LEG  
TO CORNER OF  
FRAME, SET  
SCREW GOES  
TO BACK SIDE  
OF LEG

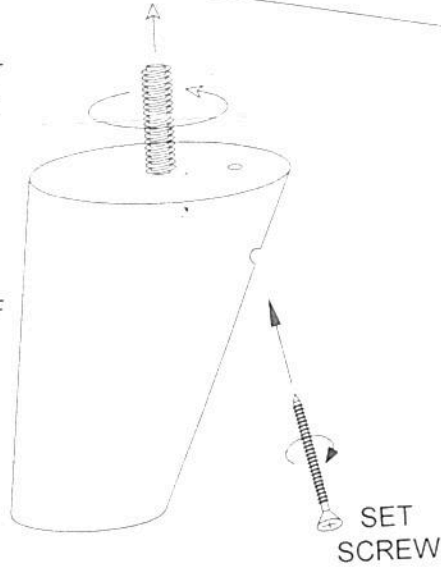



HmRI 4175

Sofa - 10141733

FRONT OF FRAME


SIDE OF FRAME

SCREW LEG BOLT INTO T-NUT BRACKET ON BOTTOM OF FRAME, TURN TILL TIGHT THEN ALIGN EDGE OF BOTTOM LEG TO CORNER OF FRAME, SET SCREW GOES TO BACK SIDE OF LEG

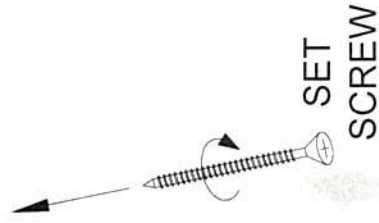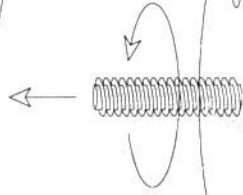

CENTER BOTTOM OF FRAME (T-NUT WILL BE MARKED)

CENTER FRONT OF FRAME

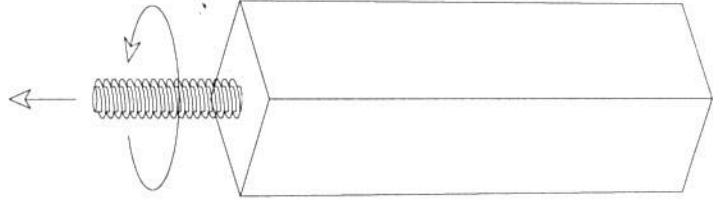

MID WOOD LEG: SCREW LEG BOLT INTO T-NUT BRACKET IN CENTER BOTTOM OF FRAME TURN TILL TIGHT