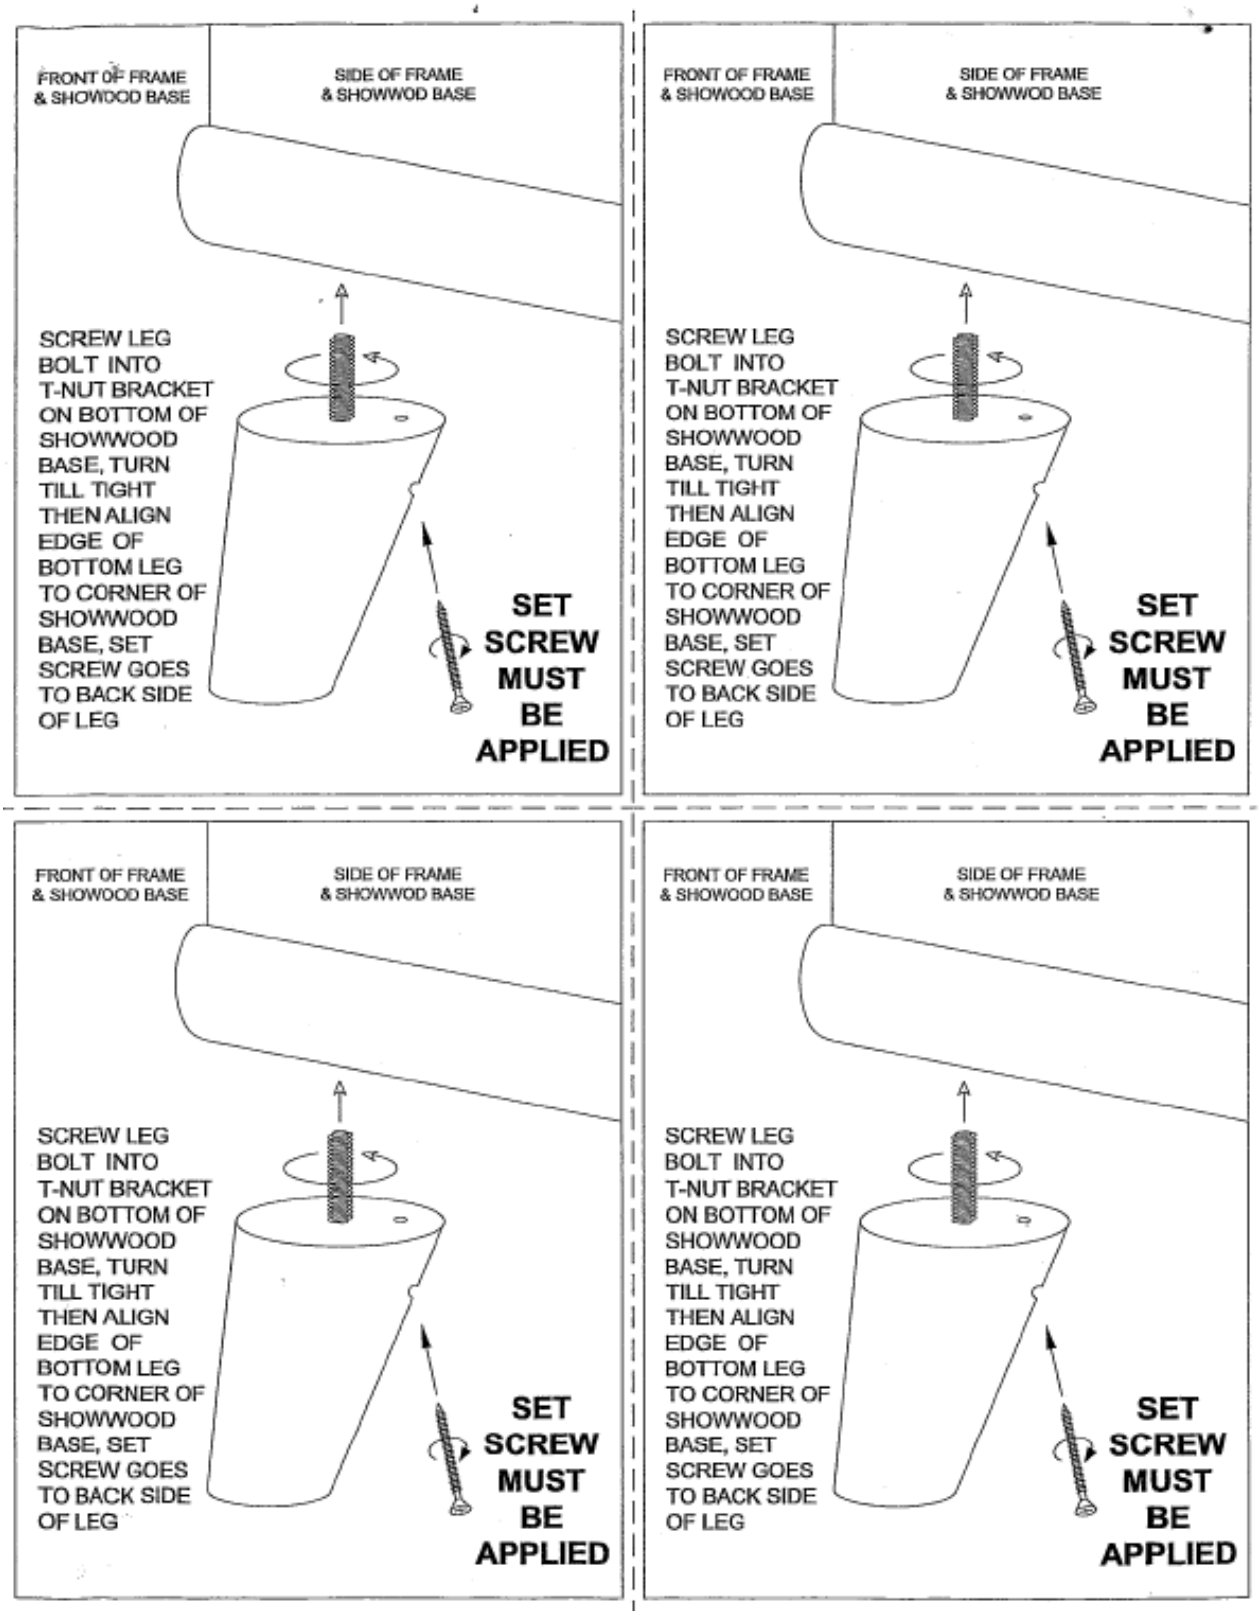
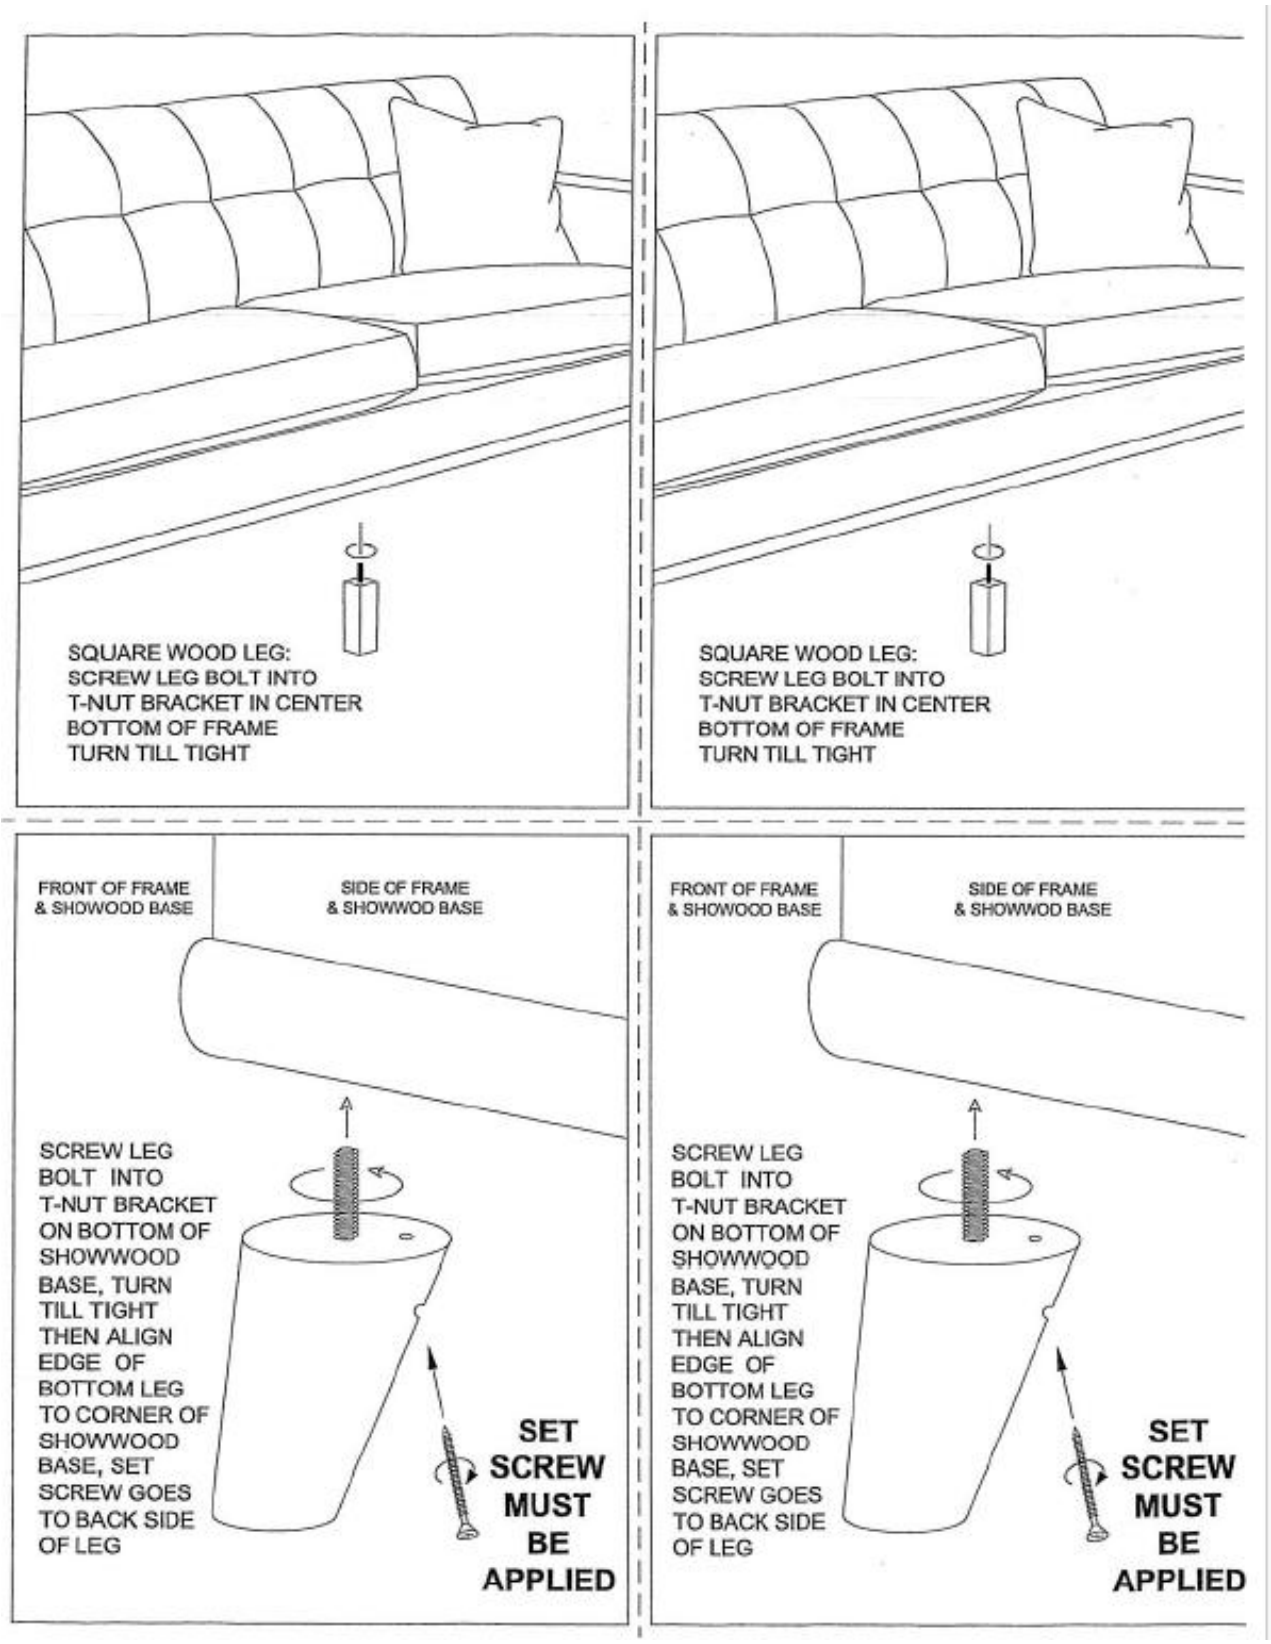
HMRI 4175


FRONT OF FRAME & SHOWDOD BASE
SIDE OF FRAME & SHOWWOD BASE
SCREW LEG BOLT INTO T-NUT BRACKET ON BOTTOM OF SHOWWOOD BASE, TURN TILL TIGHT THEN ALIGN EDGE OF BOTTOM LEG TO CORNER OF SHOWWOOD BASE, SET SCREW GOES TO BACK SIDE OF LEG
SET SCREW MUST BE APPLIED
FRONT OF FRAME & SHOWOOD BASE
SIDE OF FRAME & SHOWWOD BASE
SCREW LEG BOLT INTO T-NUT BRACKET ON BOTTOM OF SHOWWOOD BASE, TURN TILL TIGHT THEN ALIGN EDGE OF BOTTOM LEG TO CORNER OF SHOWWOOD BASE, SET SCREW GOES TO BACK SIDE OF LEG
SET SCREW MUST BE APPLIED
FRONT OF FRAME & SHOWOOD BASE
SIDE OF FRAME & SHOWWOD BASE
SCREW LEG BOLT INTO T-NUT BRACKET ON BOTTOM OF SHOWWOOD BASE, TURN TILL TIGHT THEN ALIGN EDGE OF BOTTOM LEG TO CORNER OF SHOWWOOD BASE, SET SCREW GOES TO BACK SIDE OF LEG
SET SCREW MUST BE APPLIED
FRONT OF FRAME & SHOWOOD BASE
SIDE OF FRAME & SHOWWOD BASE
SCREW LEG BOLT INTO T-NUT BRACKET ON BOTTOM OF SHOWWOOD BASE, TURN TILL TIGHT THEN ALIGN EDGE OF BOTTOM LEG TO CORNER OF SHOWWOOD BASE, SET SCREW GOES TO BACK SIDE OF LEG
SET SCREW MUST BE APPLIED

HMRI 4175


SQUARE WOOD LEG:
SCREW LEG BOLT INTO
T-NUT BRACKET IN CENTER
BOTTOM OF FRAME
TURN TILL TIGHT
SQUARE WOOD LEG:
SCREW LEG BOLT INTO
T-NUT BRACKET IN CENTER
BOTTOM OF FRAME
TURN TILL TIGHT
FRONT OF FRAME
& SHOWOOD BASE
SIDE OF FRAME
& SHOWWOD BASE
SCREW LEG
BOLT INTO
T-NUT BRACKET
ON BOTTOM OF
SHOWWOOD
BASE, TURN
TILL TIGHT
THEN ALIGN
EDGE OF
BOTTOM LEG
TO CORNER OF
SHOWWOOD
BASE, SET
SCREW GOES
TO BACK SIDE
OF LEG
SET
SCREW
MUST
BE
APPLIED
FRONT OF FRAME
& SHOWOOD BASE
SIDE OF FRAME
& SHOWWOD BASE
SCREW LEG
BOLT INTO
T-NUT BRACKET
ON BOTTOM OF
SHOWWOOD
BASE, TURN
TILL TIGHT
THEN ALIGN
EDGE OF
BOTTOM LEG
TO CORNER OF
SHOWWOOD
BASE, SET
SCREW GOES
TO BACK SIDE
OF LEG
SET
SCREW
MUST
BE
APPLIED