

Vendor: SFAM

LEGS ASSEMBLY INSTRUCTIONS

Creation Date: 29/April/2025
Revision Date: 5/September/2025

1




BACK WOOD LEG



FRONT WOOD LEG



4 WOOD LEGS

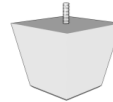

INCLUDED HARDWARE


SKUs:

-10563206
-10462377
-10962377
-10262373
-10362375
-10162371

SKUs:

-10562367
-10962365
-10462365
-10262361
-10362363
-10162369


2

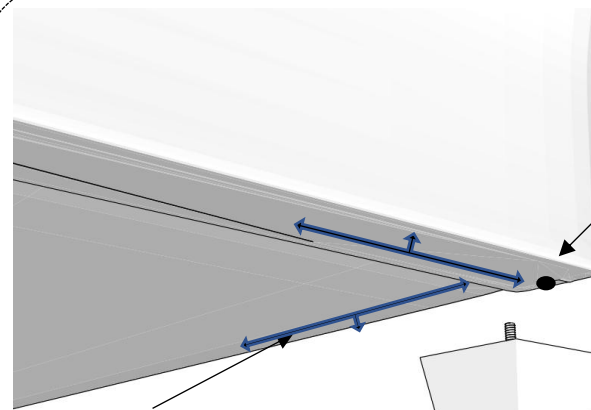


PERFORATION

TURN LEG TO THE RIGHT IN ORDER
TO TIGHTEN

WOOD LEG

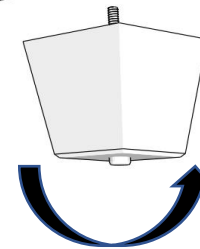

3

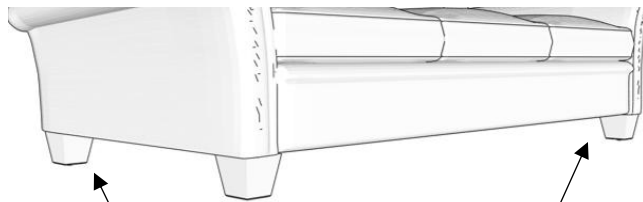

BACK WOOD LEG

FRONT WOOD LEG

Locate the perforation in the bottom part of frame and insert the bolt of the front wood leg. Turn leg to the right until completely tight. Note. The perforation is in the frame and not in the dust cover so you will have to feel the bottom to find where it is and then insert the bolt.