



HMKL
10576316

SCREW LEGS INTO SHOWWOOD
BASE WITH PRE-ATTACHED
BOLTS, THEN USE PROVIDED
SCREWS IN COUNTERSUNK
HOLES TO SET THE LEG IN
PLACE

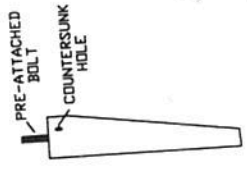

FRONT LEG
COUNTERSUNK
HOLES ON 2
SIDES FACE
TOWARD THE
INSIDE OF BASE

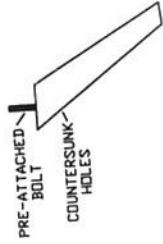

BACK LEG
2 COUNTERSUNK
HOLES ON 1 SIDE
FACE TOWARD
THE INSIDE OF
BASE

