




Assembly Instructions

376-37 OTTOMAN

Manufactured by ALBI for Rooms To Go

SKU # 10703812

Hardware	Size	Qty
ALLEN BOLTS WITH WASHERS	1/4"W X 2"L (34 THREAD)	4
WOOD LEGS	4.75"L x 4.75"W x .5"H	4
ALLEN WRENCH	1/8"	1

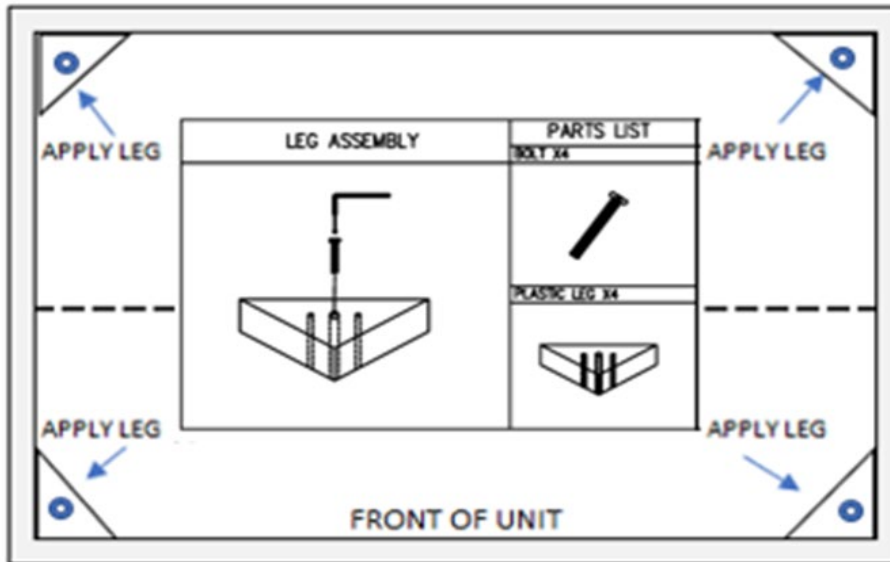

The legs should be aligned on each corner of the unit. Place an allen bolt in the center hole of the leg and align with the threaded insert. Using the wrench, turn the bolt clockwise, until the bolt is fully seated.

Assembly Tools included - Allen wrench

Hardware Pack Location Hardware can be located in the zippered compartment on the bottom of the unit.

Unit Type OTTOMAN **SKU(s)#** 10703712

Version # 1

Date: 6/2/2023

Page 1