



ALBANY

Assembly Instructions


572-32 OTTOMAN

SKU # 12515726

Manufactured by ALBI for Rooms To Go

SKU # 12505725

| Hardware | Size | Thread | Qty |
|-----------------------|----------------------|--------|-----|
| HEX HEAD WOOD SCREWS | 1/8"W x 2"L | 13 | 8 |
| TRIANGLE PLASTIC LEGS | 7"W x 7"W x 7" x 2"H | | 4 |

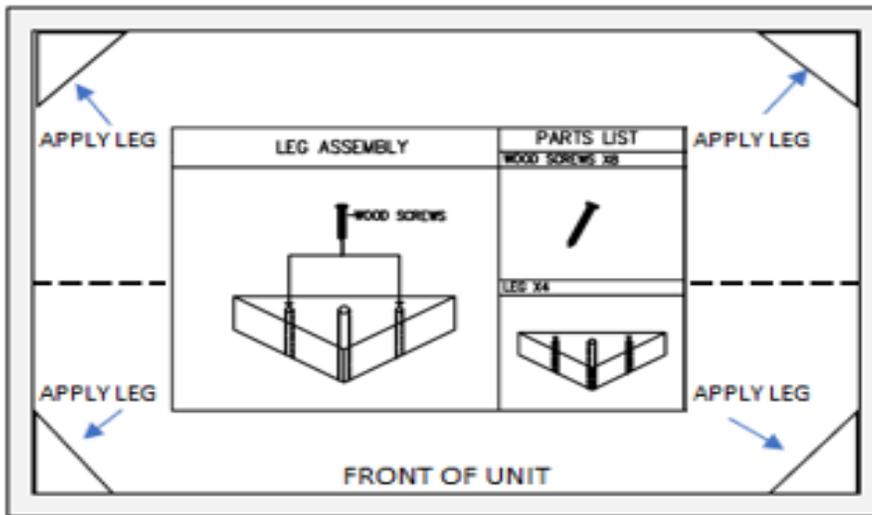

The triangle legs should be evenly aligned on each bottom corner of the unit, approximately 1/4" - 3/8" from the edges. Place 2 screws, one in each of the screw holes. Secure the legs to the frame using a hex-head screwdriver bit and a power drill. **Do not over tighten screws.** Locate the 5th leg rail on the front center of the sofa. Locate the 5th leg rail on the front center of the sofa. Align the hanger bolt on the round plastic leg with the threaded insert. Turn the leg clockwise, until fully seated.

Assembly Tools needed, but not included - Hex-Head screwdriver bit, and power drill.

Hardware Pack Location Hardware can be located in the cushion seating area, in a colored bag.

Unit Type OTTOMAN **SKU(s)#** 12515726, 12505725

Version # 2

Date: 9/18/2023

Page 1