

ASSEMBLY INSTRUCTION



MANUFACTURED FOR ROOMS TO GO


VENDOR CODE: TXNS

STOCK#: 8210-50

Update: 10/10/2025 Version #: 1

SKU: 12582107

SKU: 12582119

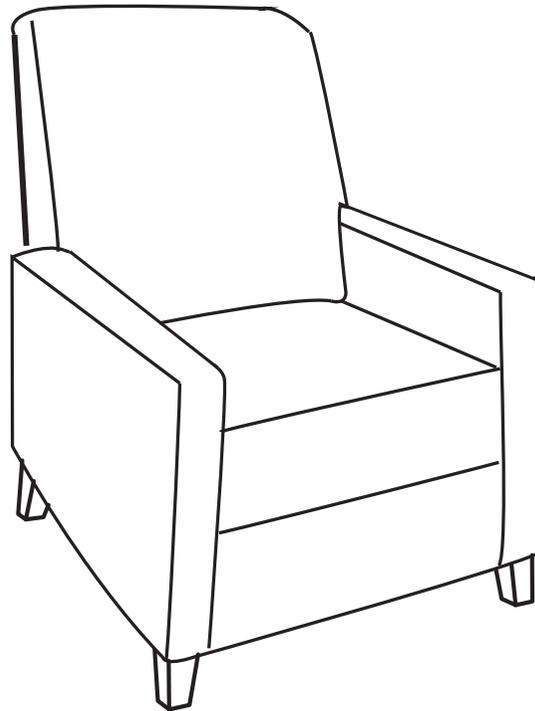



MANUFACTURED FOR ROOMS TO GO

Part Location


VENDOR CODE: TXNS

STOCK#: 8210-50


Update: 10/10/2025 Version #: 1

SKU: 12582107

SKU: 12582119

TOOLS REQUIRED: NO			
PART LIST			
NO	Description	Sketch	Quantity
A	BACK		1
B	SEAT FRAME		1
C	FRONT LEGS		2
D	REAR LEGS		2
E	PLASTIC WASHERS		4

Front and Back Legs (C & D) and Washers (E) Are Stored Underneath Seat

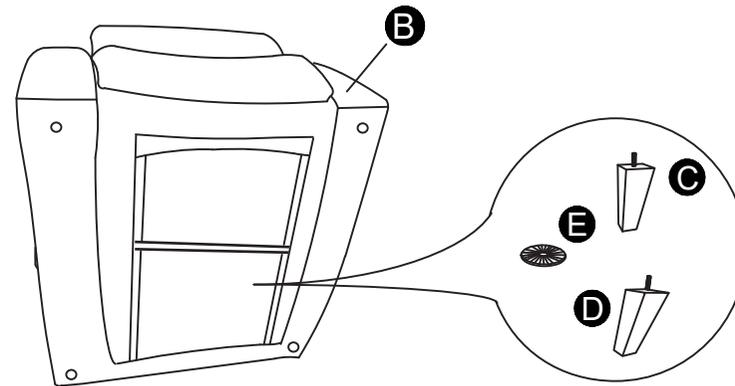



MANUFACTURED FOR ROOMS TO GO


ASSEMBLY

VENDOR CODE: TXNS
STOCK#: 8210-50

Update: 10/10/2025 Version #: 1

SKU: 12582107
SKU: 12582119

Step 1 Tighten Front Legs (C) and Rear Legs (D) To Seat (B)

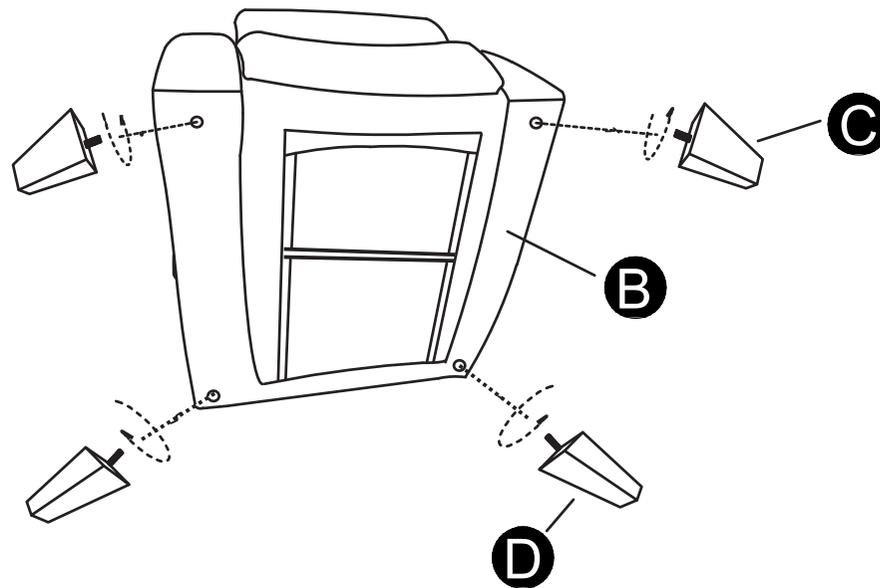

OPTIONAL



C or D

Adjust each leg by inserting a washer (E) to make it even and level with the floor.



ASSEMBLY

VENDOR CODE: TXNS
STOCK#: 8210-50



SKU: 12582107
SKU: 12582119

MANUFACTURED FOR ROOMS TO GO

Update: 10/10/2025 Version #: 1

Step 2

Align Brackets On Seat (B) With Brackets on Back (A)

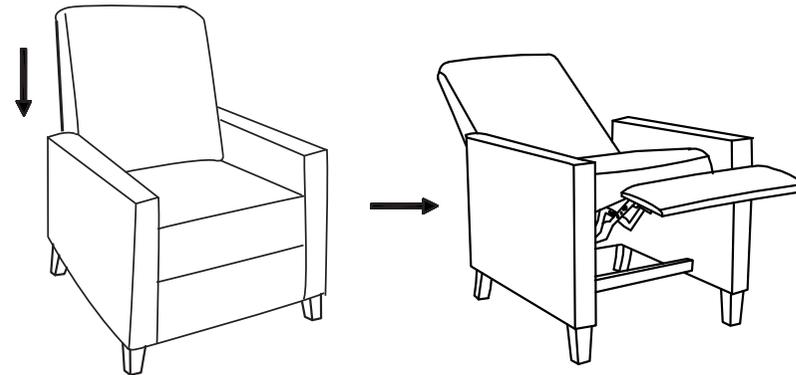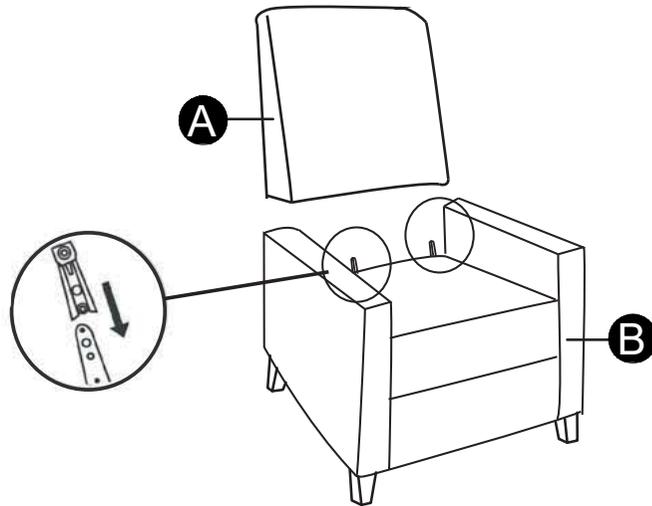

Step 3

Push Down On Back (A) Until Bracket Locks. Then Chair Is Ready For Reclining.