




Assembly Instructions BHOD 1671 Group

SKU#'s
12216811
12616819
12116819
12416815
12516817

LEG ASSEMBLY


Step 1 - Working on a clean surface, turn the unit on its back with the base facing your work area. Position the leg as shown, approximately 1/4" from outside edges of bottom surface.

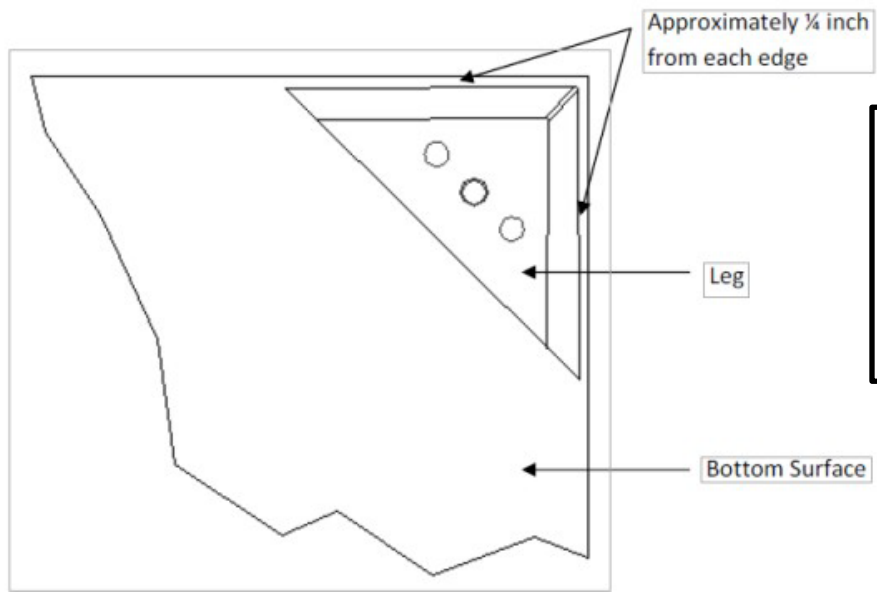

Parts List:
(A) Tri Leg x 4
(B) 2" Phillips head screw x 8
(pictured below)
Tools Required:
Phillips Head Screwdriver



Step 2 - Fasten the leg by inserting (2) - 2 inch screws per leg in the holes provided and screw until the leg is secure.

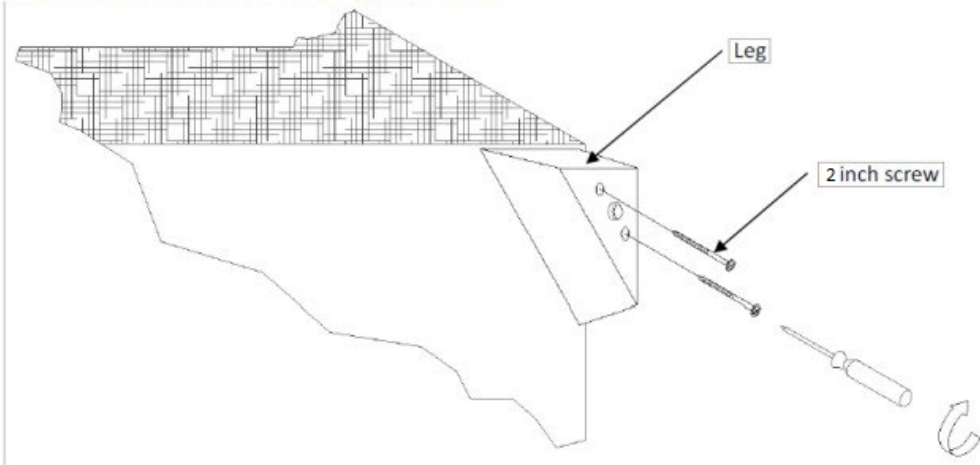

Repeat steps 1 and 2 for the remaining legs. Turn the unit upright and place in the desired location.