




# Assembly Instructions BHOD 1046 Group

| SKU#'s   |          |
|----------|----------|
| 12110665 | 12310669 |
| 12210667 | 12710679 |
| 12210679 | 12610665 |
| 12110677 | 12710667 |
| 12510663 |          |
| 12410661 |          |

## LEG ASSEMBLY

**Step 1** - Working on a clean surface, turn the unit on its back with the base facing your work area. Position the leg as shown, approximately 1/4" from outside edges of bottom surface.

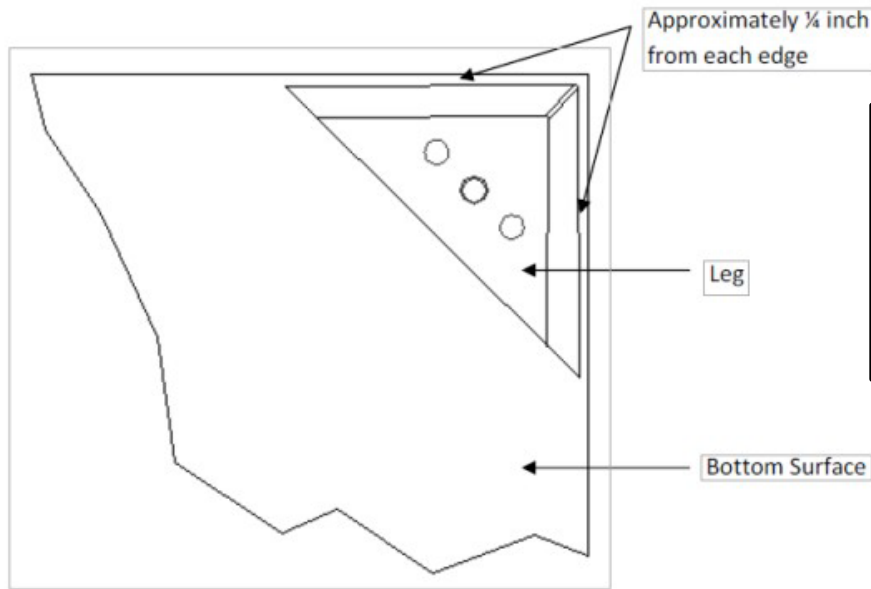


**Parts List:**  
(A) Tri Leg x 4  
(B) 2" Phillips head screw x 8  
(pictured below)  
**Tools Required:**  
Phillips Head Screwdriver

Screws:



**Step 2** - Fasten the leg by inserting (2) - 2 inch screws per leg in the holes provided and screw until the leg is secure.

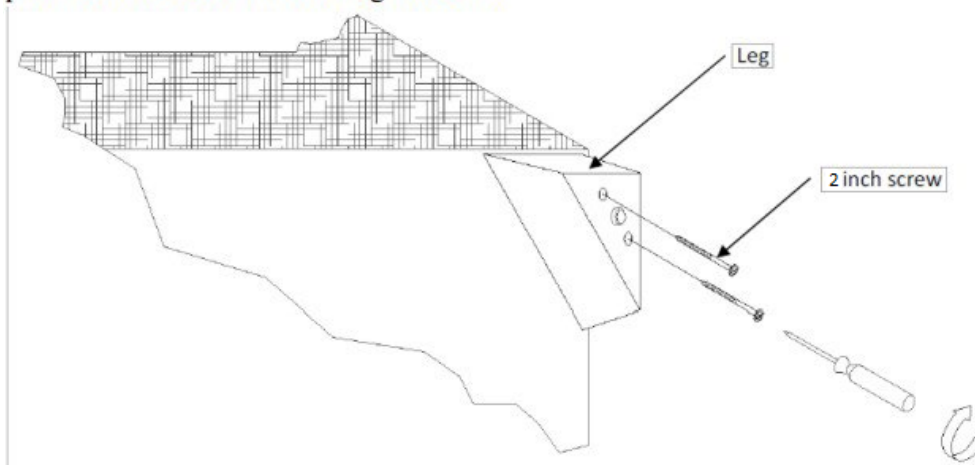

Repeat steps 1 and 2 for the remaining legs. Turn the unit upright and place in the desired location.