



# ASSEMBLY INSTRUCTIONS SFAM 6171 SECTIONAL

1

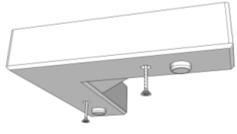


BACK WOOD LEG

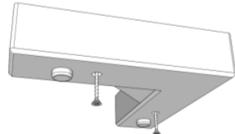

FRONT WOOD LEG



3

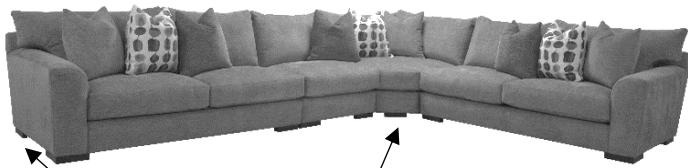


BACK WOOD LEG

WEDGE LEG


FRONT WOOD LEG

## INCLUDED HARDWARE

SKU	6171	 WOOD LEG	 WOOD LEG WEDGE	 PHILLIP SCREW 3½"
1	RAF/LAF SOFA	4		8
2	ARMLESS CHAIR	4		8
3	CORNER WEDGE	3	1	8

Include additional SKU's: **12561711, 12961719, 12461719, 12161713, 12361717, 12261715, 12961721, 12461721, 12361729, 12161725, 12261727**

2

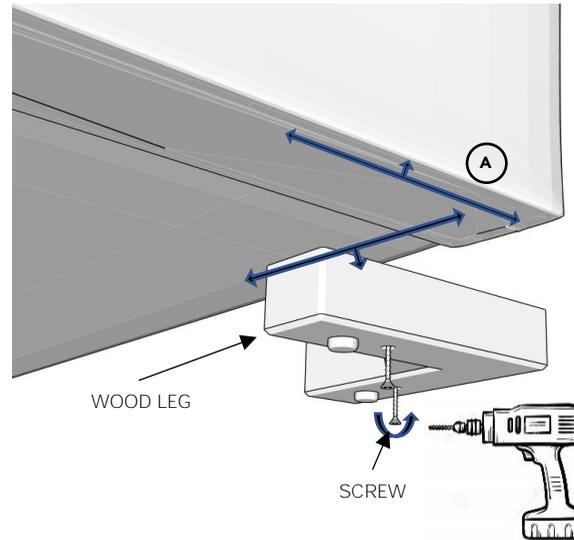

WOOD LEG


SCREW

A

Place the leg 1/4" of space from the edge of the furniture.

B

Use the 2 screws and with a philips screwdriver tighten these legs according to the Picture 2.

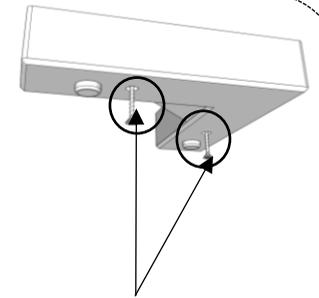

PLACE THE SCREWS IN THE PERFORATION

**The wood leg's package does not include drill.**