



# Assembly Instructions for 599-85 PHR

Dual Power Reclin  
13405990

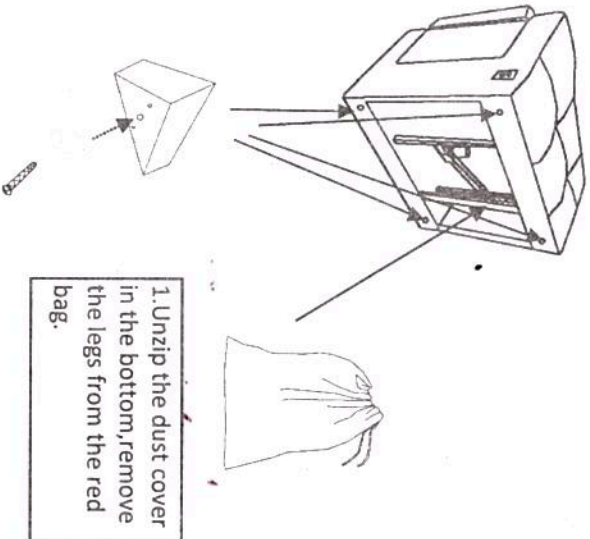

2. Screw the two triangle legs on the bottom of arm side, screw the two rounded legs on the other side and tighten in clockwise.

Note: Make sure all PLUGS are connected on the product before plugging power cord into power outlet. If not damage can occur.

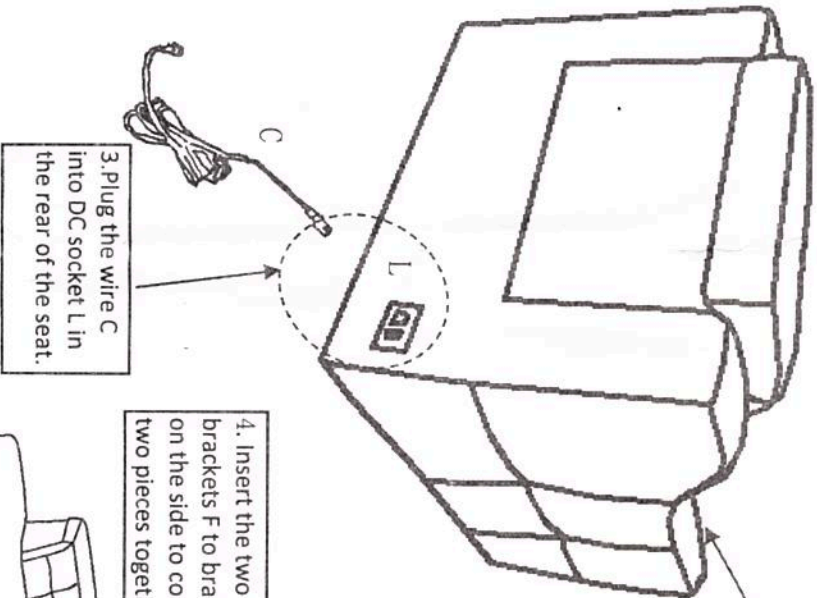

4. Insert the two brackets F to brackets G on the side to connect two pieces together.

