

Assembly Instructions






RTG33851-3P SOFA






Manufactured by VIOL for Room To Go

SKU#14133867/14133855
14133879/14133881

TOOLS REQUIRED: SCREWDRIVER


PART LIST

| NO | Description | Item | Quantity |
|----|-----------------|---|----------|
| A | Backrest |  | 1 |
| B | Seat |  | 1 |
| C | Tapered leg |  | 4 |
| D | M6*25 screw |  | 12 |
| E | Middle wood leg |  | 1 |

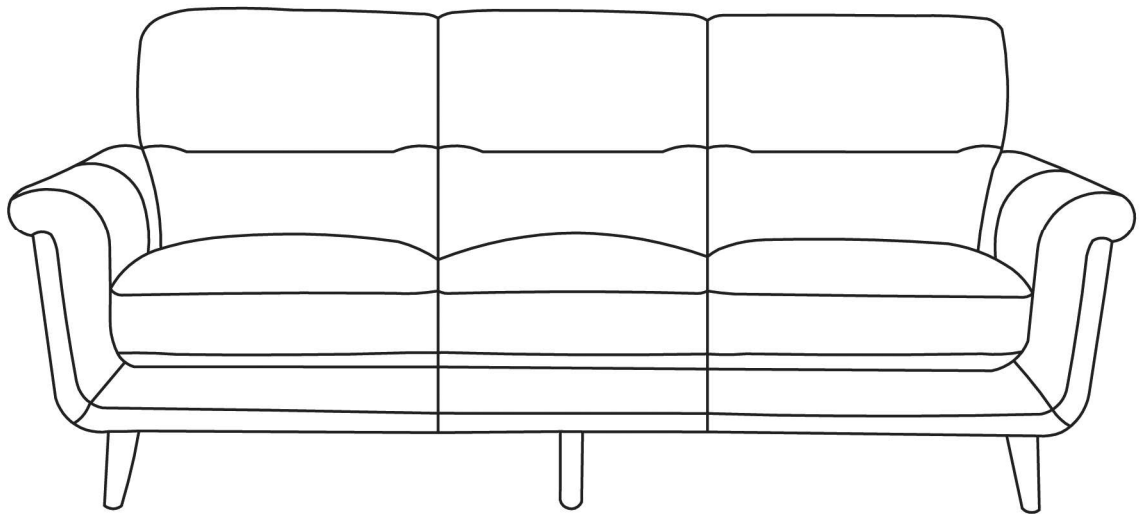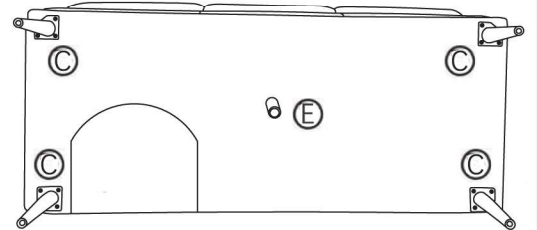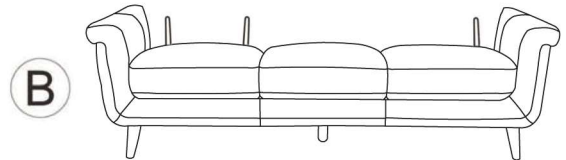


Hardware Pack Locations : Open the zipper at the bottom of the sofa.

SOFA , SKU#14133867/14133855/14133879/14133881

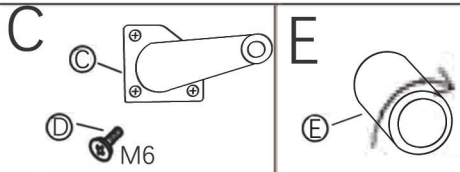


STEP 1:

Please put the sofa upside down, find the sofa legs on the bottom of sofa.

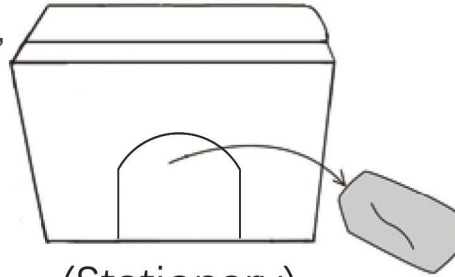

(Stationary)

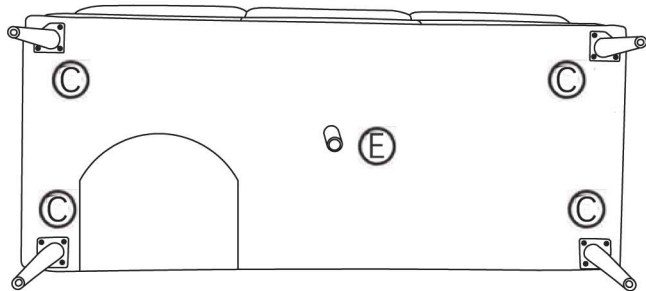

Install all legs accordingly to above instruction:

1)Front & Back leg: Attach the tapered leg (C) into the bottom of produce by using 1 piece M6 screw (D) through the hole. Use screwdriver to tighten the M6 screws (D) clockwise until secure.

2)Central leg: Insert the middle wood leg (E) in to the hole. Use hand to tighten the middle wood leg (E) clockwise until secure.

STEP 2:

Install the Backrest(A) into the Seat (B) by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. push down the female brackets over male posts simultaneously until each side is locked into place an audible "click" is heard. Install all backrests of sectional pieces in the same way described above.

