
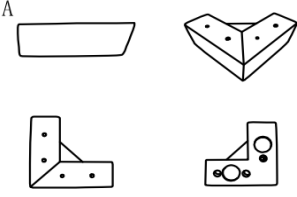


A		Feet	4 pcs
B	 M10 x 60	Bolt	4 pcs
C	 M5 x 50	Wood screw	4 pcs
D		screw driver	(not provided)

Step 1 Flip the sofa over and open the bag on the bottom to get the legs and then install the legs as photo.

