



Assembly Instructions


ST33851 OTTOMAN




Manufactured by VIOL for Room To Go

SKU#14433863/14433851
14433875/14433887

TOOLS REQUIRED: SCREWDRIVER

PART LIST

NO	Description	Item	Quantity
A	Tapered leg		4
B	M6*25 screw		12

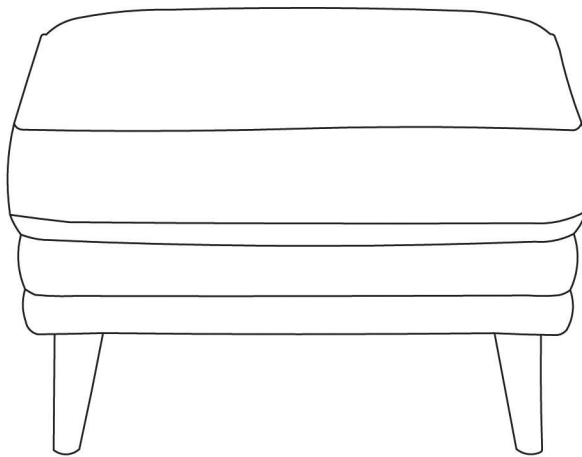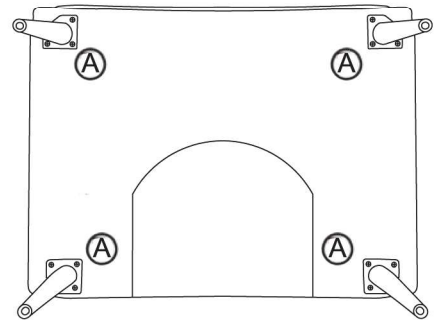

Hardware Pack Locations : Open the zipper at the bottom of the ottoman.

OTTOMAN , SKU#14433863/14433851/14433875/14433887




Assembly Instructions

ST33851 OTTOMAN



Manufactured by VIOL for Room To Go

SKU#14433863/14433851
14433875/14433887

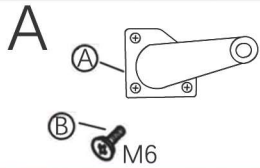

STEP 1:

Please put the ottoman upside down, find the ottoman legs on the bottom of ottoman.

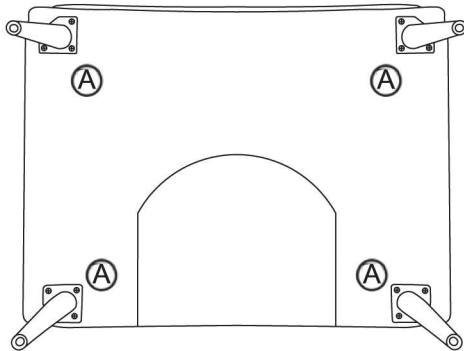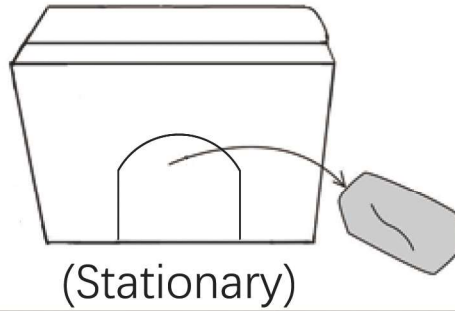

Install all legs accordingly to above instruction:

Front & Back leg: Attach the tapered leg (A) into the bottom of produce by using 1 piece M6 screw (B) through the hole.

Use screwdriver to tighten the M6 screws (B) clockwise until secure.