


Assembly Instructions




SWSU 1123 PWR RECLINING SOFA

Manufactured for Rooms To Go

SKU#11011234
 SKU#15011238
 SKU#15011240
 SKU#15011252
 SKU#15011264
 SKU#15011276

No	Description	Hardware	Q'TY
A	Stud M8 X 90mm		4 Pcs
B	M8 x 32mm Diameter Thread Clamping Star knob		4 Pcs
C	Left Arm Pillow		1 Pc
D	Right Arm Pillow		1 Pc
E	Left Backrest		1 Pc
F	Center Backrest		1 Pc
G	Right Backrest		1 Pc
H	Seat		1 Pc
I	Transformer/ Power Cord		1 Pc

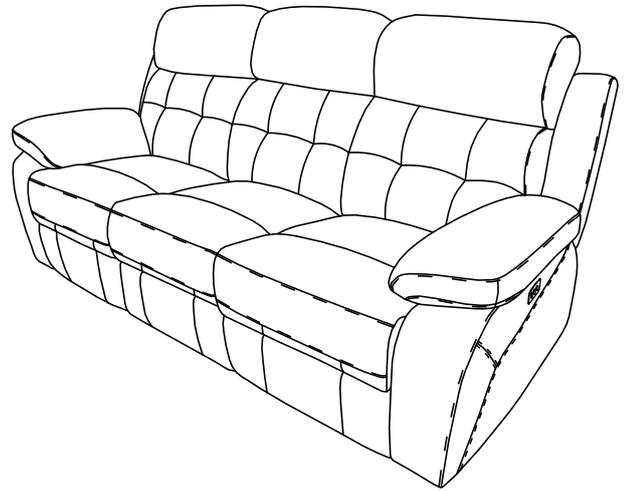



Assembly Instructions

SWSU 1123 PWR RECLINING SOFA

Manufactured for Rooms To Go


SKU#11011234
SKU#15011238
SKU#15011240
SKU#15011252
SKU#15011264
SKU#15011276

*****Caution:** Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

Step 1:


*Connect the power cord, Push the button to open the seat.

*Take out the part C & D from bottom.

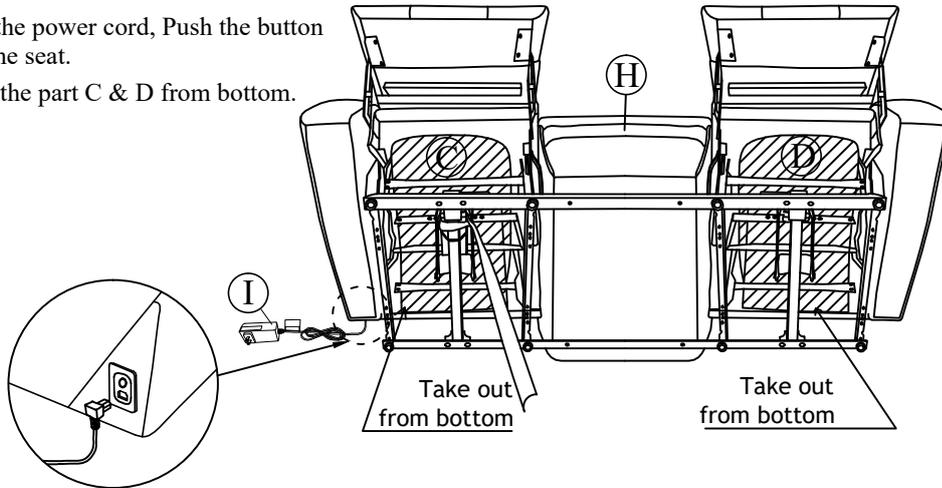


Step 2:

*Remove part B from part A.

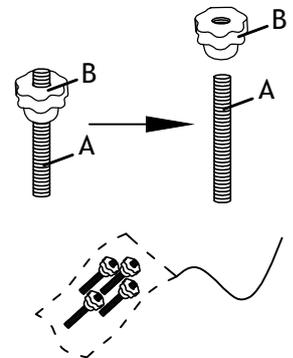

Step 3:


*Install part A into the arm pillow.

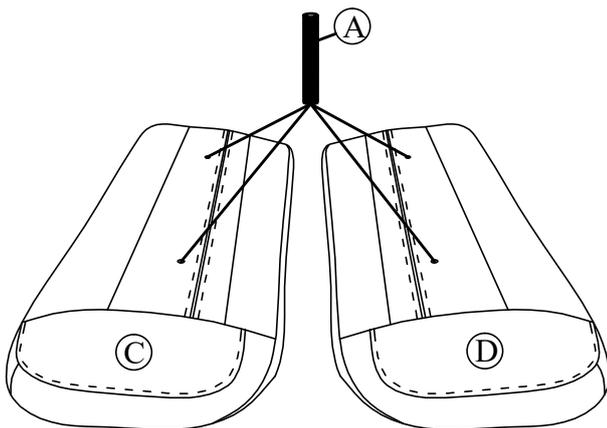

Step 4:

i Place the arm pillow Right into the arm rest.

ii Tight up part A with part B.

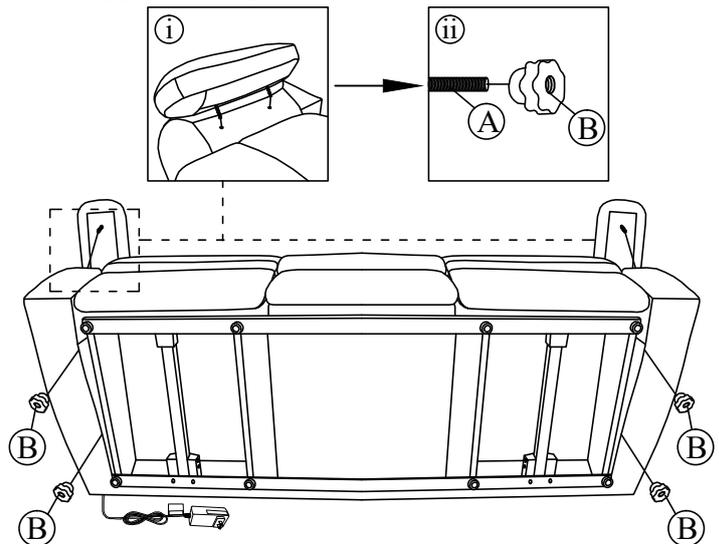



Manufactured for Rooms To Go

Assembly Instructions


SWSU 1123 PWR RECLINING SOFA

SKU#11011234
SKU#15011238
SKU#15011240
SKU#15011252
SKU#15011264
SKU#15011276


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.

Step 5:

*Install the backrest E,F,G by positioning the female metal receiver bracket over the male metal posts.

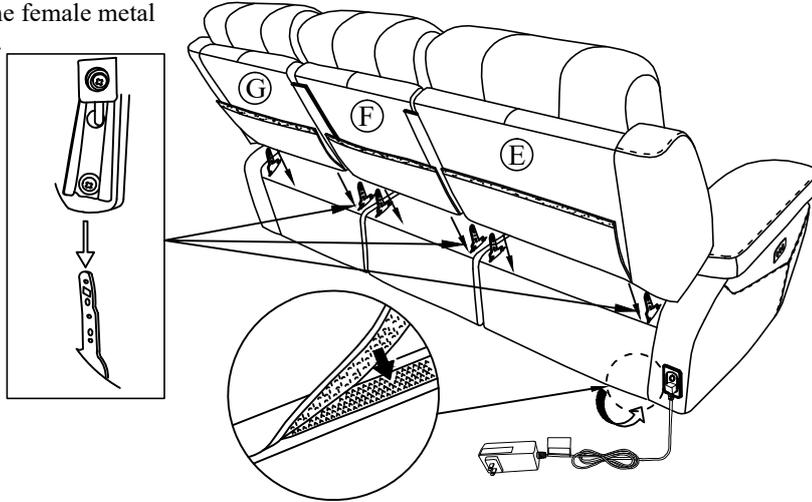

Step 6:

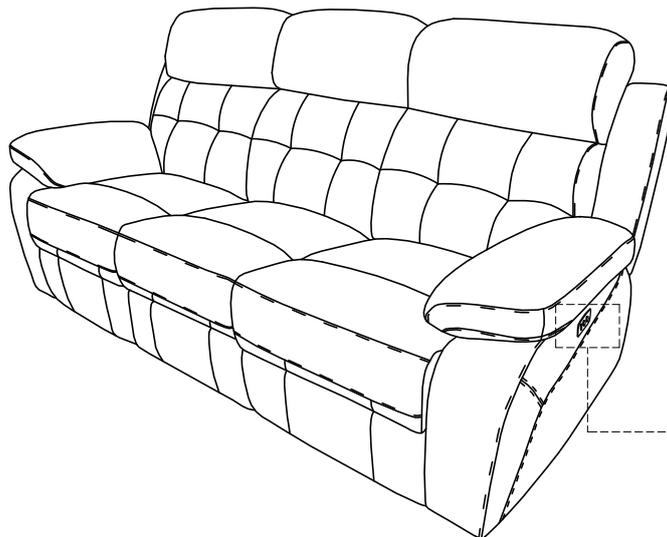

Push the button for operate 