


Assembly Instructions




SWSU 1123 NON-PWR RECLINING SOFA

SKU#1111236
 SKU#1511230
 SKU#1511242
 SKU#1511254
 SKU#1511266
 SKU#1511278

Manufactured for Rooms To Go

No	Description	Hardware	Q'TY
A	Stud M8 X 90MM		4 Pcs
B	M8 x 32mm Diameter Thread Clamping Star knob		4 Pcs
C	Left Arm Pillow		1 Pc
D	Right Arm Pillow		1 Pc
E	Left Backrest		1 Pc
F	Center Backrest		1 Pc
G	Right Backrest		1 Pc
H	Seat		1 Pc

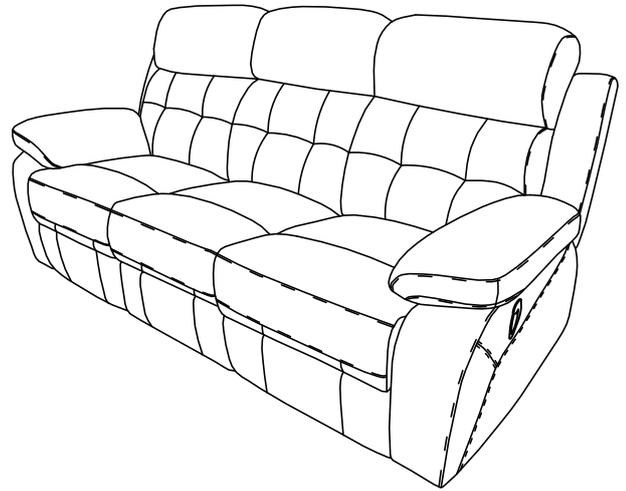



Manufactured for Rooms To Go

Assembly Instructions


SWSU 1123 NON-PWR RECLINING SOFA

SKU#1111236
SKU#1511230
SKU#1511242
SKU#1511254
SKU#1511266
SKU#1511278

*****Caution:** Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and insure the parts are not damaged during the assembly.


Step 1:

*Take out the part C & D from bottom.

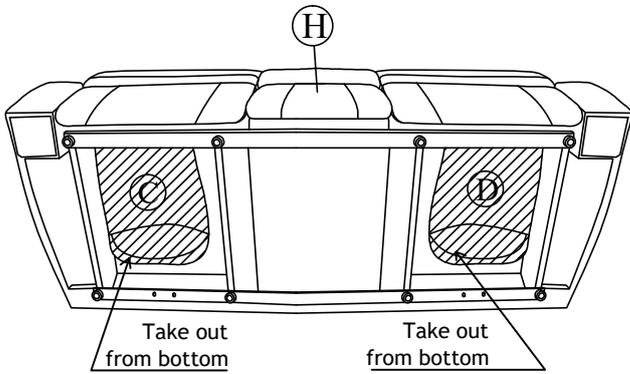


Step 2:

*Remove part B from part A.

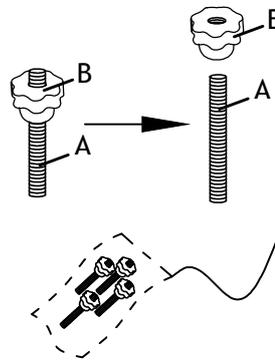



Step 3:

*Install part A into the arm pillow.

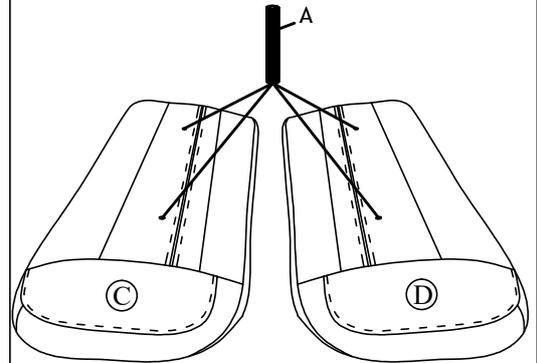

Step 4:

- i Place the arm pillow Right into the arm rest.
- ii Tight up part A with part B.

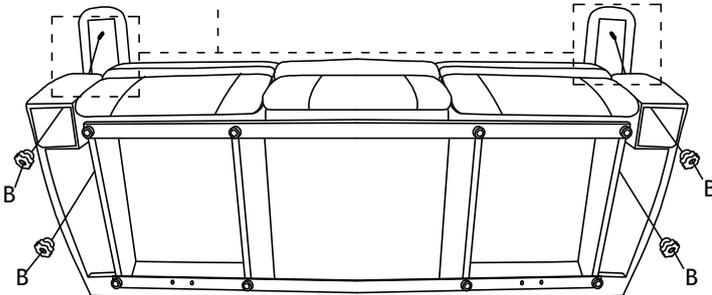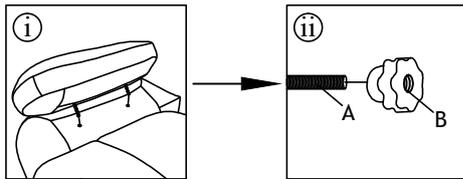

Step 5:

*Install the backrest E,F,G by positioning the female metal receiver bracket over the male metal posts.

