










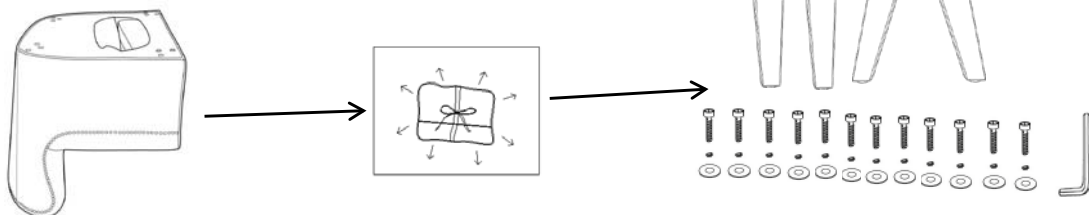
MADISON PARK

Assembly Instruction---Accent Chair


PARTS #	PARTS NAME	DRAWING	QTY
P1	Front Legs		2
P2	Right Back Leg		1
P3	Left Back Leg		1
P4	Chair		1
P5	Seat Cushion		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts φ5/16*1-8/16"		12
H2	Lock Washers φ5/16"		12
H3	Flat Washers φ5/16"		12
H4	Allen Wrench φ5/16"		1

1. Turn the chair upside down and lay on protective carpet, Open the black fabric of the bottom, and take out the legs underneath the seat.



2. Attached the Legs to the seat frame by using Flat Washers (H3), Lock Washers(H2) and Bolts (H1). Securely tighten all bolts with Allen Wrench (H4). P1 P2 P3

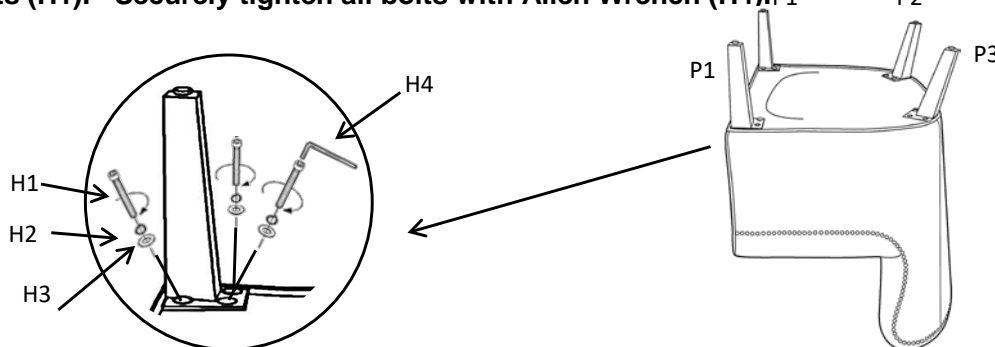

3. Turn the chair over and place it upright on a level surface, put the seat cushion on the chair.

