

MADISON **PARK**


ASSEMBLY INSTRUCTION— Accent Chair

Parts#	Parts Name	Drawing	Qty
P1	Seat		1
P2	Wood front legs		2
P3	Wood back legs		2
H1	Bolts(size:55*8mm)		8
H2	Flat Washers		8
H3	Allen wrench		1
H4	Spring washers		8

Step 1. Turn the chair upside down and lay on protective carpet
Open the black fabric of the bottom,and take out the legs underneath the seat.



Step 2: Insert the front legs(P2) and back legs (P3)into the Seat (P1) bottom, Lock legs by using Flat washers (H2) and spring washer(H4) and bolts (H1). Then tighten the bolts with allen wrench (H3).

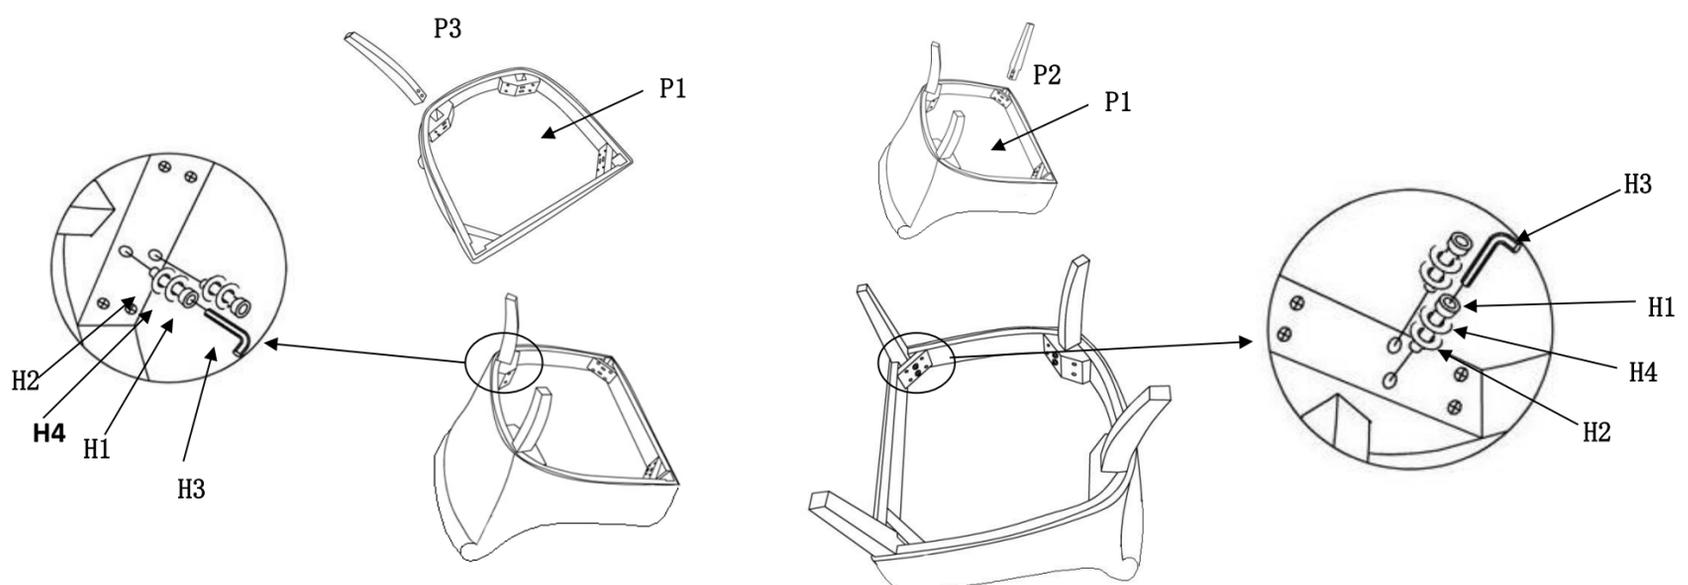

Step 3:Close the black fabric of the bottom,Turn the chair over

