










Assembly Instruction--Anna Arm Accent Chair


PARTS #	PARTS NAME	DRAWING	QTY
P1	FRONT LEGS		2
P2	BACK LEGS		2
P3	CHAIR		1
P4	SEAT CUSHION		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts φ5/16*1"		8
H2	Lock Washers φ5/16"		8
H3	Flat Washers φ5/16"		8
H4	Allen Wrench φ1/4"		1

1. Turn the chair (P3) upside down and lay on protective carpet, open the black fabric on bottom and take **out** the legs and hardware .

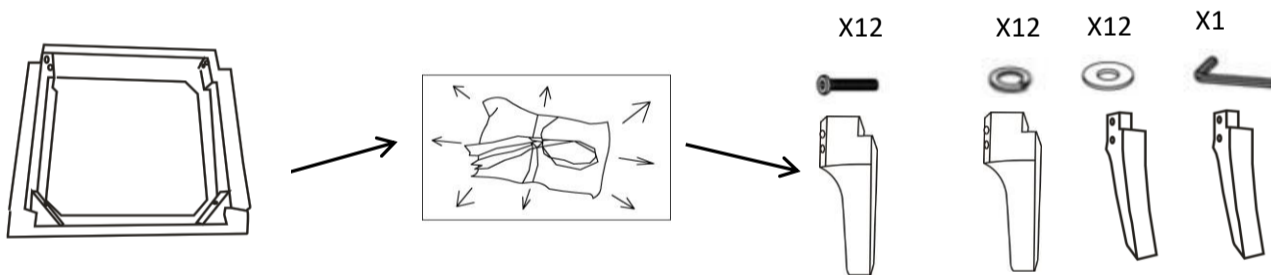

2. Using bolts (H1), lock washers (H2), flat washers (H3) to connect legs (P1, P2) to chair (P3). Tighten bolts (H1) with Allen Wrench (H4).

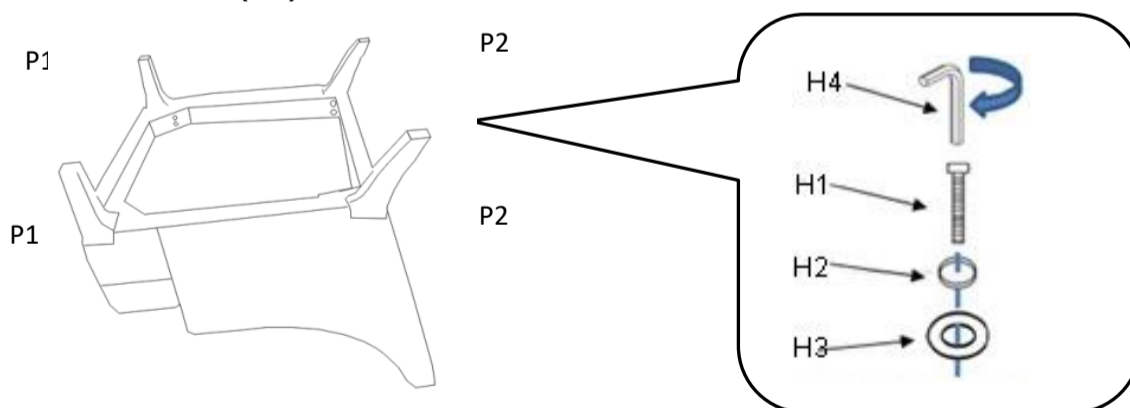

3. Place the chair upright on a level surface, put the seat cushion (P4) on it .
Assemble is complete.

