



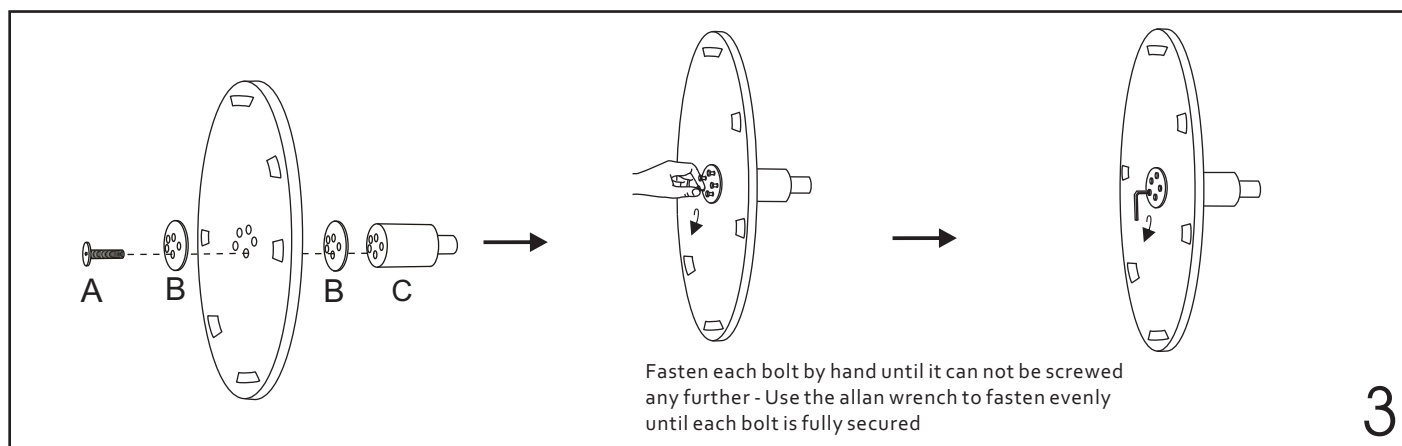


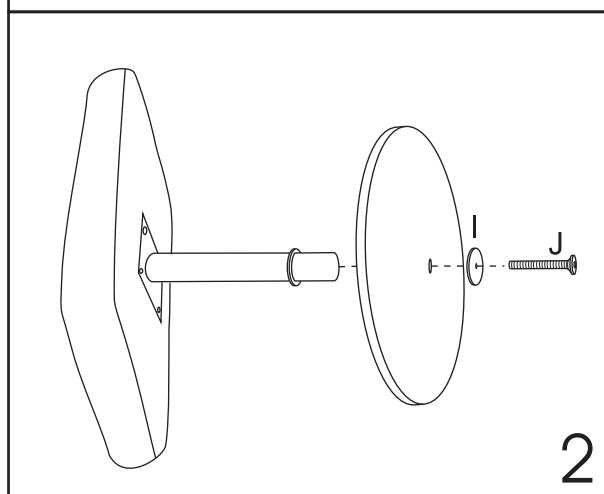




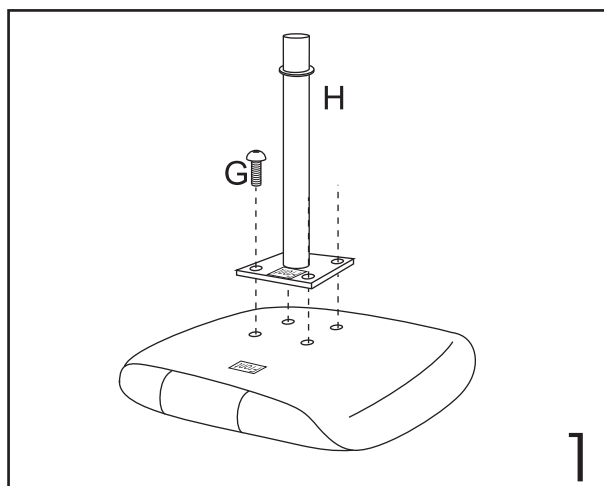


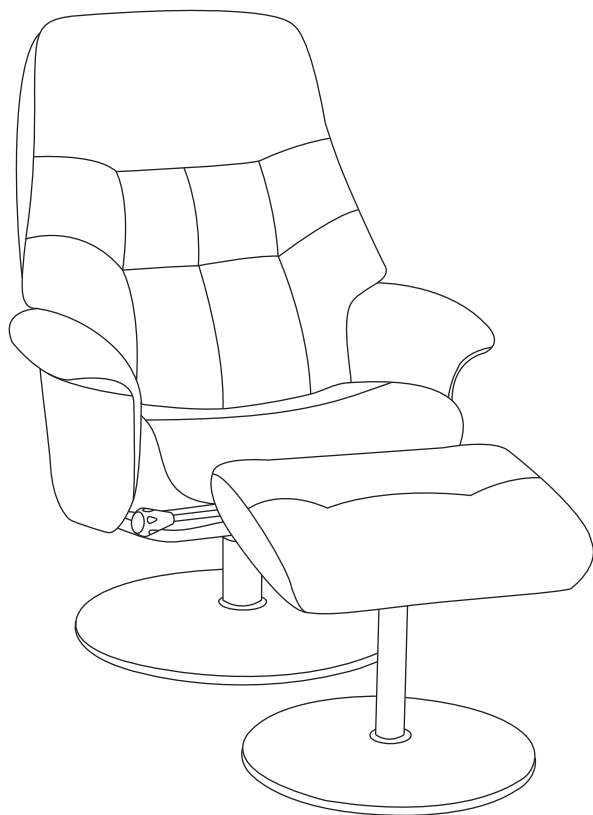



S7667




A	 M8X50	5PCS	E	 M6X20	6PCS	I		1PC
B		2PCS	F		1PC	J	 M6X45	1PC
C		1PC	G	 M6X20	4PCS	K		1SET
D	 M8X35	3PCS	H		1PC			



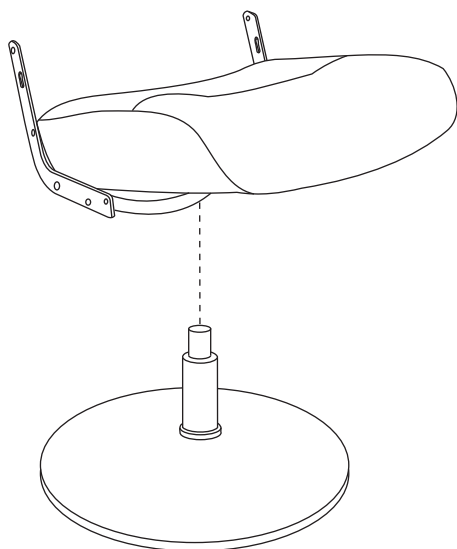
4

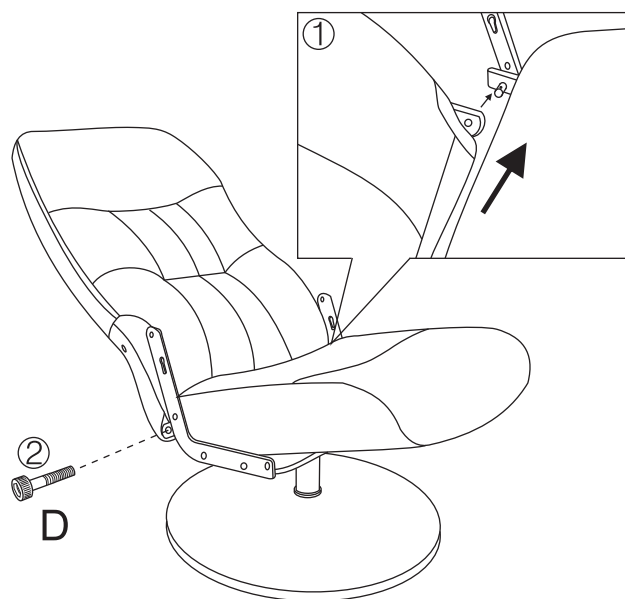

5


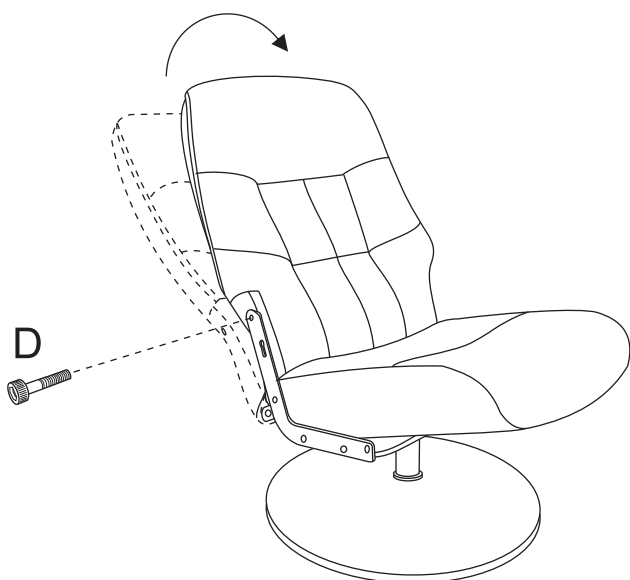


6

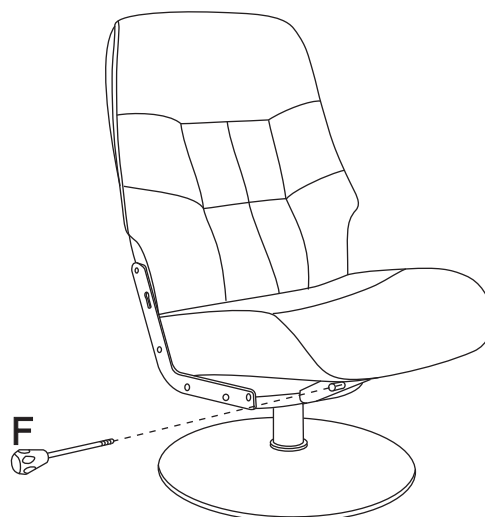


7

**\*\*It's more easy to assemble the armrests if you put the chair in recline position**

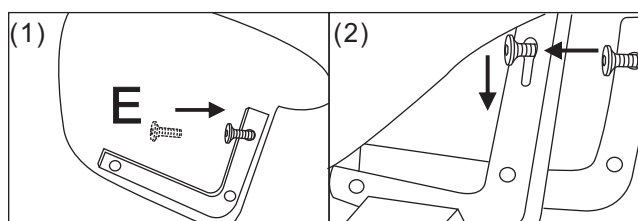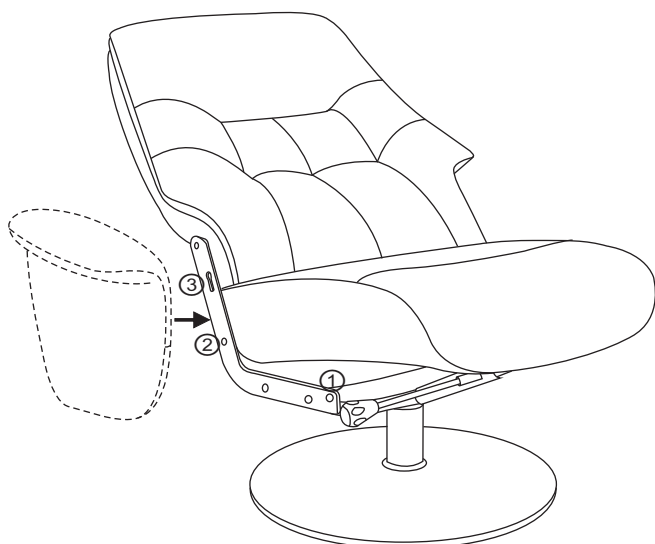

1. Insert bolt [E] into hole of arm pad as shown on diagram (1), do not tighten yet. Hang the armrest to chair frame as shown on diagram (2)

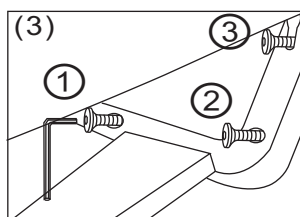

2. Insert the other 2 bolts and tighten them sequentially as shown on diagram (3)

8