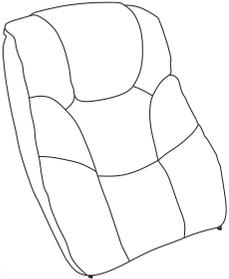
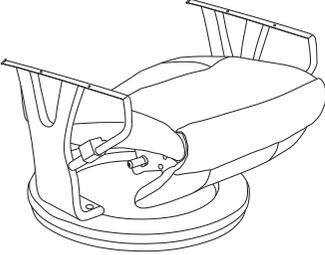
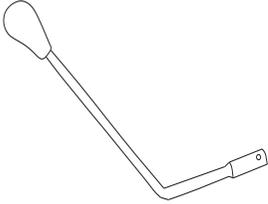
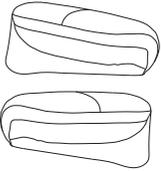





# Caprice



 <p><b>1</b> U1 complete back</p>	 <p><b>2</b> UW2 complete seat</p>	 <p><b>3</b> M3 handle</p>
 <p><b>4</b> U4 arm set</p>	<p>Individual seat parts - W2a wood arm set &amp; mech W2b wood base ring M2c base ring M2d reclining knob</p>	<p>M-10 hardware kit</p>
<p>M5 bolts</p>  <p><b>A</b> M6*22 4pcs</p>	<p>M6 bolts</p>  <p><b>B</b> M8*25 2pcs</p>	<p>M7 bolts</p>  <p><b>C</b> M8*70 2pcs</p>
<p>M8 bolts</p>  <p><b>D</b> M6*18 2pcs</p>	<p>M9 allen wrench</p>  <p><b>E</b> M6</p>	<p>M10 allen wrench</p>  <p><b>F</b> M8</p>

**1**


Take out all the chair parts from the carton.  
Tape the empty carton. Use the empty carton as a platform to assemble the chair

**2**


3

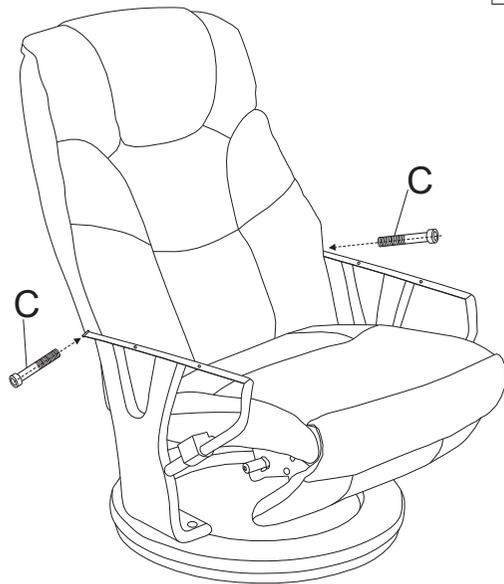

4

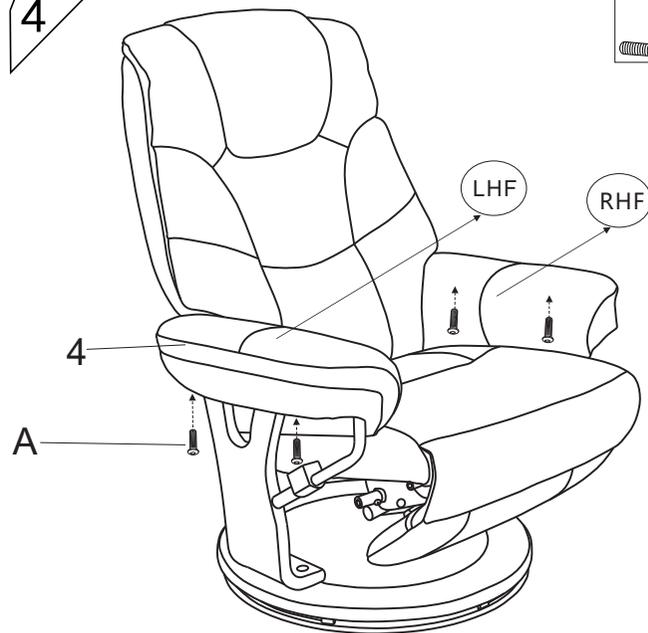


5

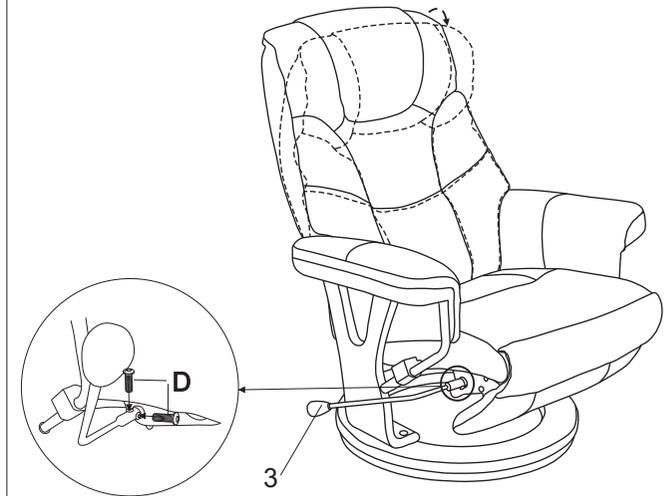

The headrest can be adjustable by pressing forward.

6

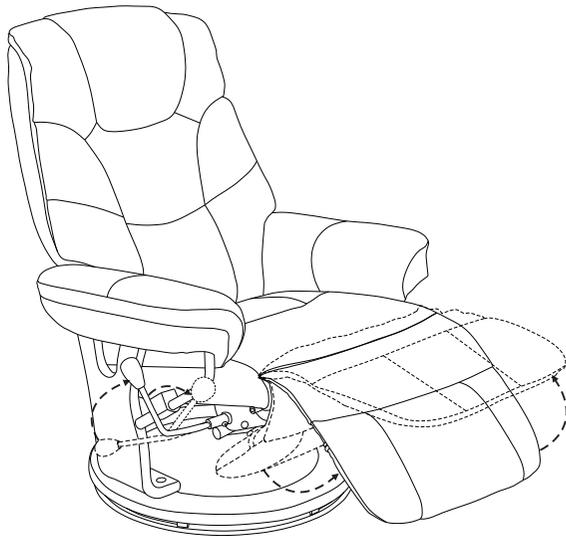

Push the handle forward to make sure the footrest is horizontally open before you want the footrest folded back totally.

7



Push the handle forward to open the footrest .