


Assembly Instructions

Manufactured by HSFN for
Rooms to Go

HSFN Brenner Pushback Recliner

SKU #s 18516077 & 18516089

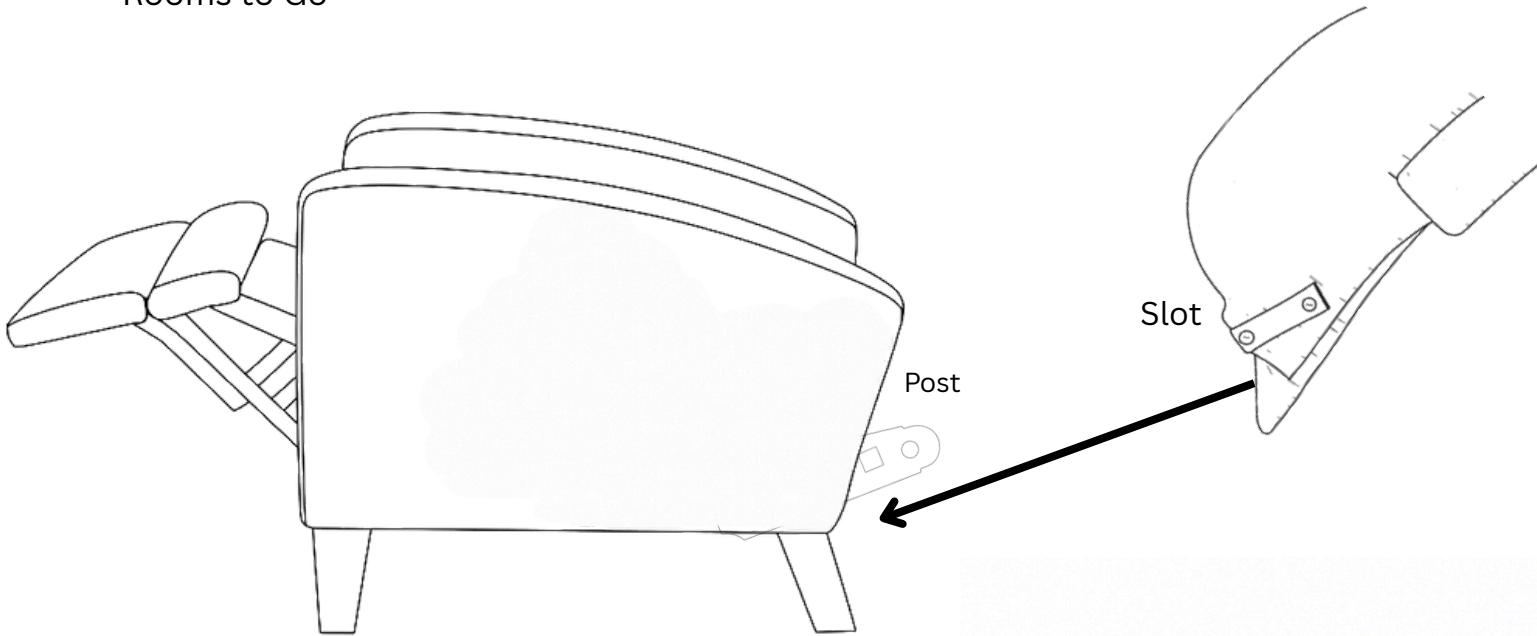

1. Inspect the Brackets

Look at the metal brackets (or “back posts”) on each side of the recliner base.

You’ll see male and female parts:

The female slots are built into the back.


The male posts (are on the body of the chair).

2. Align the Back

Stand behind the chair.

It is easier to put the back on with the chair open.

Make sure both brackets on the back are lined up evenly over the posts on the body.

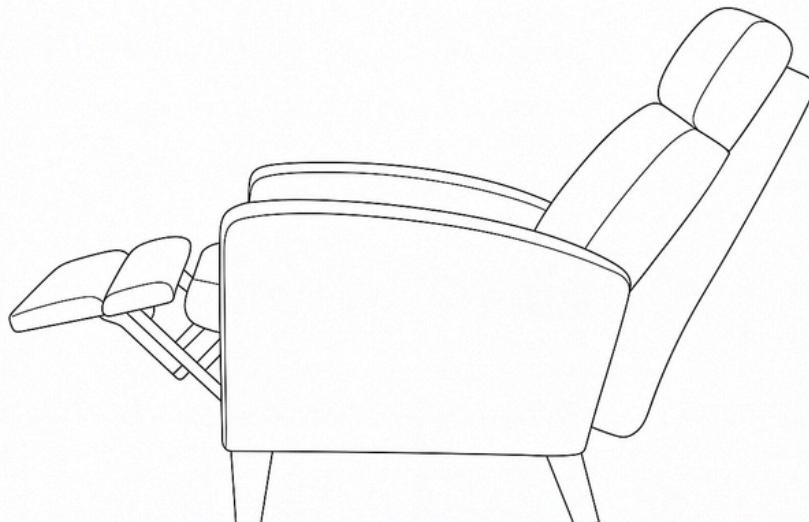

3. Slide the Back Down

Push straight down firmly on both sides at the same time.

You should feel or hear a click when both sides seat fully into the locking mechanism.

If one side feels higher, lift it back off slightly and try again – it must go in evenly.