

# ASSEMBLY INSTRUCTIONS

## Description: Lounge Chair

**Important safety instructions:**


- Please carefully read all instructions before assembling the lounge chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

**Pre-assembly:**

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

Item	Description	QTY
A	Right Arm 	1
B	Left Arm 	1
C	Seat Cushion 	1
D	Back Cushion 	1
E	Front Stretcher 	1

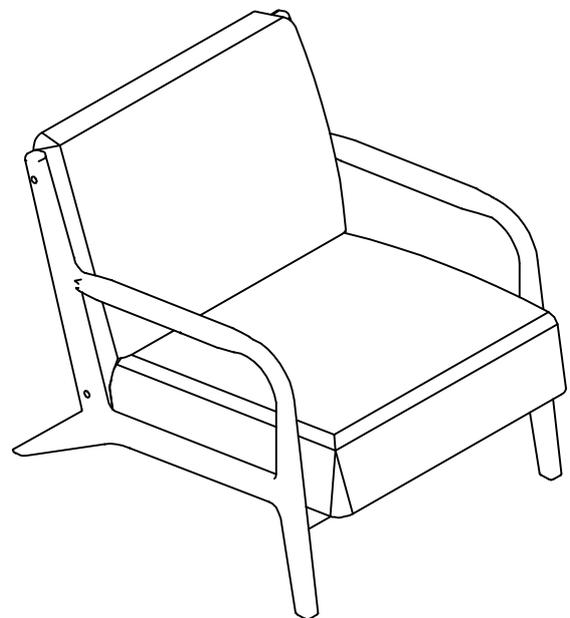


**Hardware List**


Item	Description	QTY
a	Bolts Ø1/4"×1-3/4" 	8
b	Bolts Ø1/4"×2-1/2" 	2
c	Lock Washers 1/4" 	10
d	Big flat washers 1/4" (22mm) 	6
e	Small flat washers 1/4" (12mm) 	4
f	Allen Wrench 1/4" 	1
g	Wooden Plugs 	4
h	Screws 8#×1-1/2" 	2

**Assembly Procedures:**


Step 1. Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Open the bottom covering, then loosely attach seat cushion (C) to back cushion (D) using bolts ( b ), lock washers ( c ) and big flat washers ( d ). Loosely tighten by Allen wrench ( f ) .

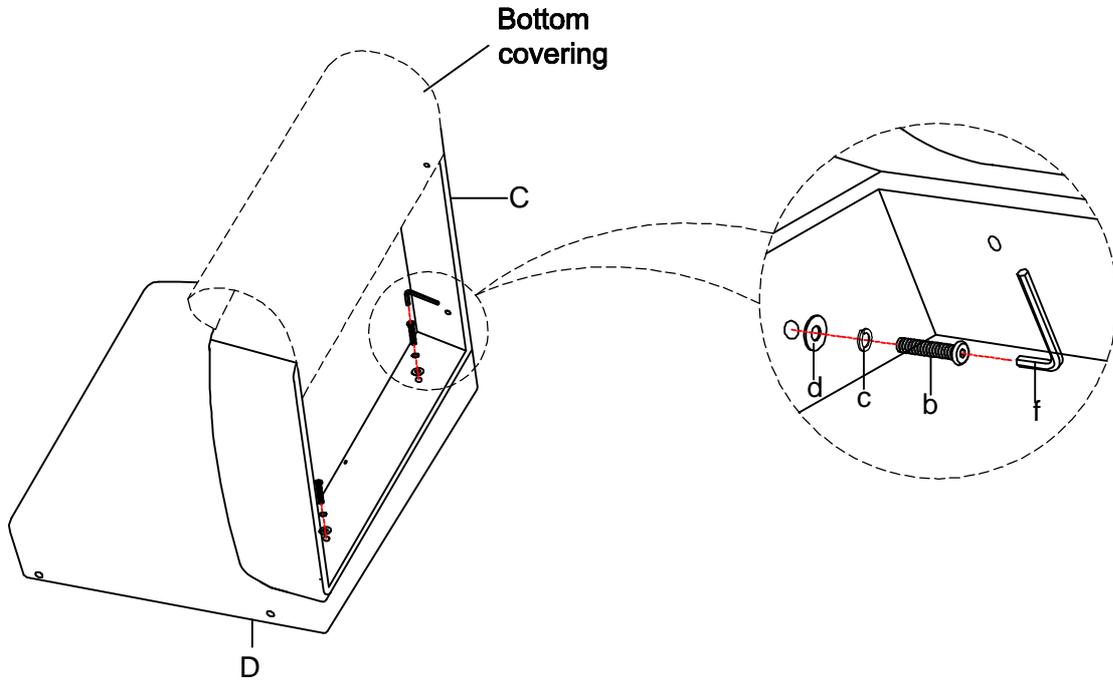


Step 2. Attach left arm (B) to seat cushion (C) and back cushion (D) using bolts ( a ), lock washers ( c ) and flat washers ( d,e ) according to the label "L" on the left arm (B) and the side of seat cushion (C) and back cushion (D). Loosely tighten by Allen wrench ( f ) as shown below.

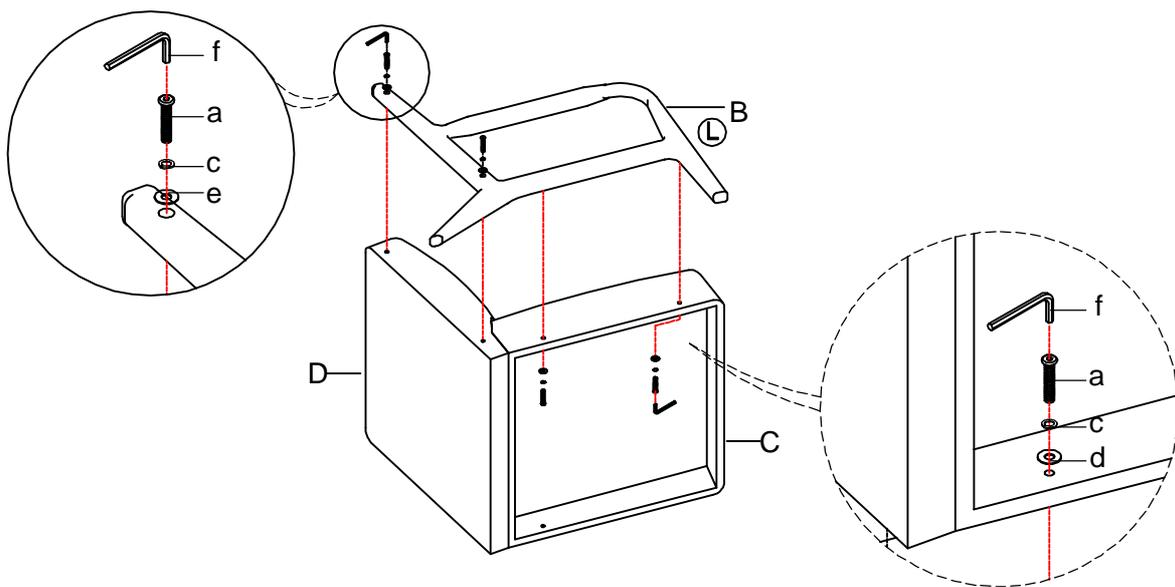


**Step 3.** Insert front stretcher (E) to left arm (B) with two located dowels. Note: the front stretcher (E) with screw holes should be face down. Attach right arm (A) to the front stretcher (E), seat cushion (C) and back cushion (D) using bolts (a), lock washers (c) and flat washers (d,e) according to the label "R" on the right arm (A) and the side of seat cushion (C) and back cushion (D). Securely tighten all bolts by Allen wrench (f).

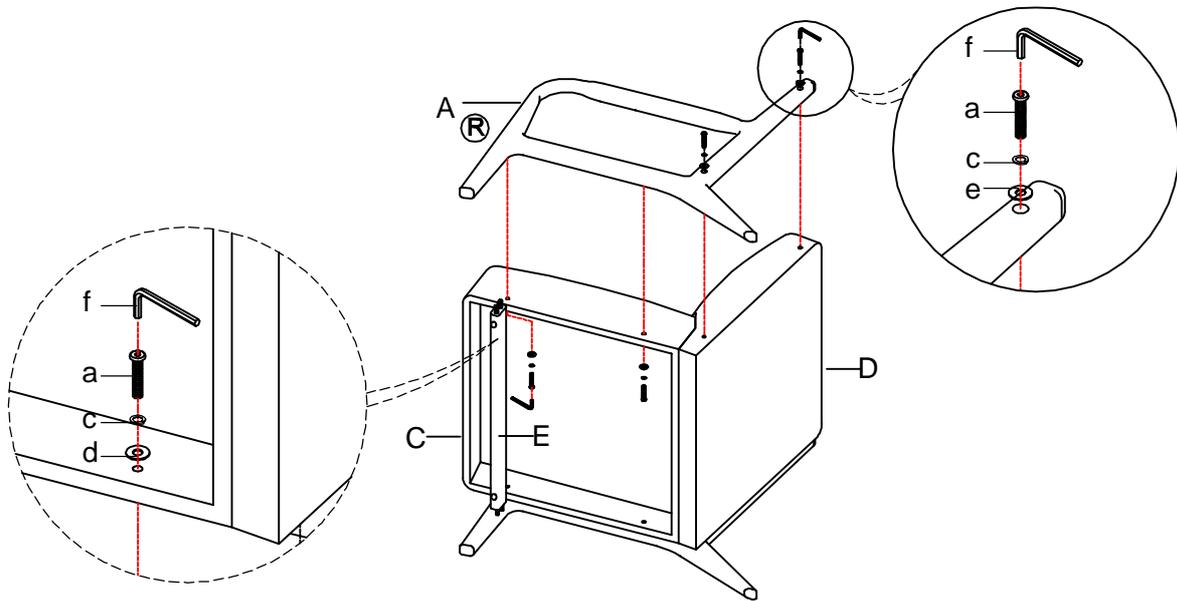

**Step 4.** Tighten screws (h) through the front stretcher (E) to the right arm (A) and left arm (B) with screwdriver (not provided).

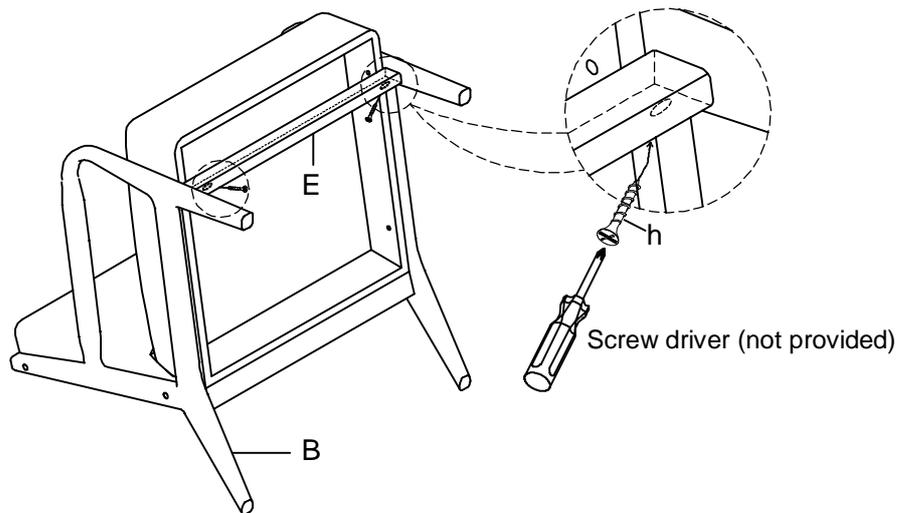

**Step 5.** Securely tighten all bolts by Allen wrench (f). Attach wooden plugs (g) to each bolt hole, tighten with rubber hammer to knock the wooden plug till its tighten. Note: use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish. Assembly is complete.

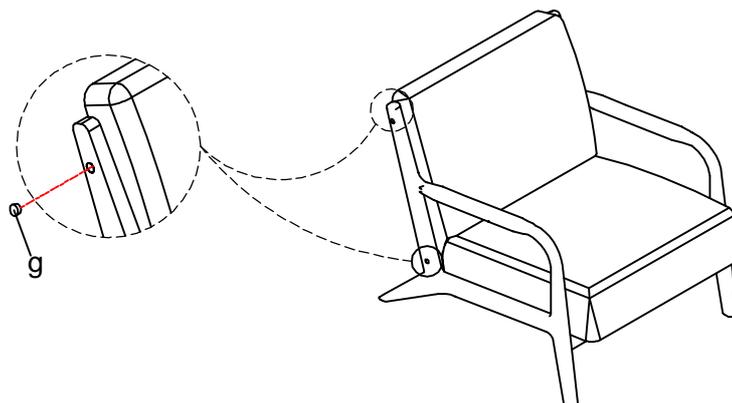

**Thank you for your purchase**