


# W010 wooden frame instrucion

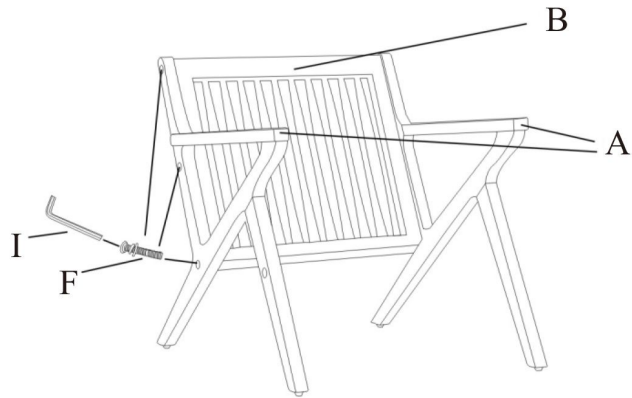


First, assemble the armrest A and backrest B  
(use spareparts: screws F& wrench I)

● step1




Please remove the corner fittings and install them a little bit to ensure that they can be mounted on the seat board C.

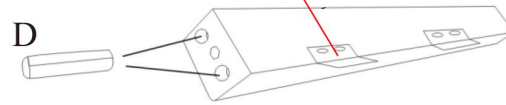

Insert the wood chips D into the crossbar E

● step2

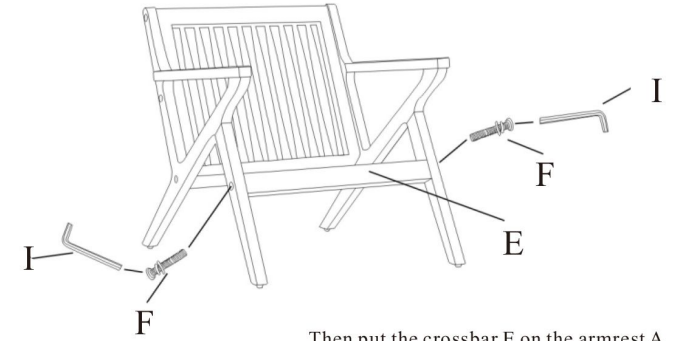


Then put the crossbar E on the armrest A  
(use spareparts: screws F& wrench I)



● step3

A		2PCS
B		1PC
C		1PC
D		4PCS
E		1PC
F		8PCS
G		8PCS
H		3PCS
I		1PC
J		8PCS

To install the seat board C, we need to lock the screws G(short one) & screws H(long one) under the chair, so we need to turn the chair upside down to lock the screw.

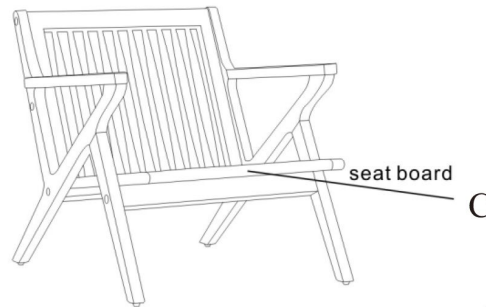

● step4 turn over the sofa, put the screws from the bottom

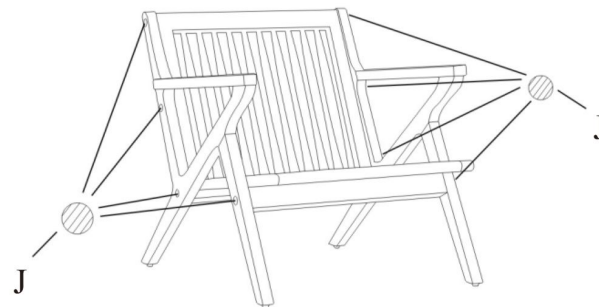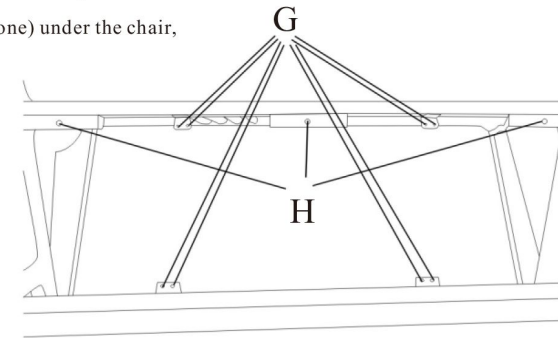

● step5 put the cover into each hole slightly

## Remarks:

1. Pls don't put the cover completely into the hole, it shows like a cap.
2. Pls put the cushions on when you finish the wooden frame.
3. Last step, enjoy your handwork, take a coffee!