



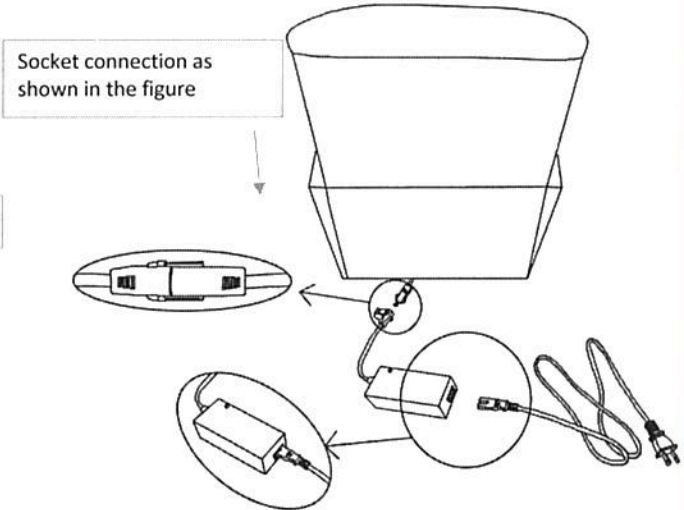

ASSEMBLE INSTRUCTION (MM5073)

JINH	MM5073-01PR	POWER RECLINER/BEIGE	177135
	MM5073-01PR	POWER RECLINER/STONE	177029
	MM5073-01PR	POWER RECLINER/BROWN	177130
	MM5073-01PR	POWER RECLINER/RED	177237
	MM5073-01PR	POWER RECLINER/DARK G	177047

SKU#18550738
SKU#18550740
SKU#18550752
SKU#18550764
SKU#18550776

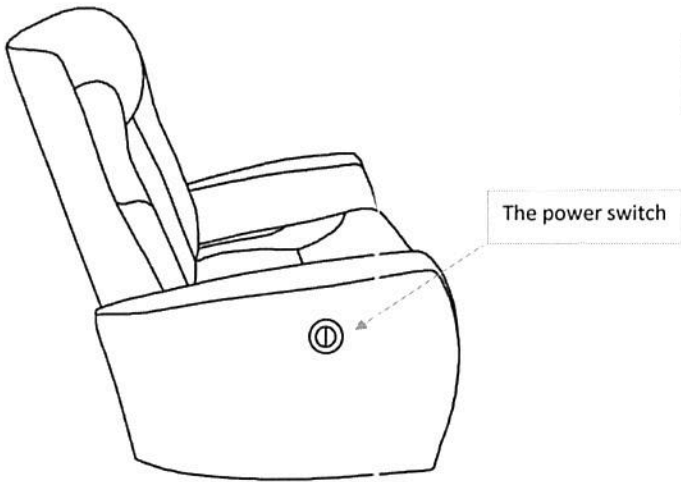

STEP1:

Put the back in place within the brackets/ mettez le dossier en place grâce aux supports métalliques

STEP2:

When fastening the bottom outside back of the sofa pull down firm enough to remove wrinkles and creases and ensure the Velcro is secured in place/Quand vous attachez le dossier arrière, assurez-vous d'appuyer assez fort pour enlever les plis et que le velcro est bien en place.

