
# Item #: IVYL1K

### **Assembly Instructions**

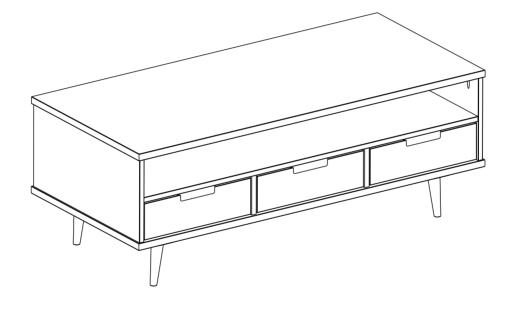




Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com Revised 08/2022

#### **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.



VII. Power tools should not be used to assemble this product.

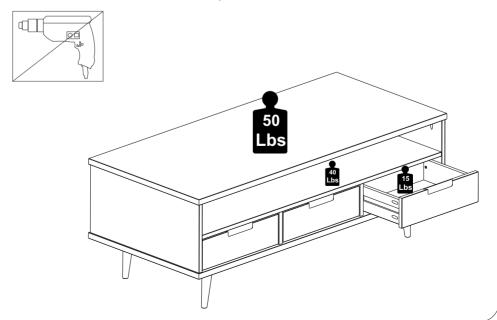

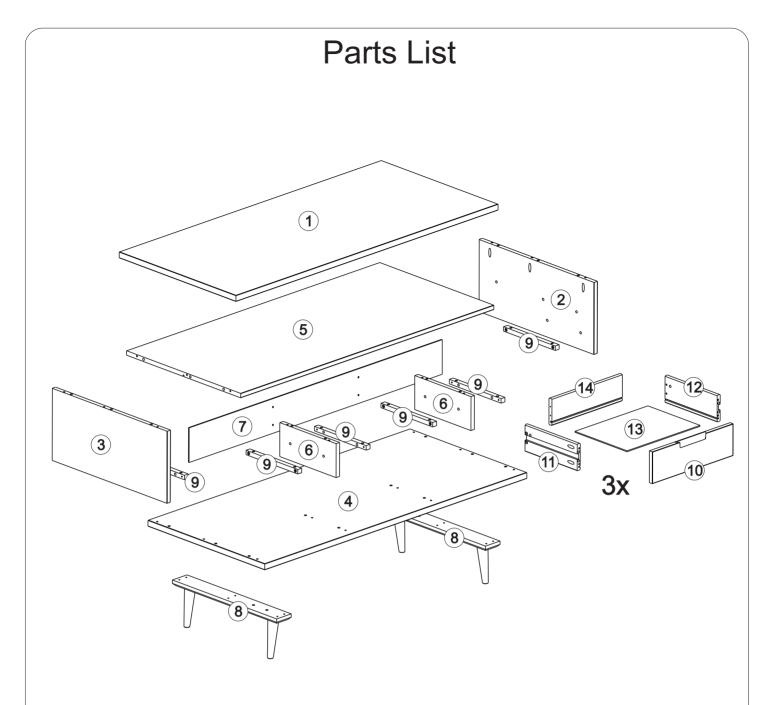

Part#	Description	Qty
1	Top panel	01
2	Right side panel	01
3	Left side panel	01
4	Botom panel	01
5	Shelf	01
6	Division	02
7	Back panel	01

Part#	Description	Qty
8	Foot	02
9	Drawer runner	06
10	Drawer Front	03
11	Left dawer side	03
12	Right drawer side	03
13	Drawer botom	03
14	Drawer back	03

#### Hardware List


Α		Ø8*30mm	Wood dowel	54 pcs
В		Ø8*20mm	Wood dowel	12 pcs
С	(2) DDDDDDDDDDDDD	Ø4,0*25mm	Screw	12 pcs
D	(£2) DDDDDDDDDDDDDDDDDD	Ø3,5*30mm	Screw	40 pcs
Е		Ø4,0*40mm	Screw	22 pcs
F		Ø3,5*14mm	Screw	04 pcs
G			Glue	01 pcs

Tape measure and hammer recommended for assembly (not included)

Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly.

Some extra hardware may also have been included.

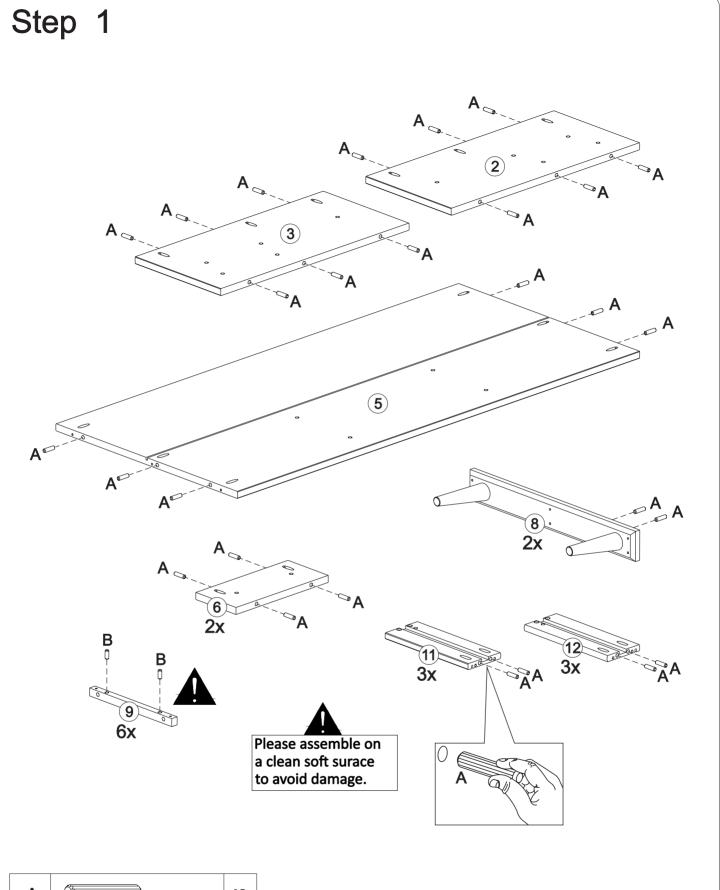


Α	Ø8*30mm	42
В	Ø8*20mm	12
G		01

Insert wood dowel (A) and glue (G) into parts (2,3,5,6,8,11,12). Insert wood dowel (B) and glue (G)into part (9).

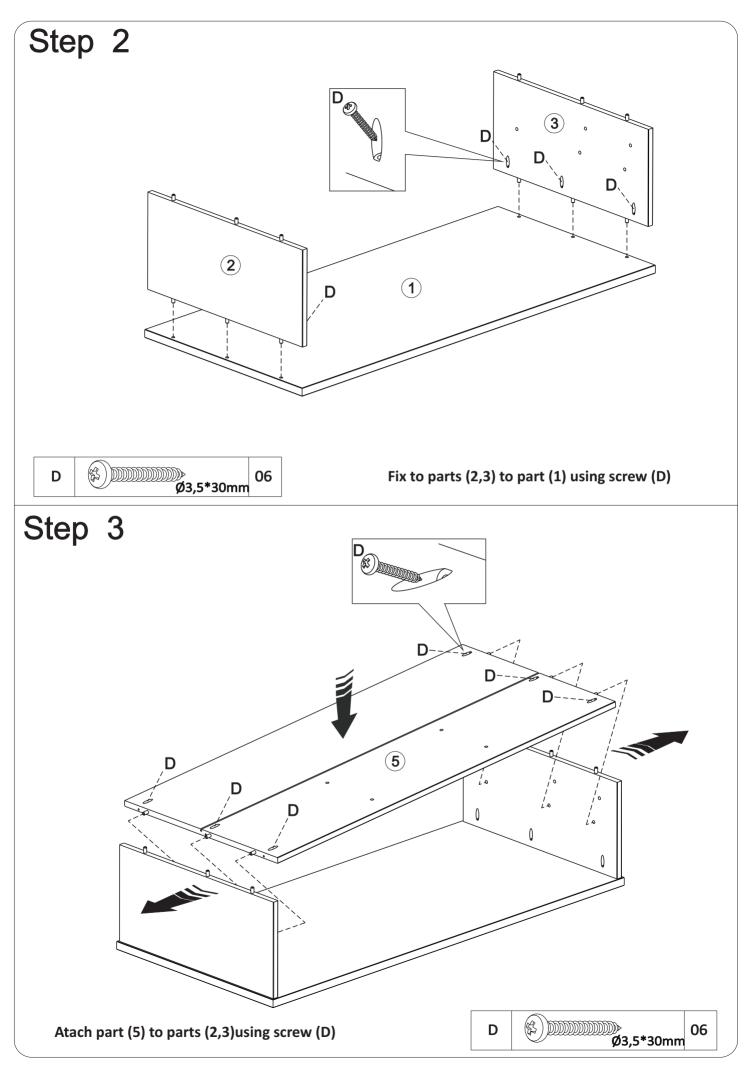


## Step 4

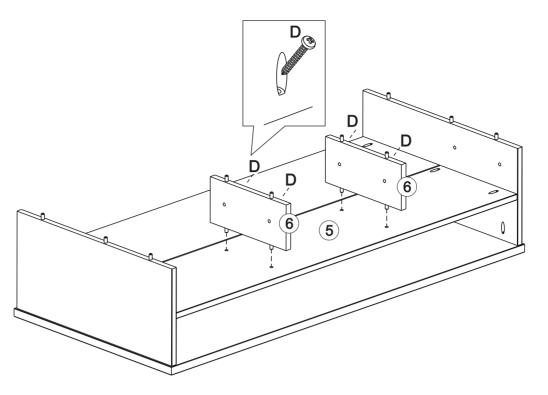

Fix the part (6) to the part (5) using the screw (D)



## Step 5

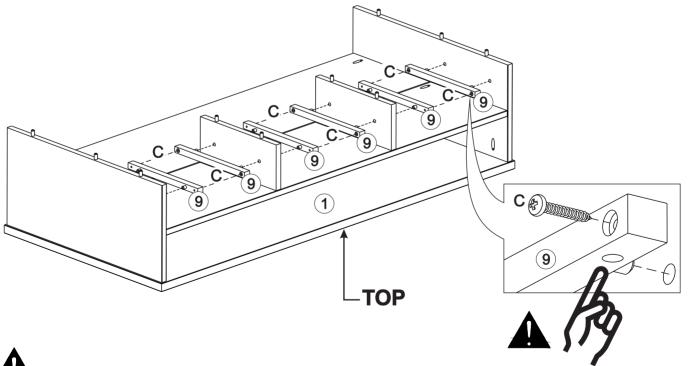



Use screw (C) to secure parts (9) to parts (2, 3) and BOTH sides of parts (6)

NOTE: The extra holes in the part (9) must face the top of the part (2, 3, 6)



