Progressive ® furniture

ASSEMBLE INSTRUCTION

Model No: T256-04 END TABLE





IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be such that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

| PART LIST | | | | | |
|-----------|-------------|-----------|---------|--|--|
| NO | DESCRIPTION | | QTY/PCS | | |
| 1 | | TABLE TOP | 1 PC | | |
| 2 | | CROSS BAR | 1 PC | | |
| 3 | | TABLE LEG | 3 PC | | |

| PART LIST | | | | |
|-----------|-------------|---------------------|---------|--|
| NO | DESCRIPTION | | QTY/PCS | |
| A | | BOLT M8 x 40MM | 6 PC | |
| В | _ | ALLEN KEY M5 x 60MM | 1 PC | |
| С | \Diamond | WOOD BUTTOM | 6 PC | |

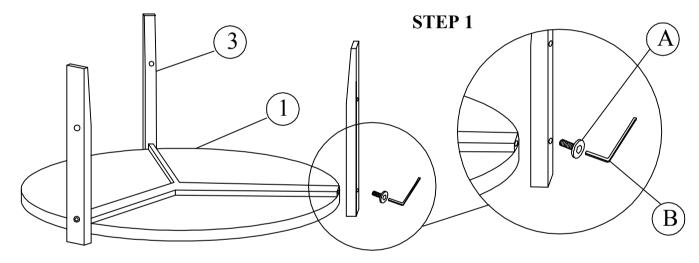

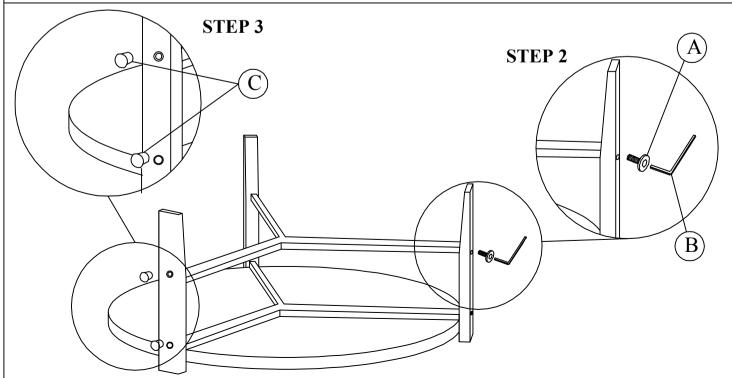

MADE IN MALAYSIA PAGE 1 OF 1