

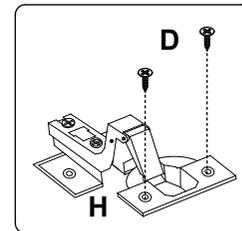


1 Attach the hinge (H) using screws (D).

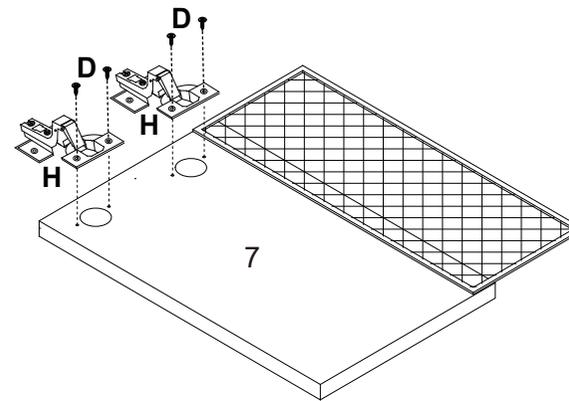


A		4 PCS
B		4 PCS
C		6 PCS
D		8 PCS
E		3 PCS
F		4 PCS
G		4 PCS
H		2 PCS
I		4 PCS
J		1 PC
K		2 PCS
L		12PCS


2 On piece 1, secure the catch (K) using screws (J). Use the pre-drilled holes for guidance.

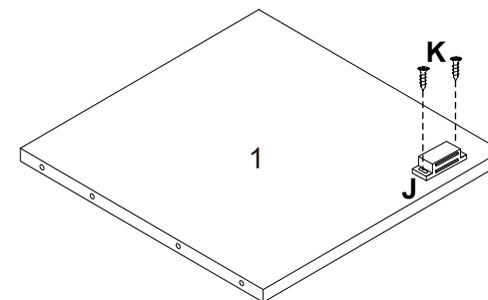


3 Attach piece 4 to piece 1 using screws (C).

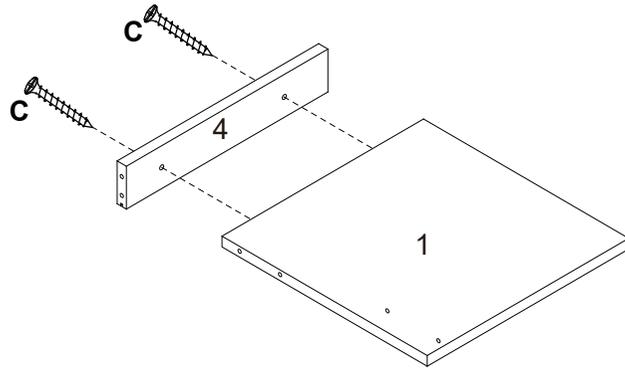


4 Attach piece 2 & 3 using wooden dowels (L), cam dowels (A) and cam locks (B).

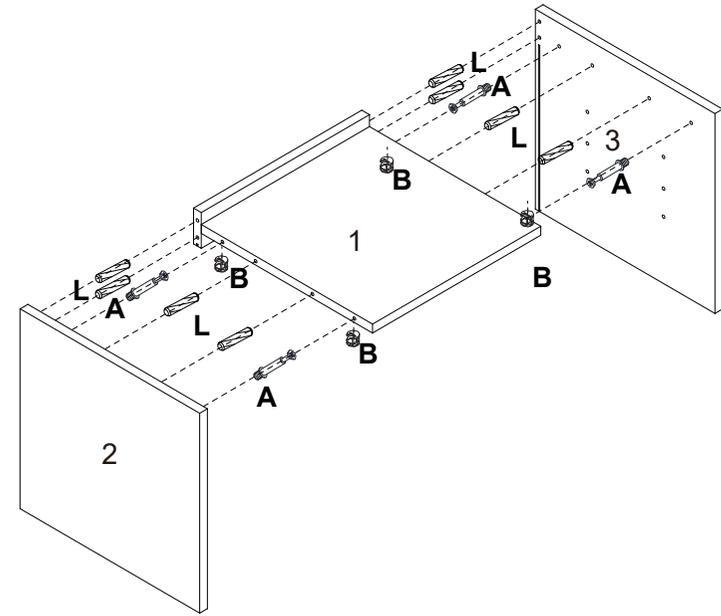


5 Slot piece 8 into the ridges. Attach piece 6 to the unit using wooden dowels (E), screws (L).

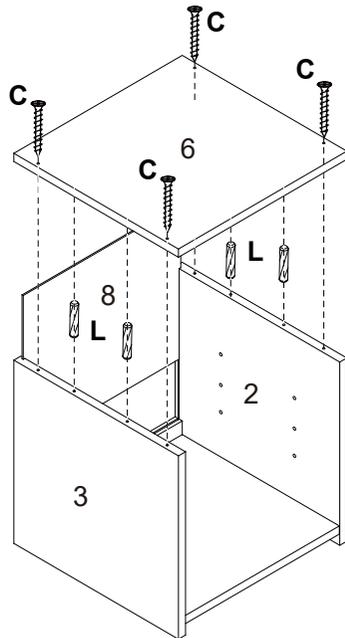


6 Attach piece 10 to piece 11 using screw (F) as shown.

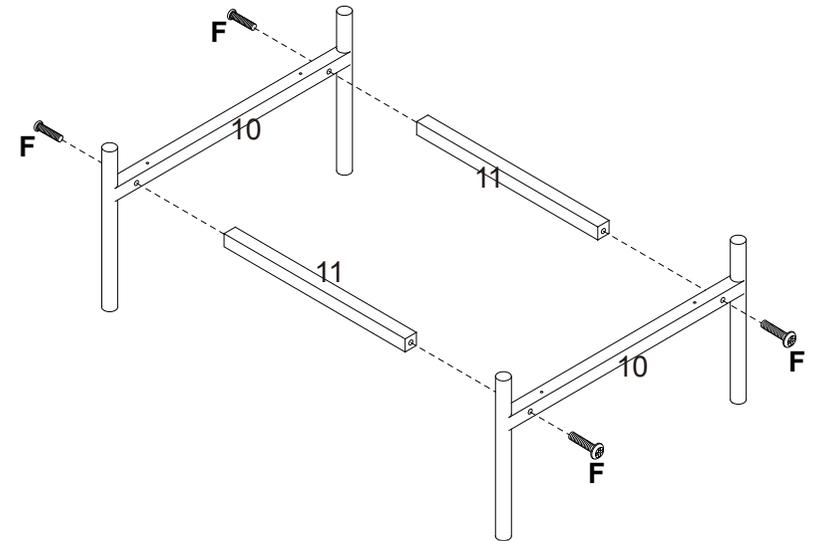


7 Attach 2 section using screw (G).

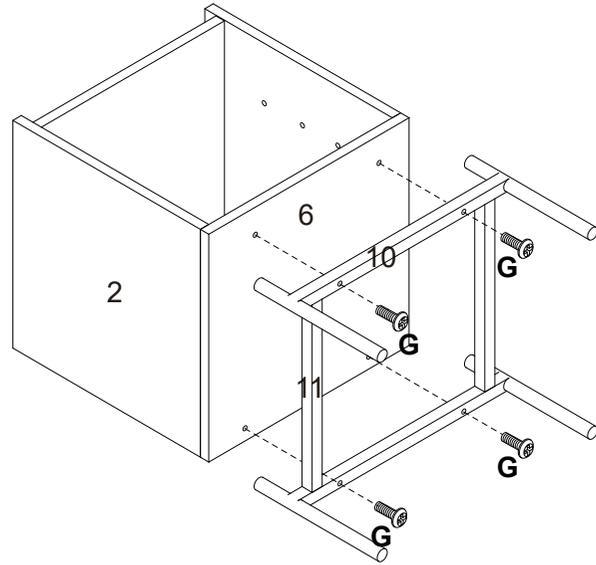

8 Attach piece 7 to unit using screws (D), adjust the hinge (H) as shown to ensure the door in right position.

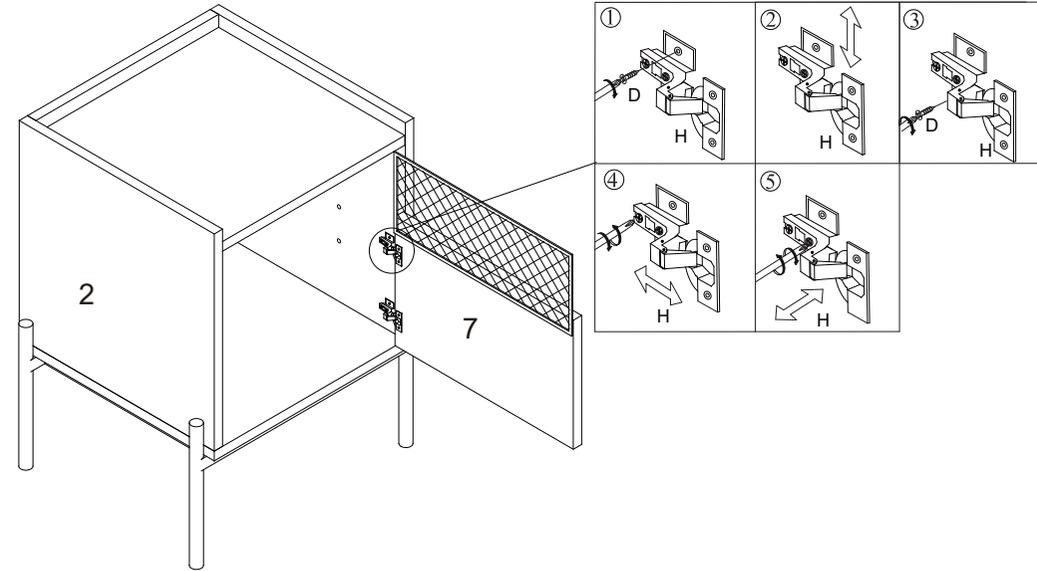

9 Put shelf support (I) into the hole on piece 2 & 3, put the piece 5 on the shelf support.

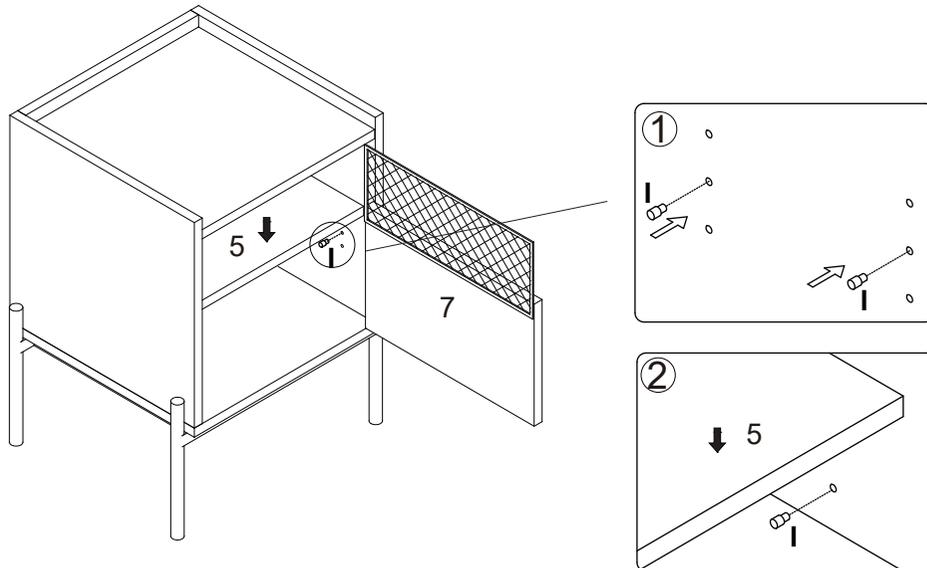

10 The unit should now be assembled and ready to use.

