
Item #: AF16TRYST Assembly Instructions

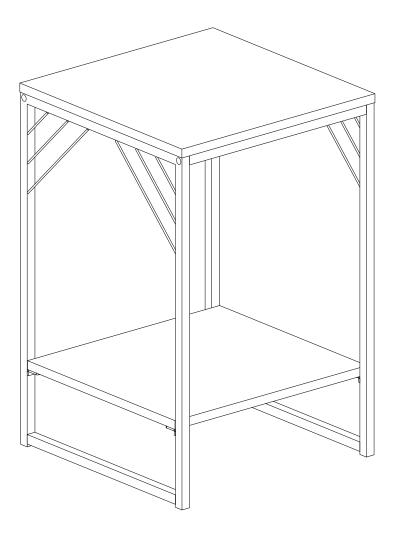





Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com Revised 11/07/2019(C)

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The main type of hardware used to assemble this product are: bolts and screws.
- V. Power tools should not be used to assemble this product.




VI. Drill may be needed for securing product to wall.

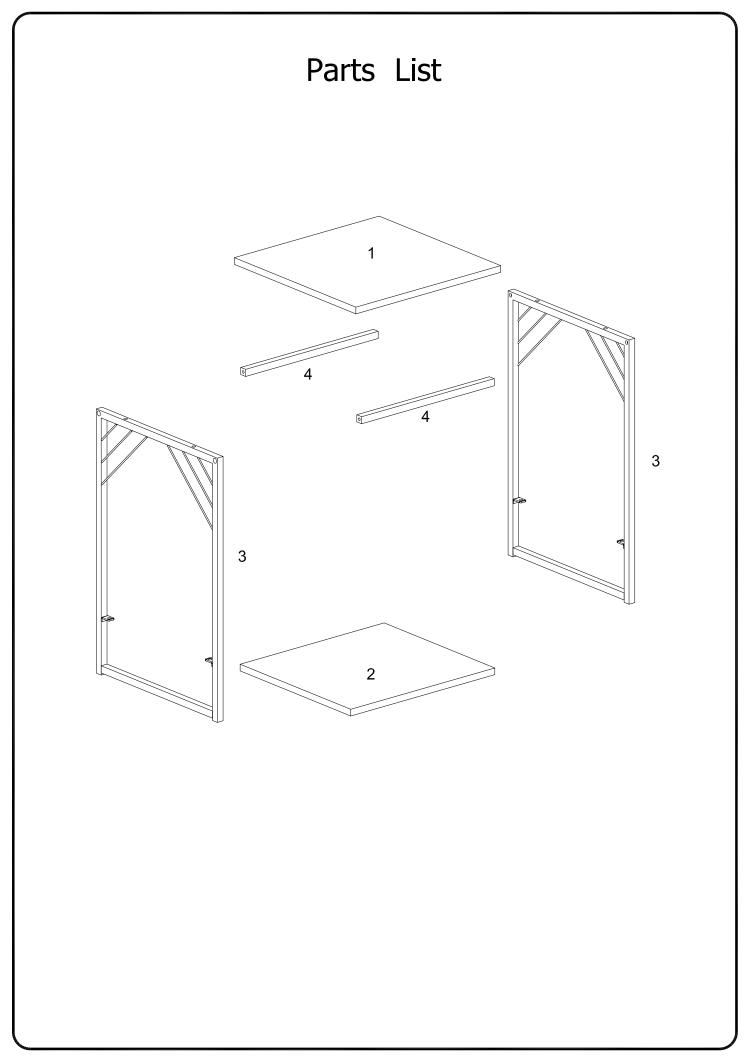

Hardware List


M6x25mm pcs Α Bolt В M6x12mm Bolt pcs С M6x30mm Bolt pcs Hex Key D M4 рс



Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

Step 1

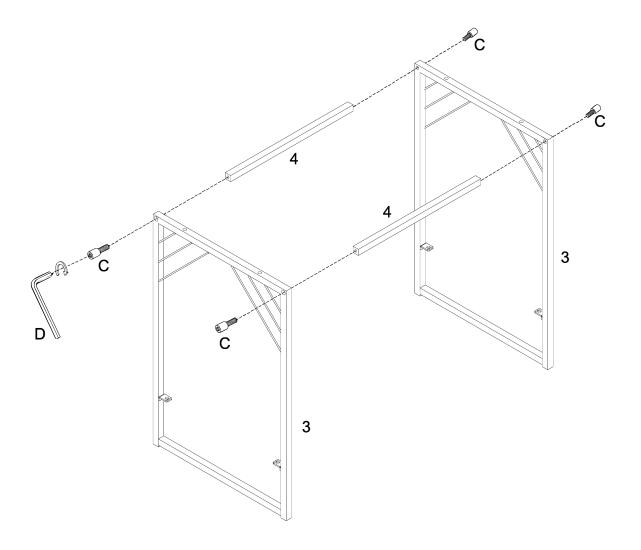


Using bolt (C) attach part (4) into part (3) with hex key (D) as per diagram. Note: do not fully tighten all the bolt.

Step 2

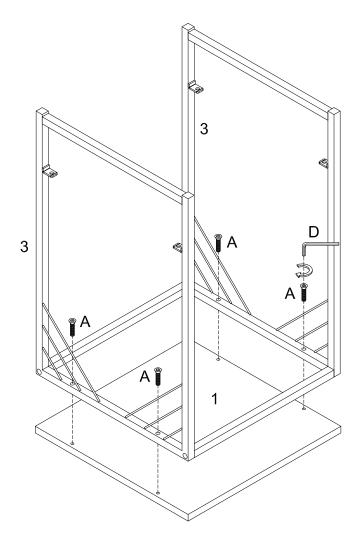

Using bolt (A) attach part (3) into part (1) with hex key (D) as per diagram.

Step 3

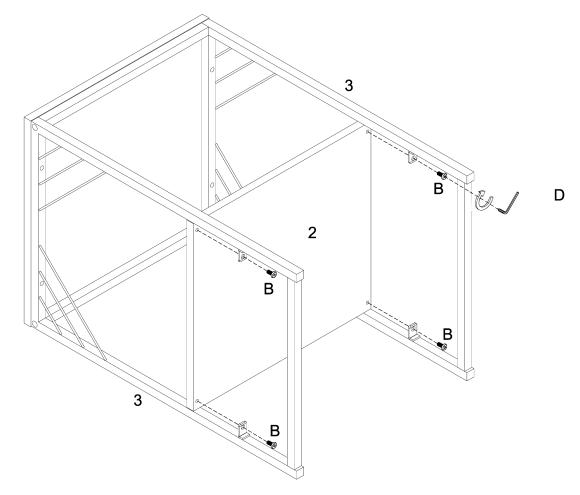

Using bolt (B) attach part (2) into part (3) with hex key (D) as per diagram. Then fully tighten all the bolts.

