
Assembly Instructions

909181- Garden District, Antique Turquoise


909183 - Garden District, Antique White


909185 - Garden District, Antique Blue


Product Issues? Please Call Us Before Contacting Your Retailer At 1-800-549-3300, email customerservice@mshome.co, or visit www.mshome.co We can help with Assembly Issues, Part Requests, Damages, & All Other Product Related Questions

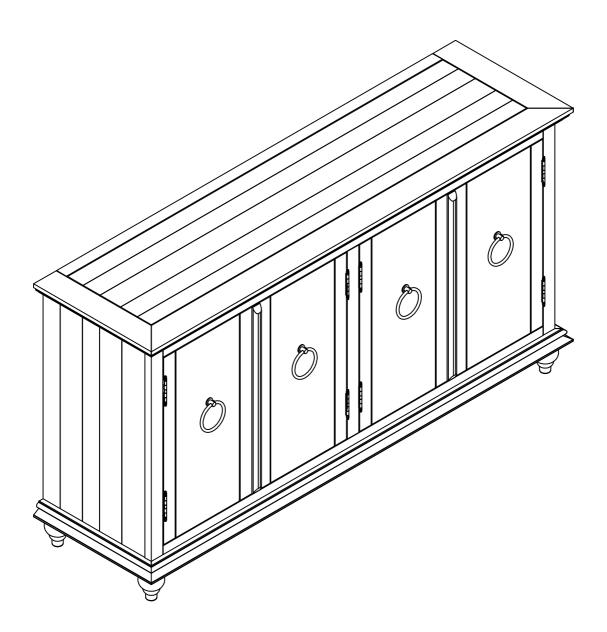




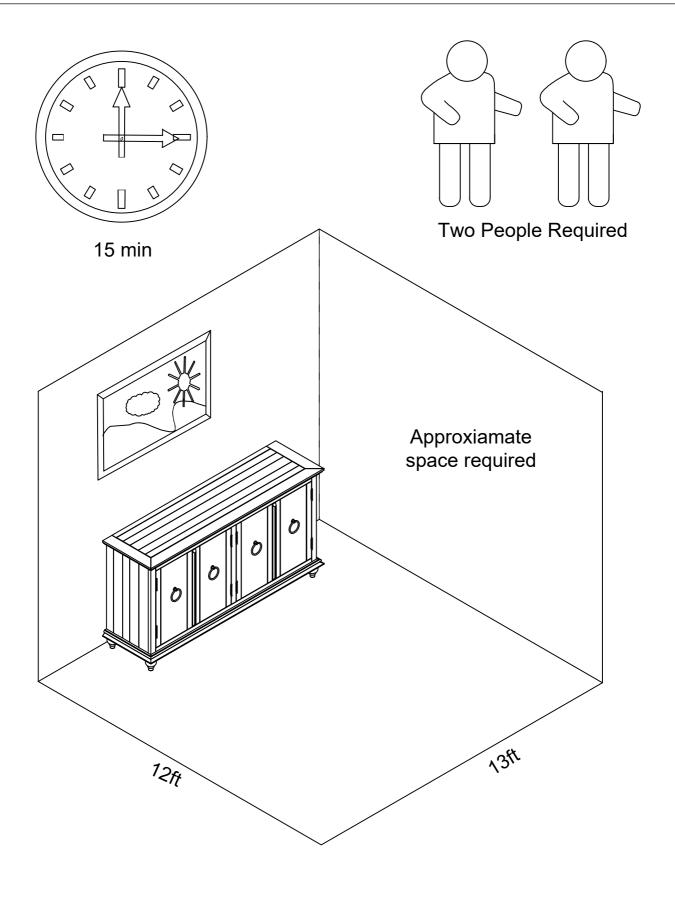


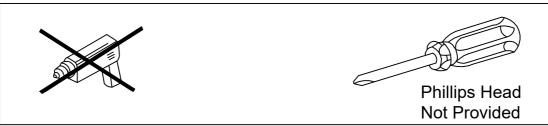


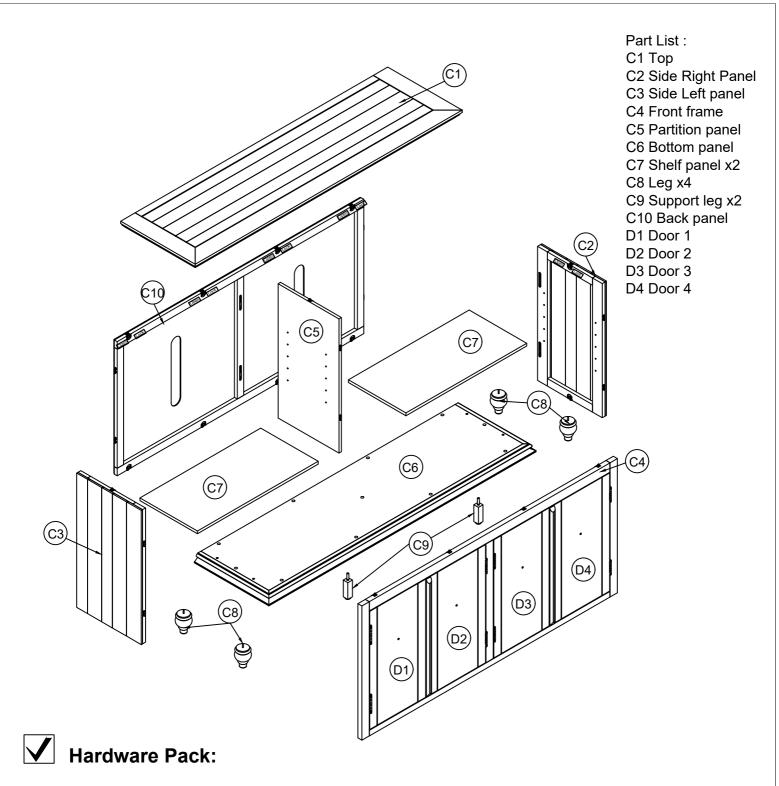


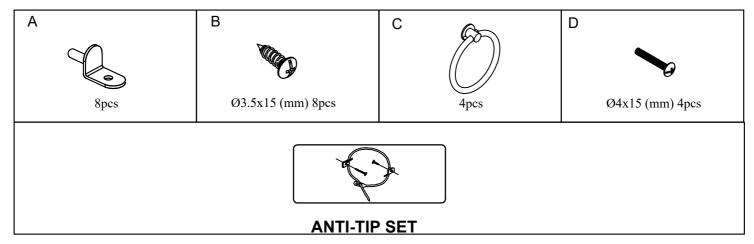

1 Please lay all components on smooth flat surface to prevent scratches Use the EPE foam to protect the plastic hardware before assembly

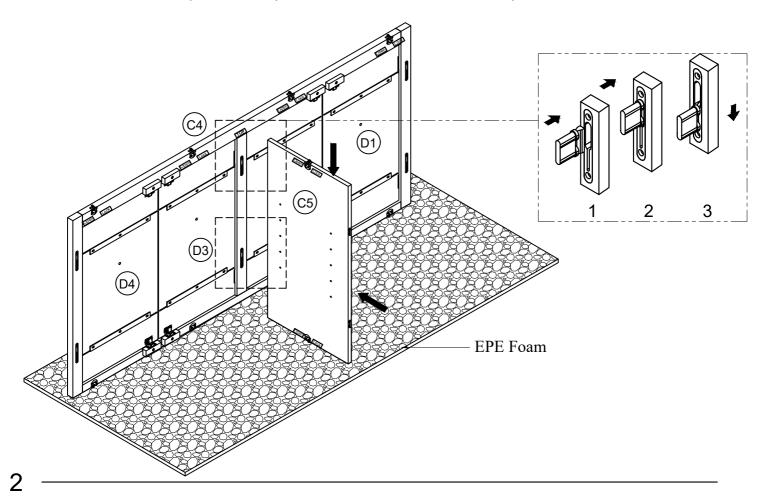


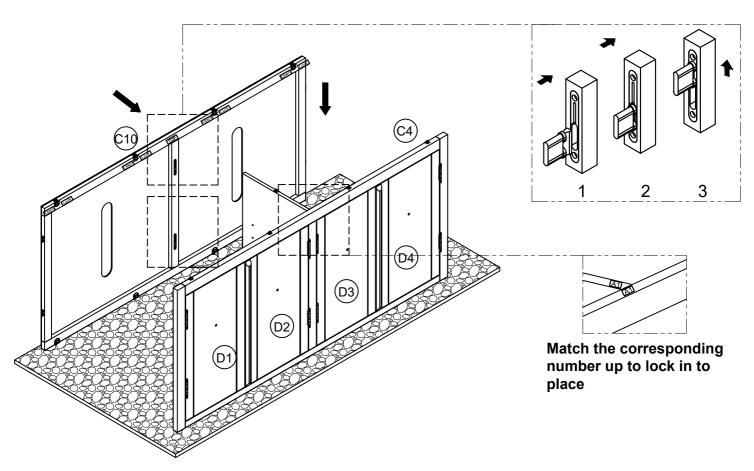

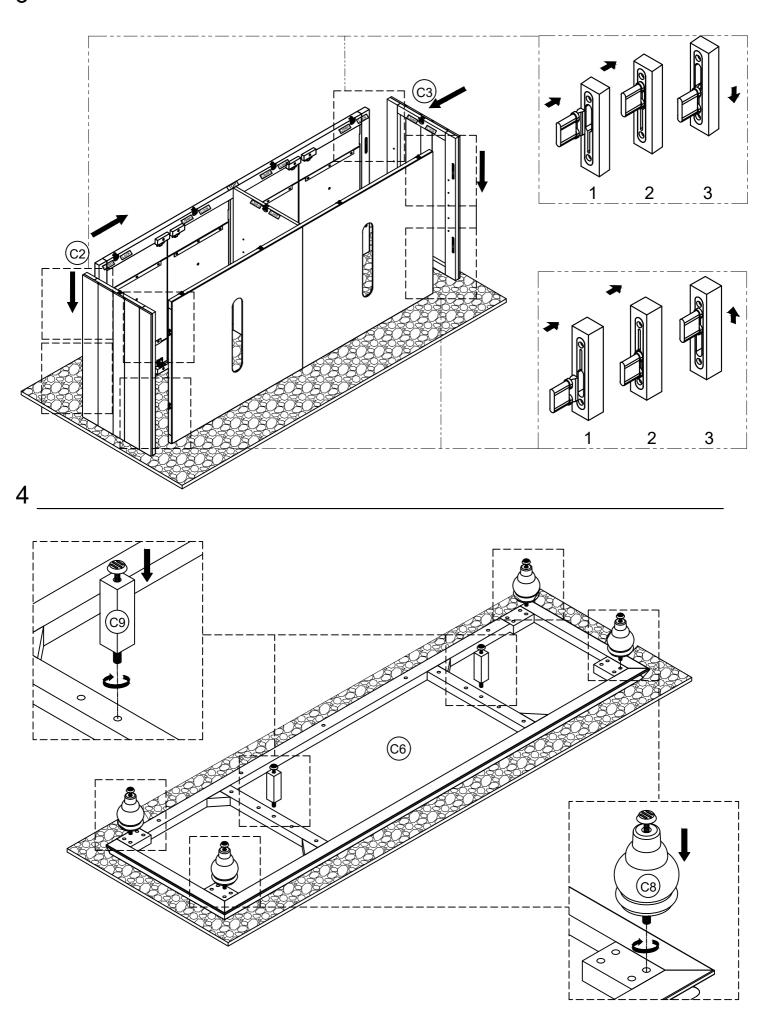






Make sure all latches are in the open position before installing Bottom Panel(C6)

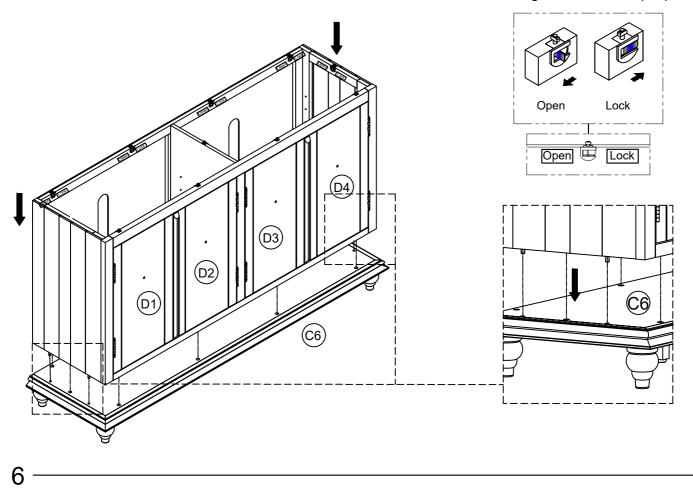


Make sure all 11 latches are in the locked position

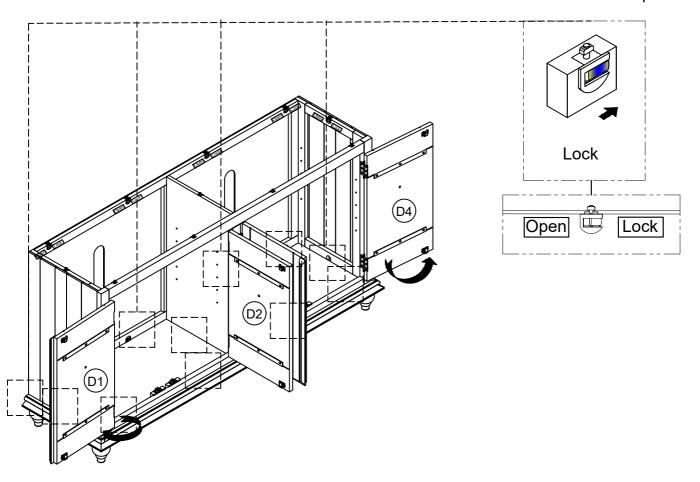

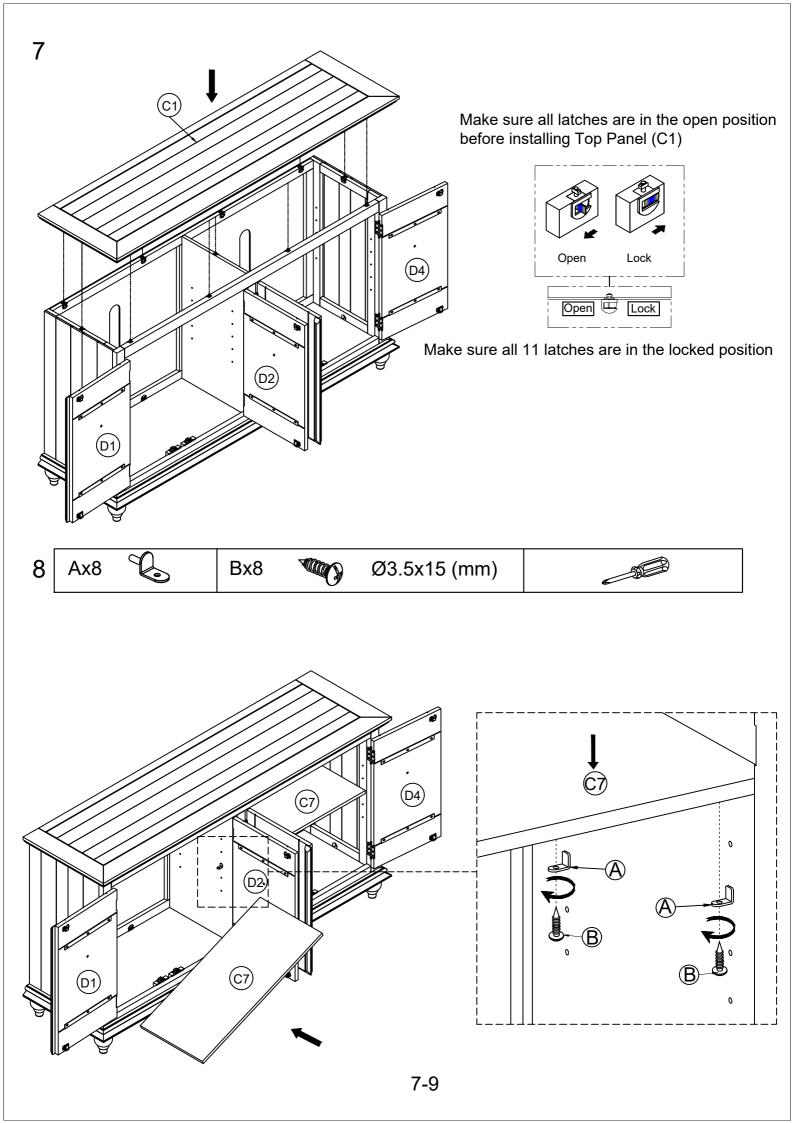



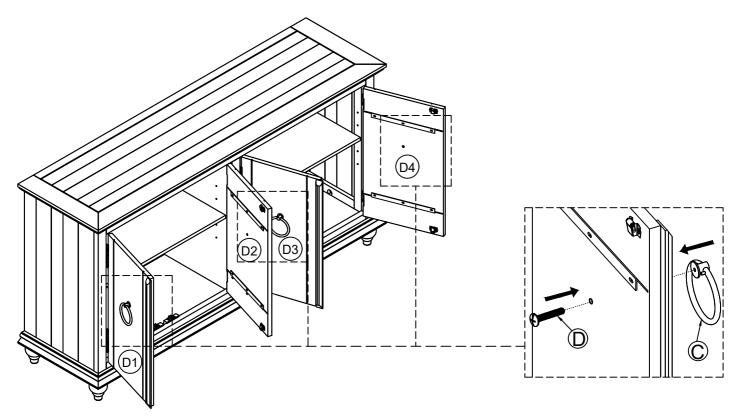

10

