


Item # : W70FLN3D

Assembly Instructions

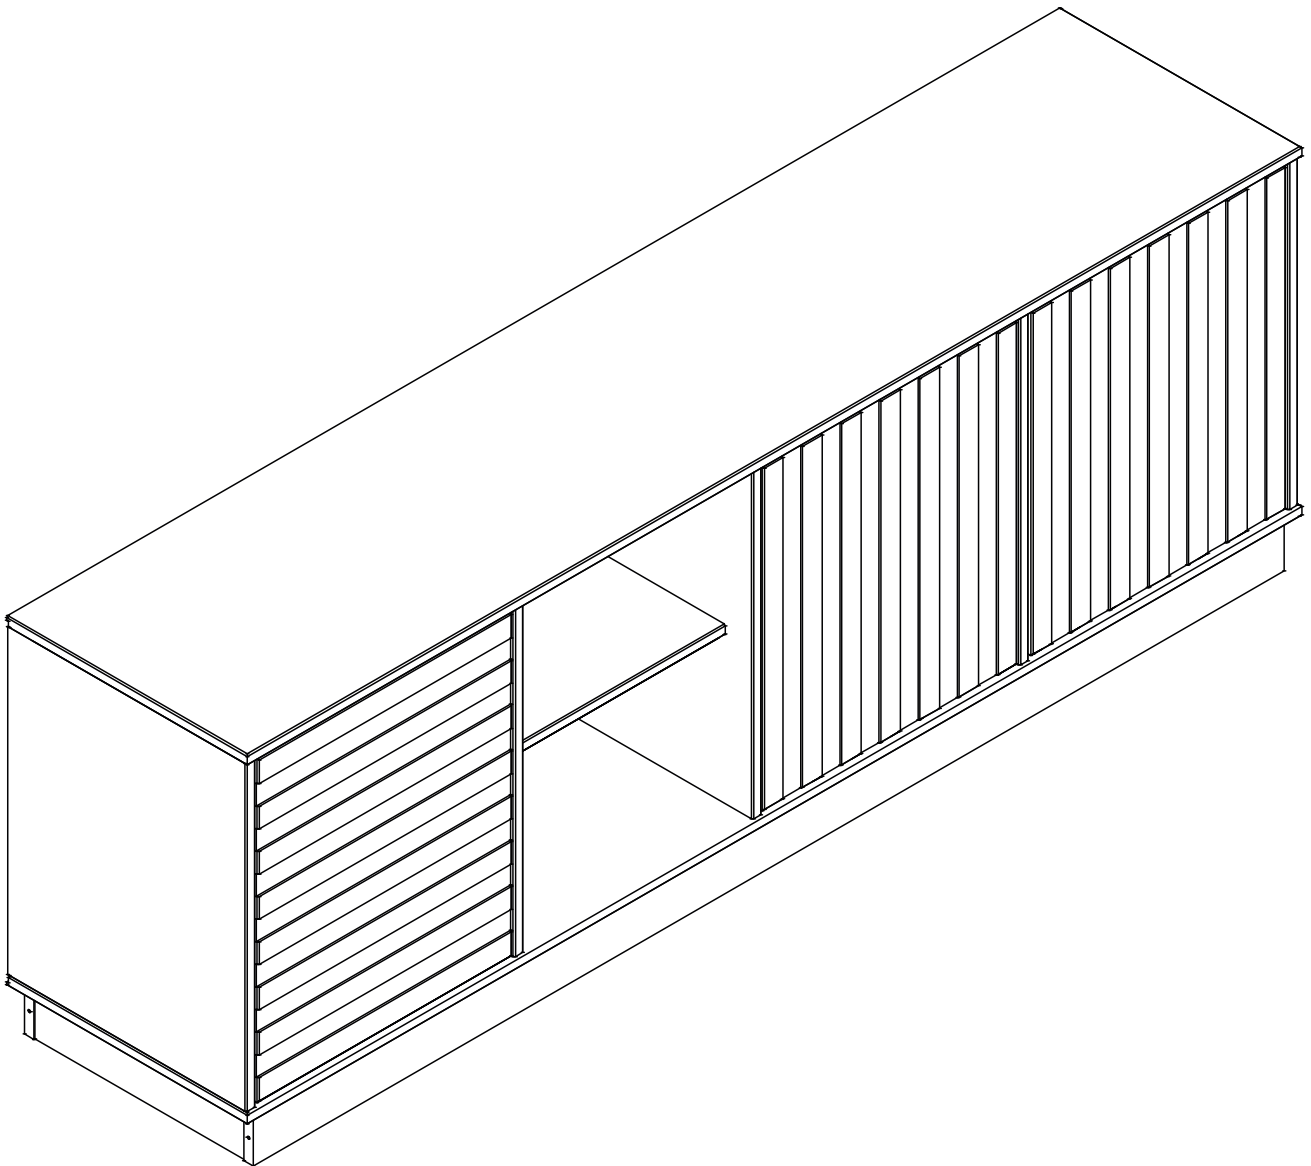


**Walker
Edison**®

Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkerredson.com


Revised 00/0000

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.

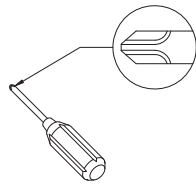

- VI. Power tools should not be used to assemble this product.

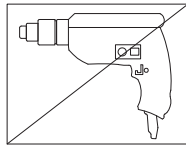




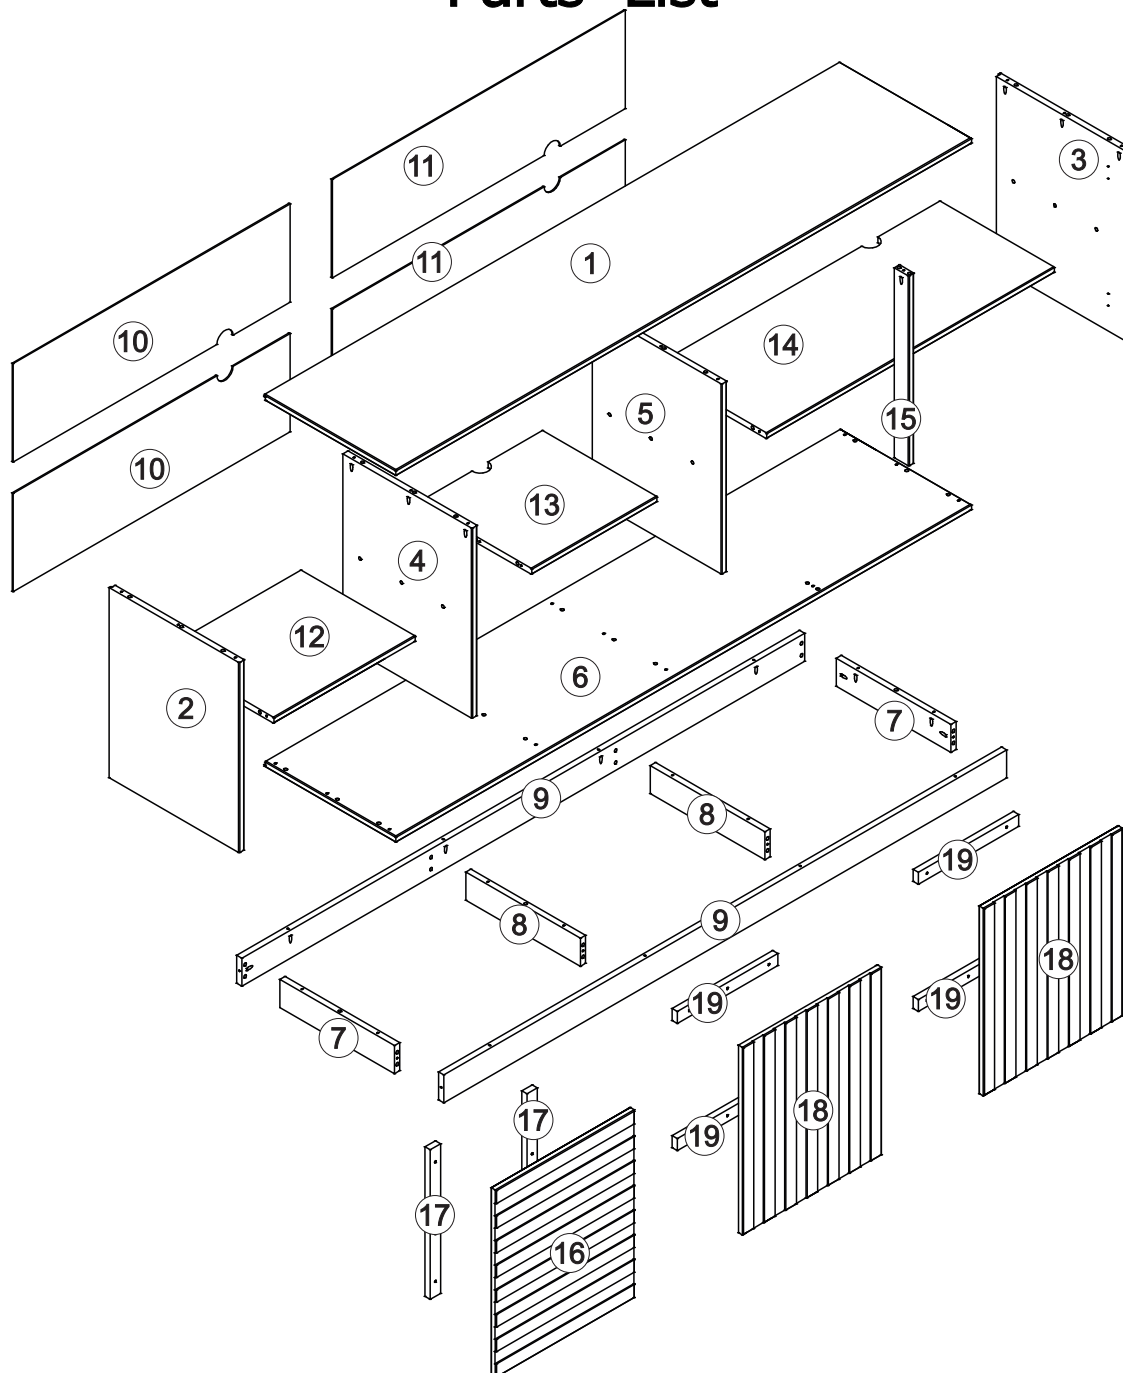



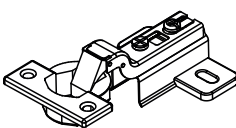
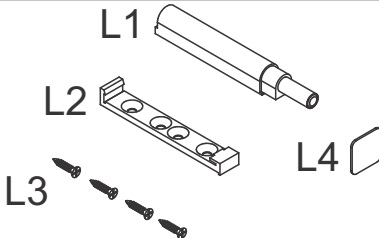
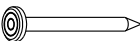



Parts List

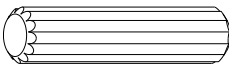


Part#	Description	Qty
1	Top panel	01 pcs
2	Right side panel	01 pcs
3	Left side panel	01 pcs
4	Left center panel	01 pcs
5	Right center panel	01 pcs
6	Base	01 pcs
7	Foot crossbeam	02 pcs
8	Center foot crossbeam	02 pcs
9	Front / Back croosbeam	02 pcs


Part#	Description	Qty
10	Small back panel	02 pcs
11	Back panel	02 pcs
12	Left shelf	01 pcs
13	Center shelf	01 pcs
14	Right shelf	01 pcs
15	Front crosspiece	01 pcs
16	Left door	01 pcs
17	Left door crossbeam	02 pcs
18	Right door	02 pcs
19	Right door crossbeam	04 pcs

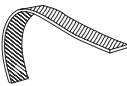Hardware List

A		Ø8*30mm	Wooden dowel	64 pcs
B		Ø4,0*30mm	Screw	51 pcs
C		Ø4,0*40mm	Screw	13 pcs
D		Ø4,0*25mm	Screw	21 pcs
E			Washer	02 pcs
G			Wall anchor	01 pc
H		Ø4,0*16mm	Screw	25 pcs
J K			Hinge	06 pcs
L			Magnetic Clasp	03 pcs
M		Ø10*10	Nail	80 pcs
N		Ø6*8mm	Support	01 pc
P		Ø6mm	Slap Hole	01 pc
S			Slap Hole	05 pc

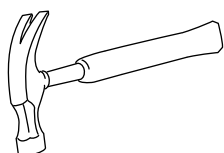



Hammer recommended for assembly
(not included)

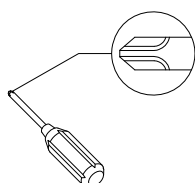



Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

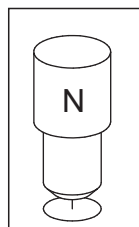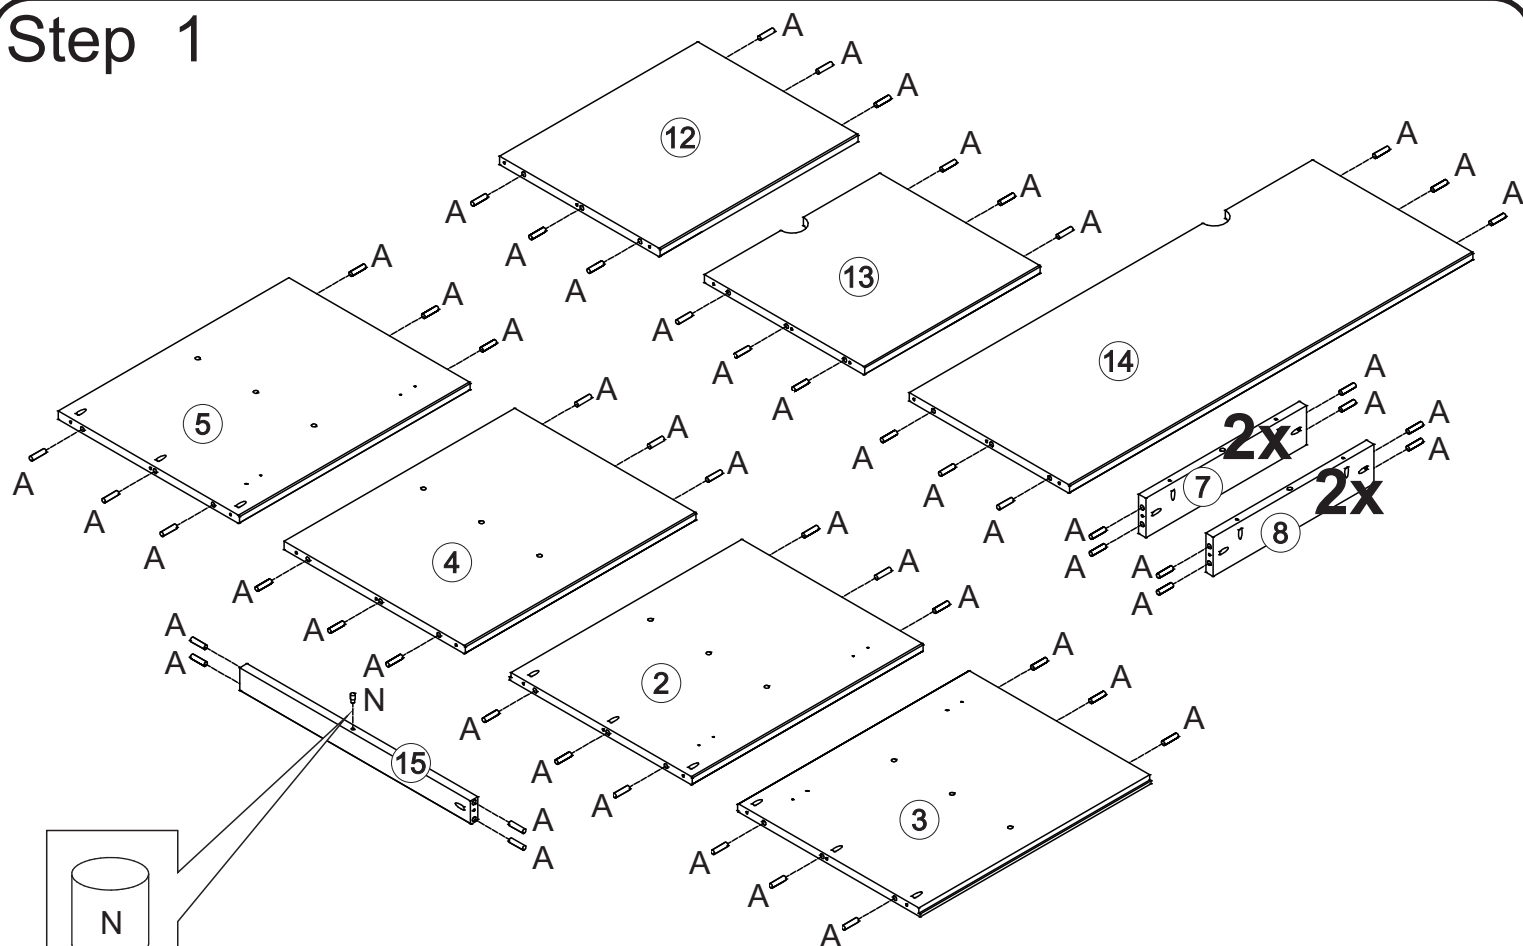
Step 1







A		Ø8*30mm	62	N		Ø6*8mm	01
---	---	---------	----	---	--	--------	----

Insert Wooden dowel (A) into part (2), (3), (4), (5), (7), (8), (12), (13), (14) and (15).
Insert Support (N) into part (15).

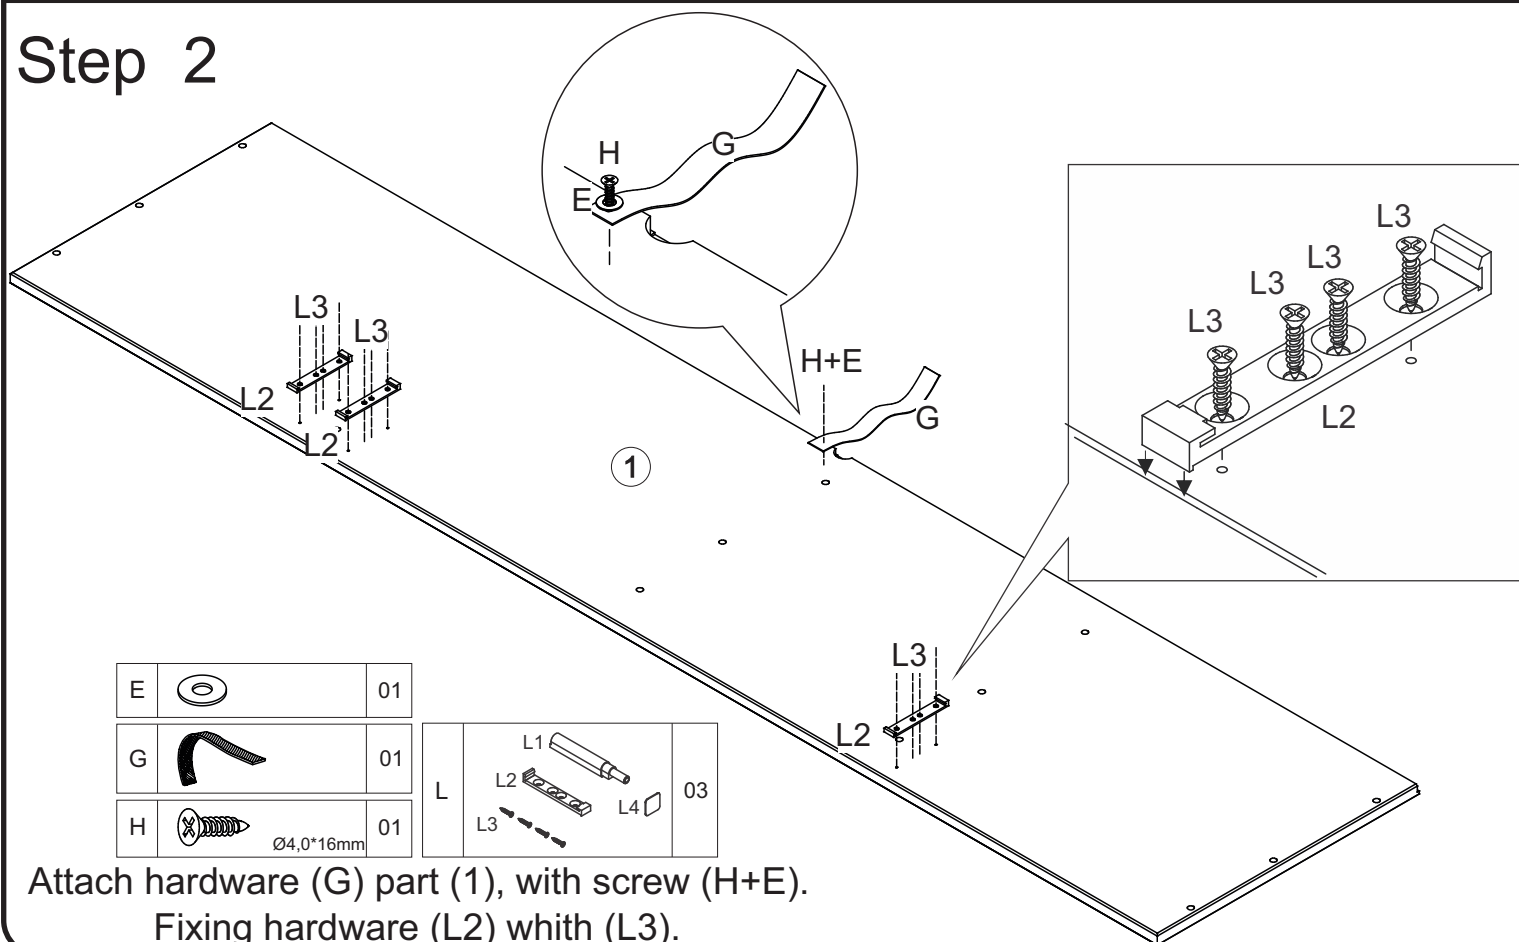Step 2





E		01
G		01
H		Ø4,0*16mm 01

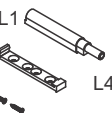L		03
---	---	----



Attach hardware (G) part (1), with screw (H+E).
Fixing hardware (L2) with (L3).

Step 3

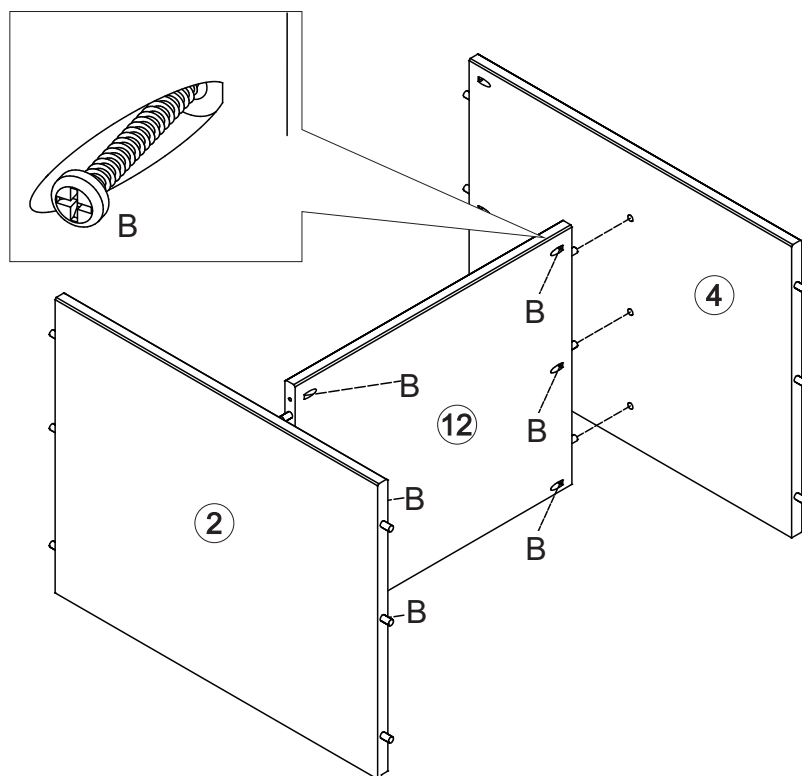



Secure part (12) to part (2) and (4) with screw (B).

Step 4

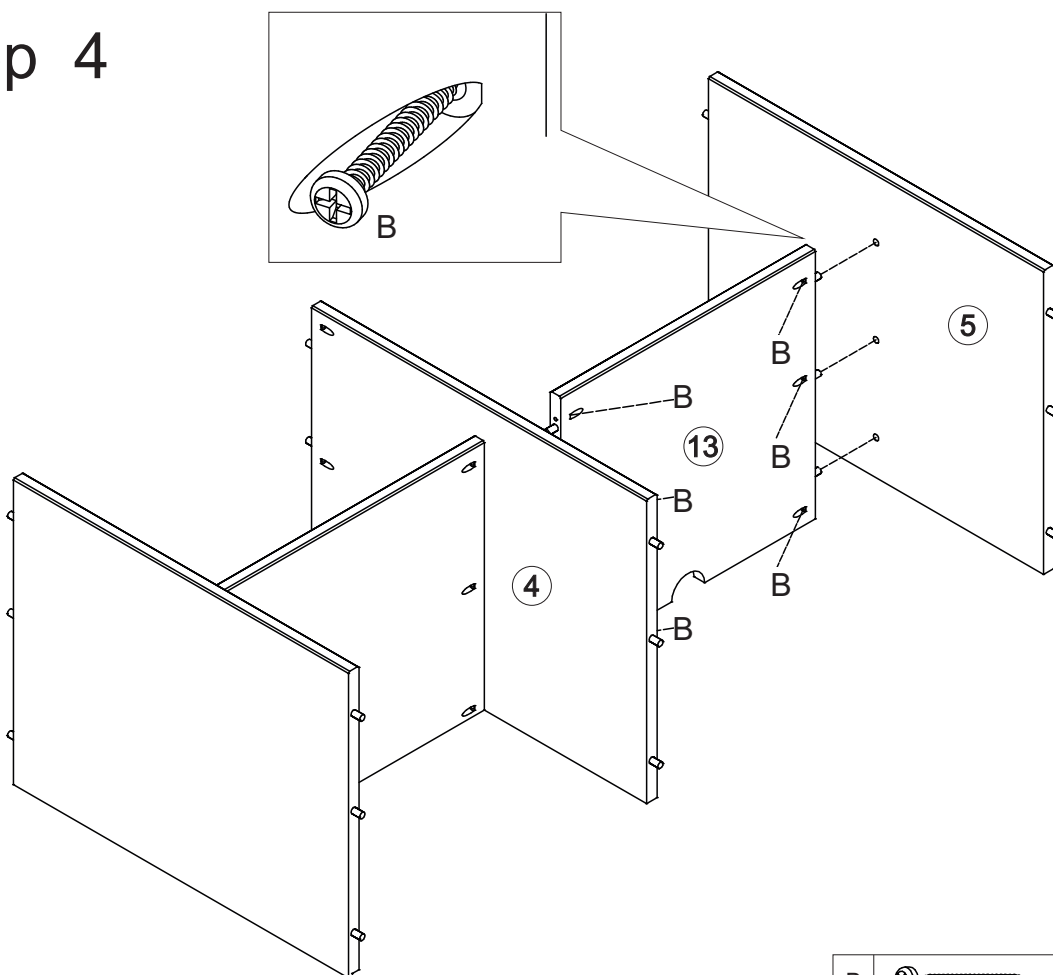



Secure part (13) to part (4) and (5) with screw (B).

Step 5

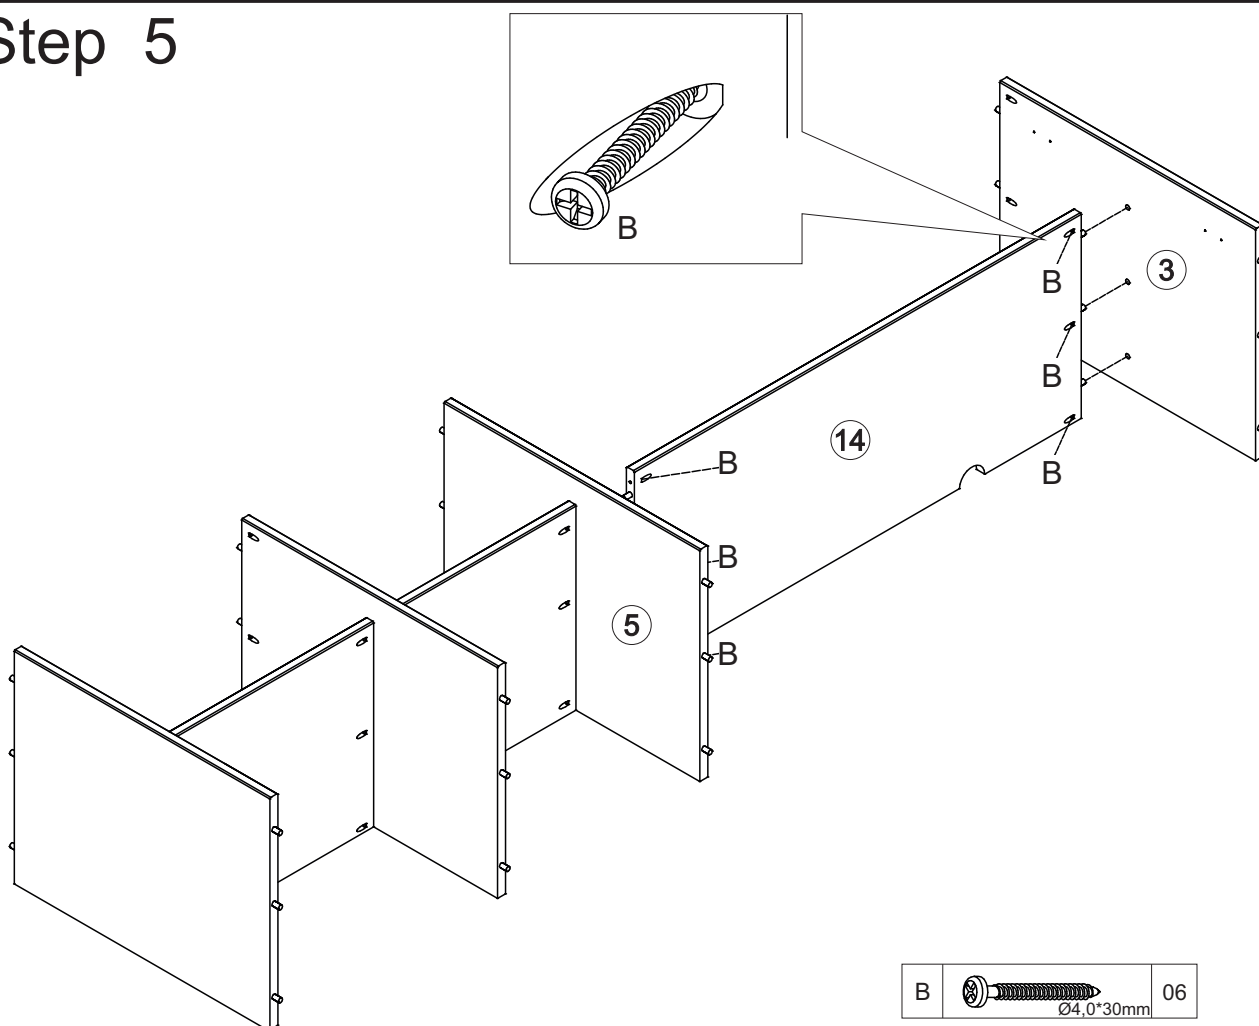


Secure part (14) to part (3) and (5) with screw (B).

Step 6

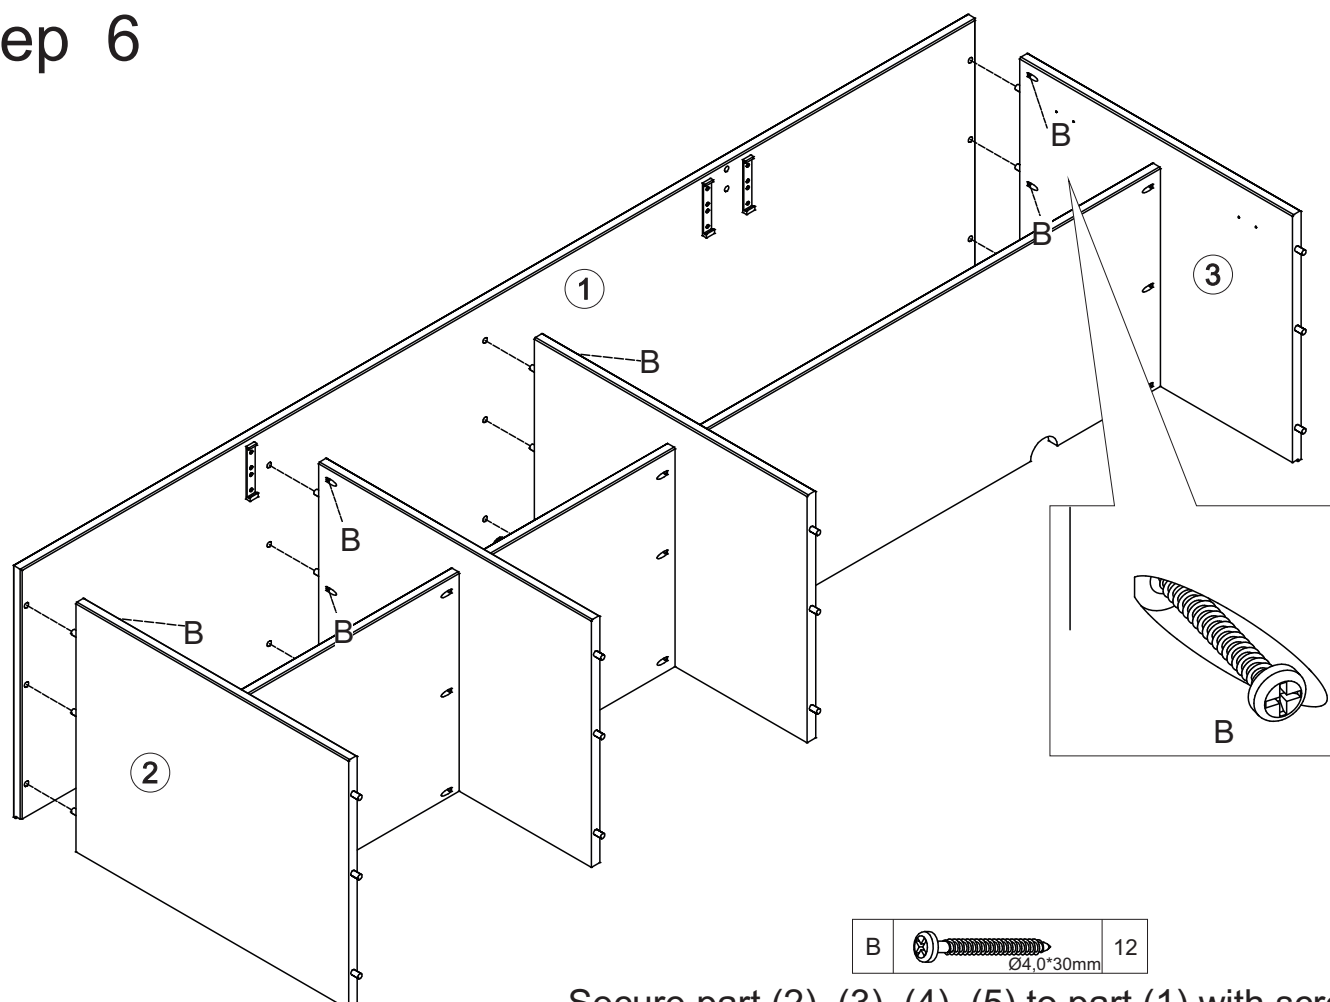


Secure part (2), (3), (4), (5) to part (1) with screw (B).

Step 7

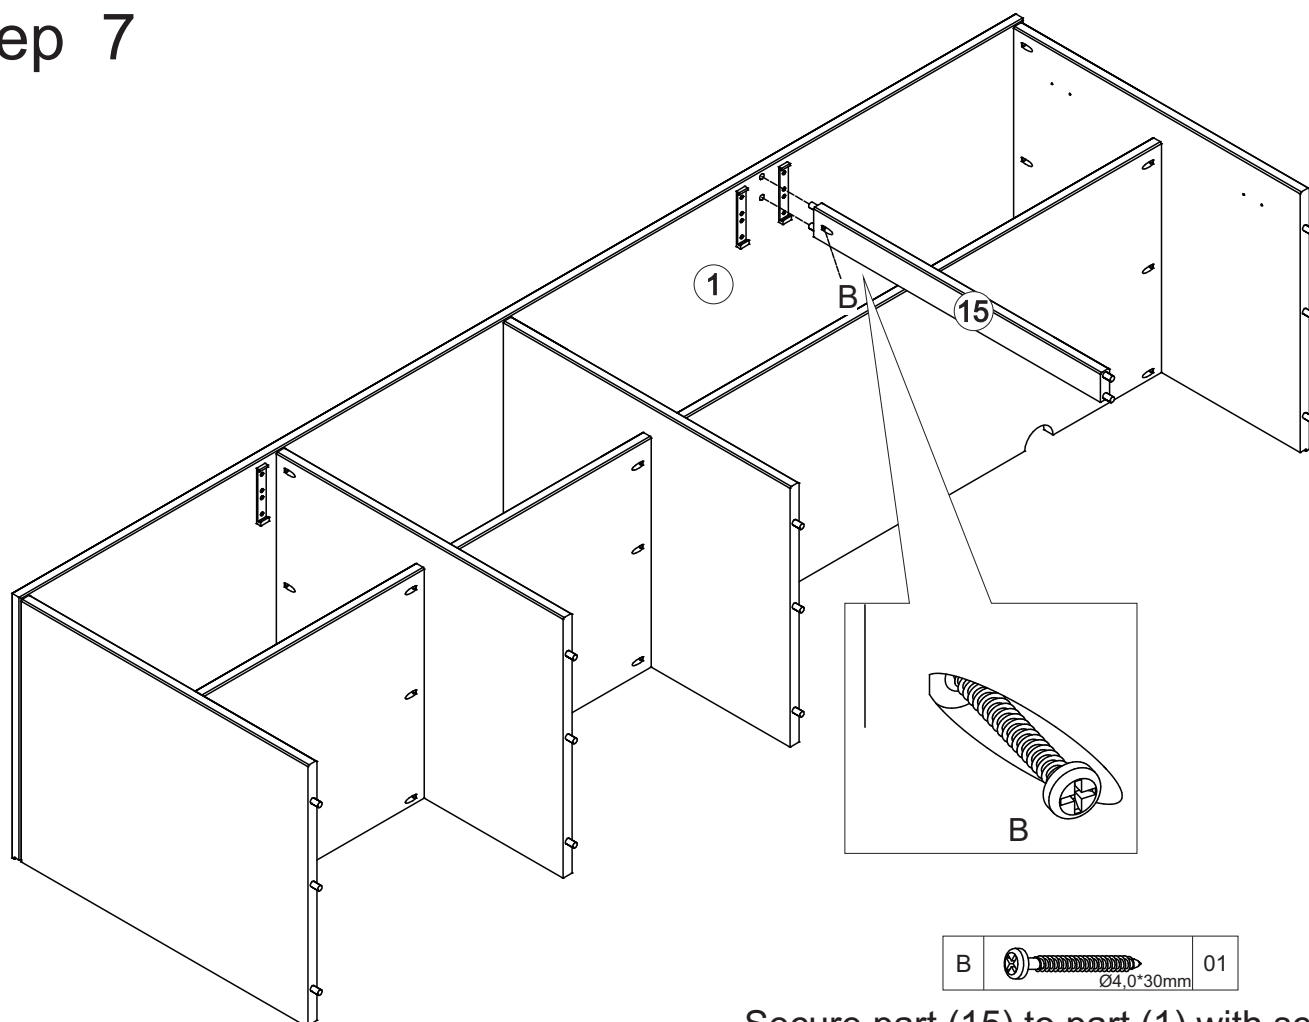


Secure part (15) to part (1) with screw (B).

Step 8

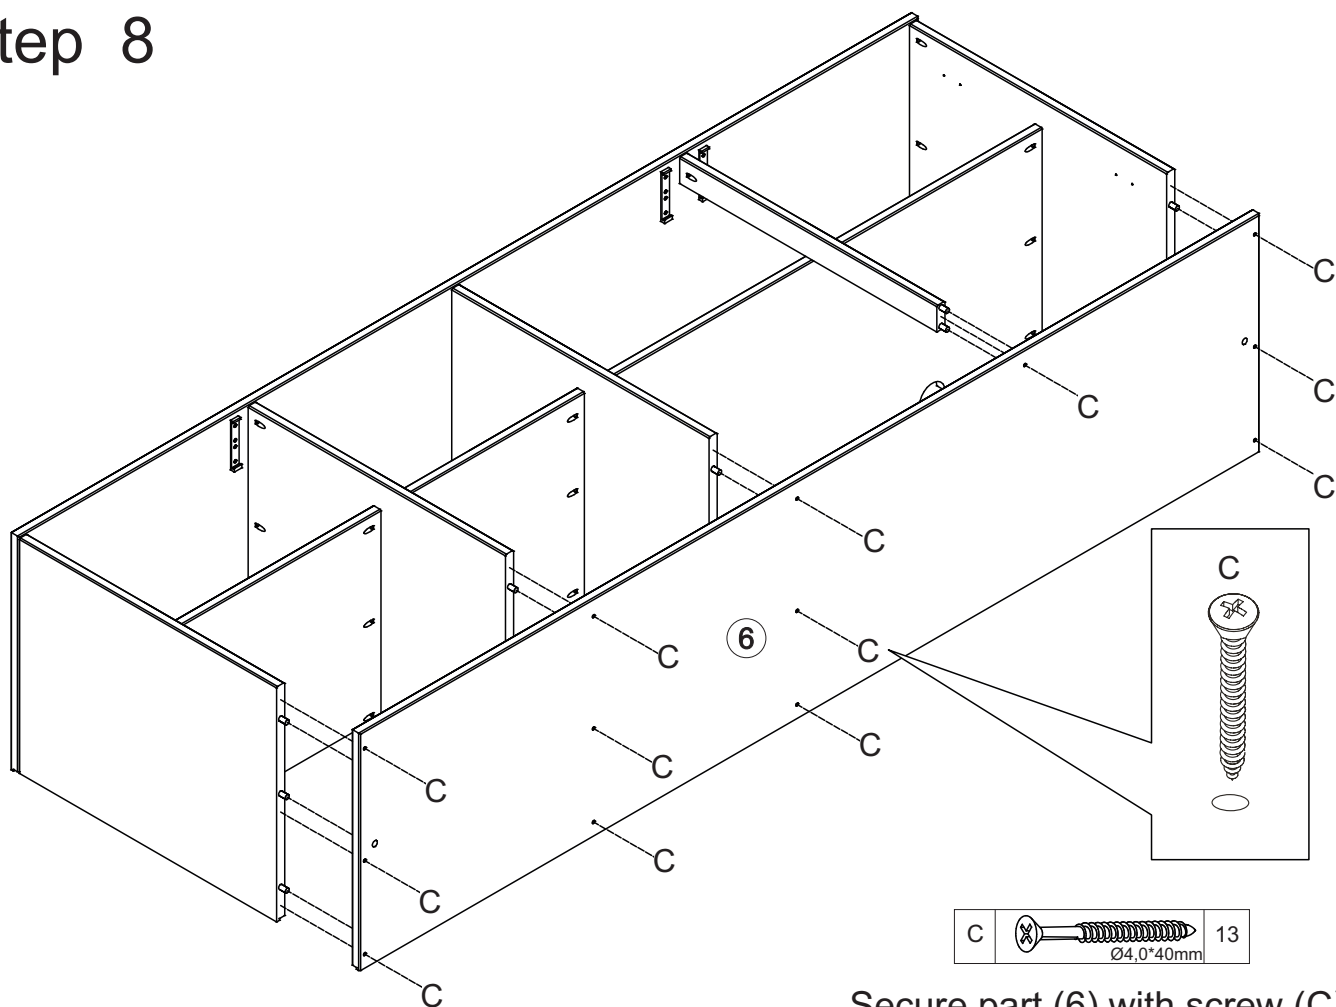


Secure part (6) with screw (C).

Step 9

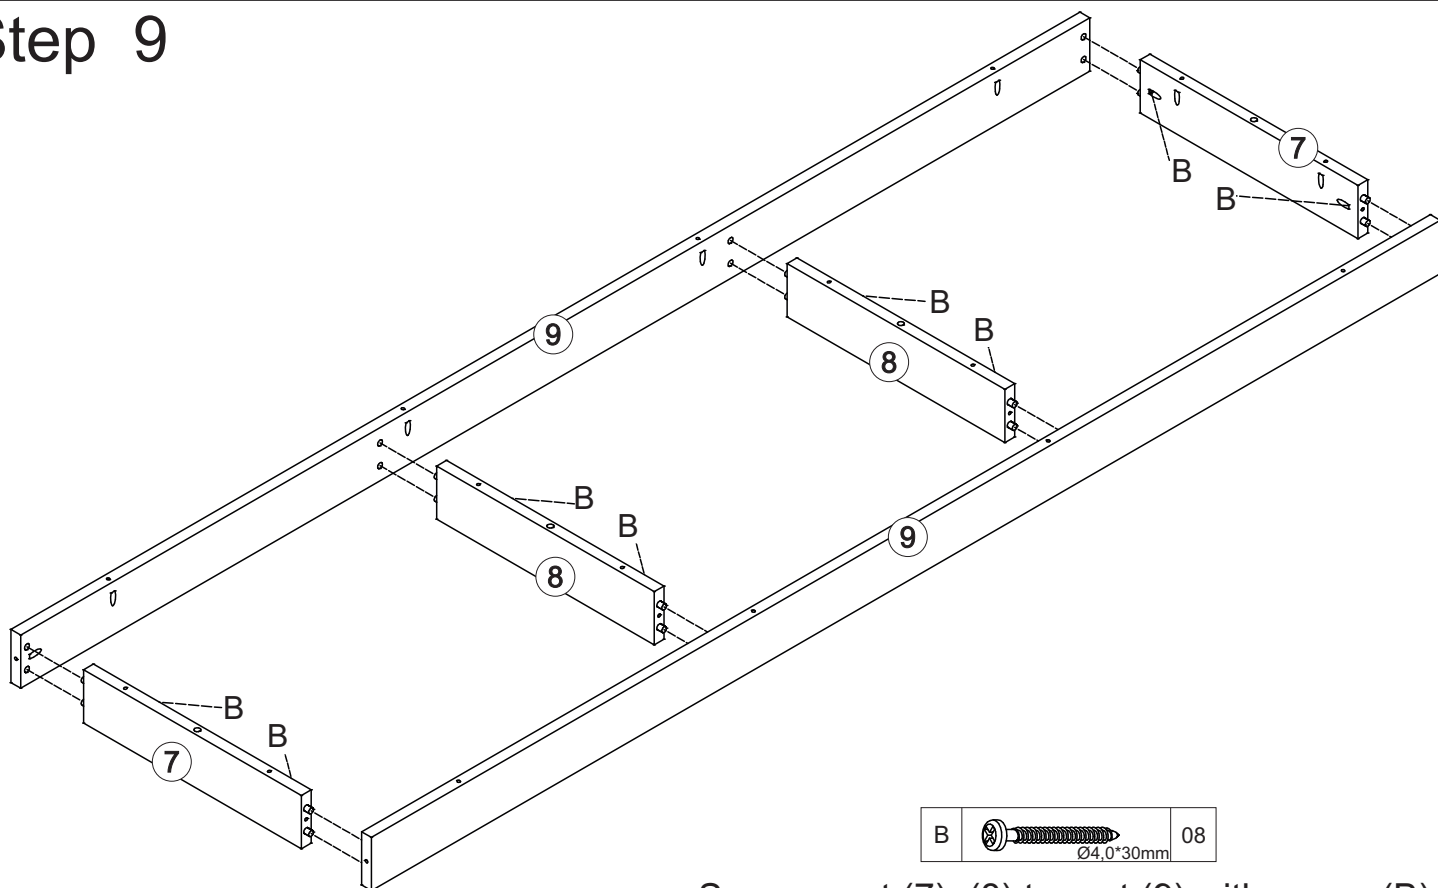



Secure part (7), (8) to part (9) with screw (B).

Step 10

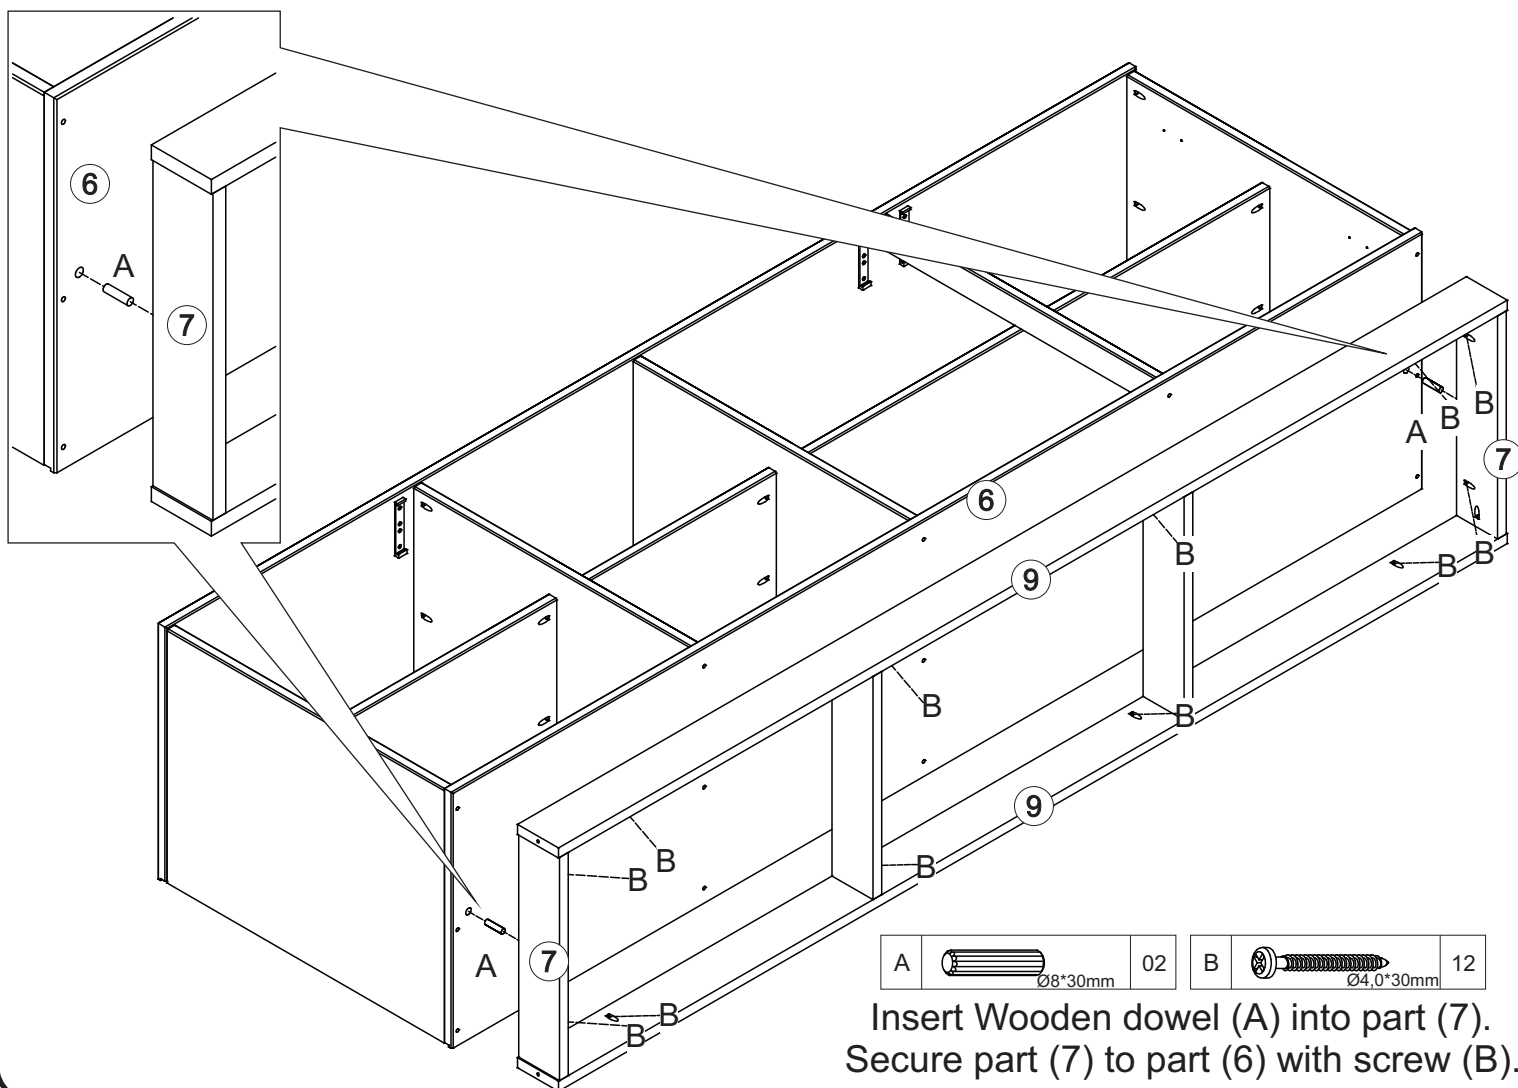


Insert Wooden dowel (A) into part (7).
Secure part (7) to part (6) with screw (B).

Step 11

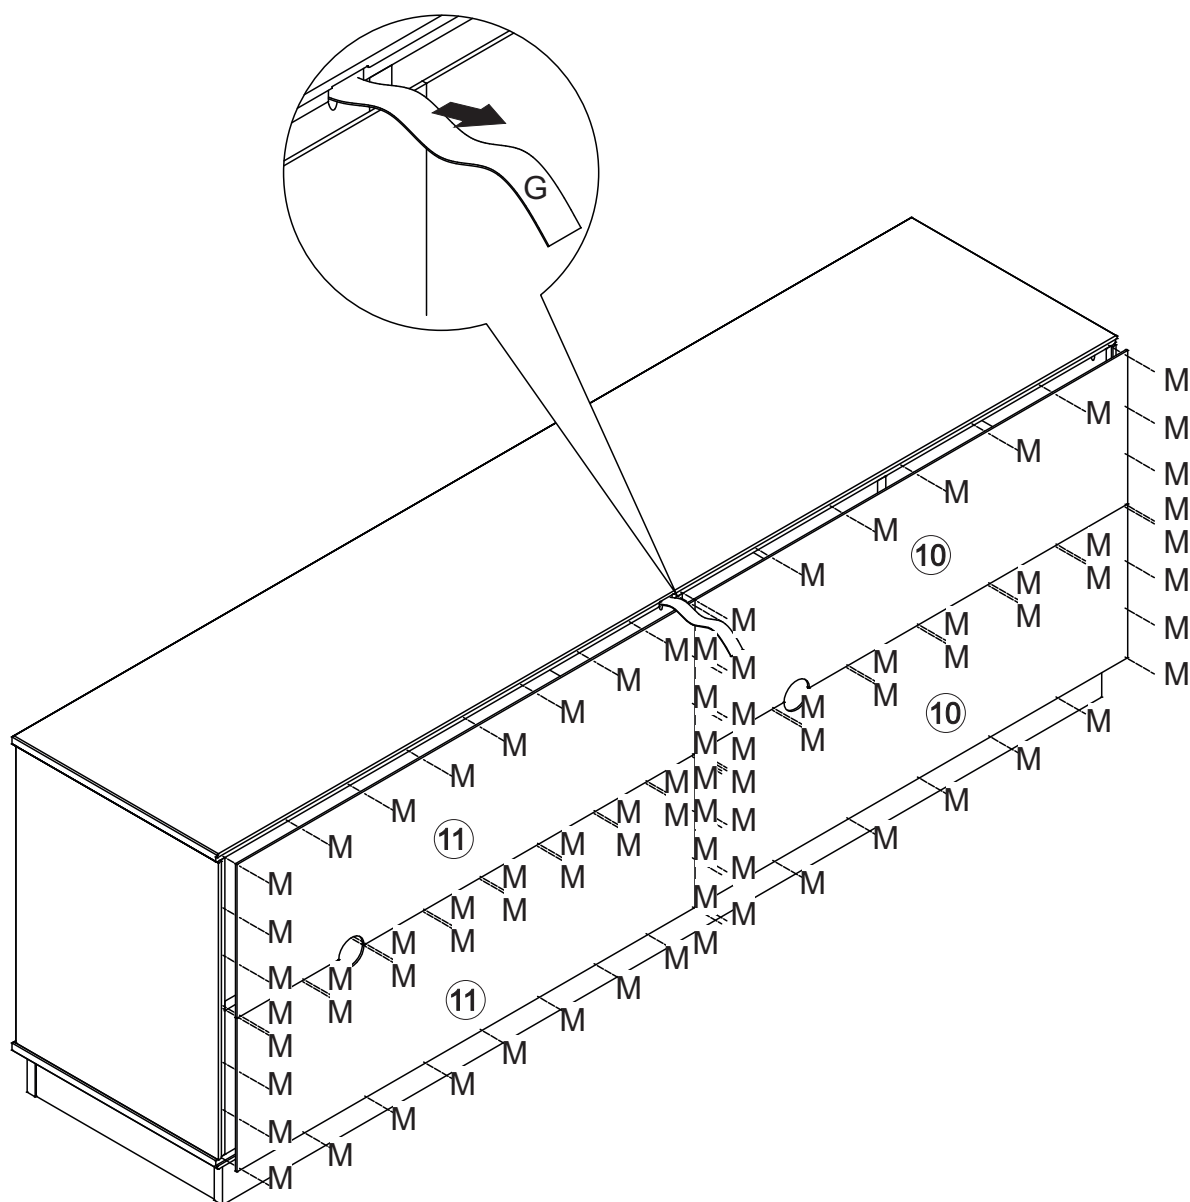


Secure back panel (10) and (11) to body with nails (M)

Step 12

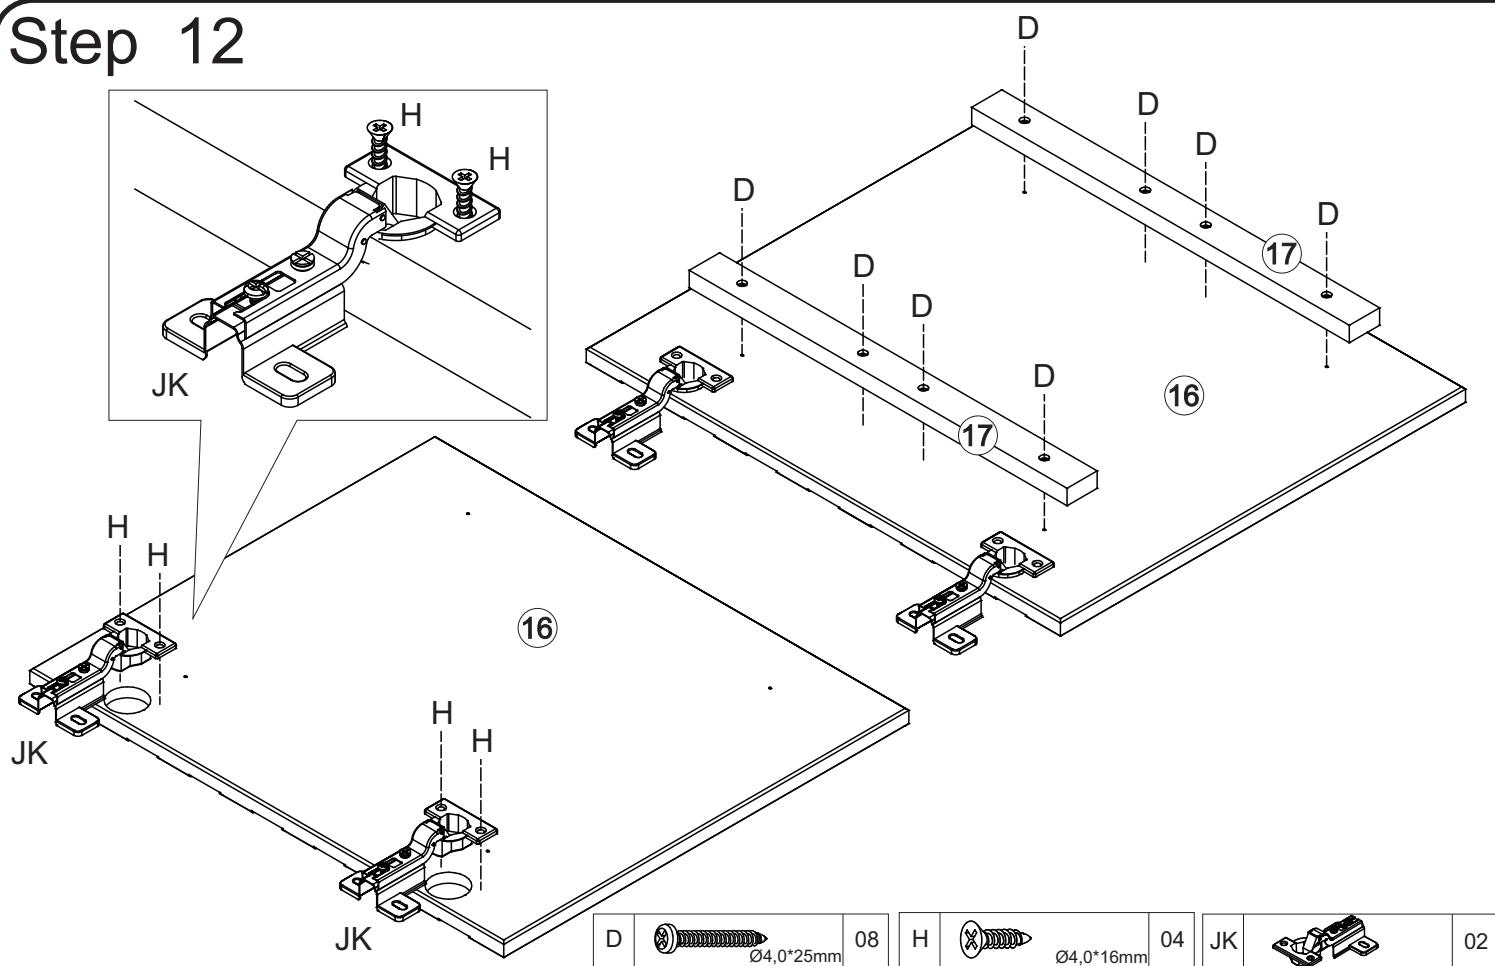



Secure part (16) to part (17) with screw (B).
Attach hardware (JK) part (16), with screw (H).

Step 13

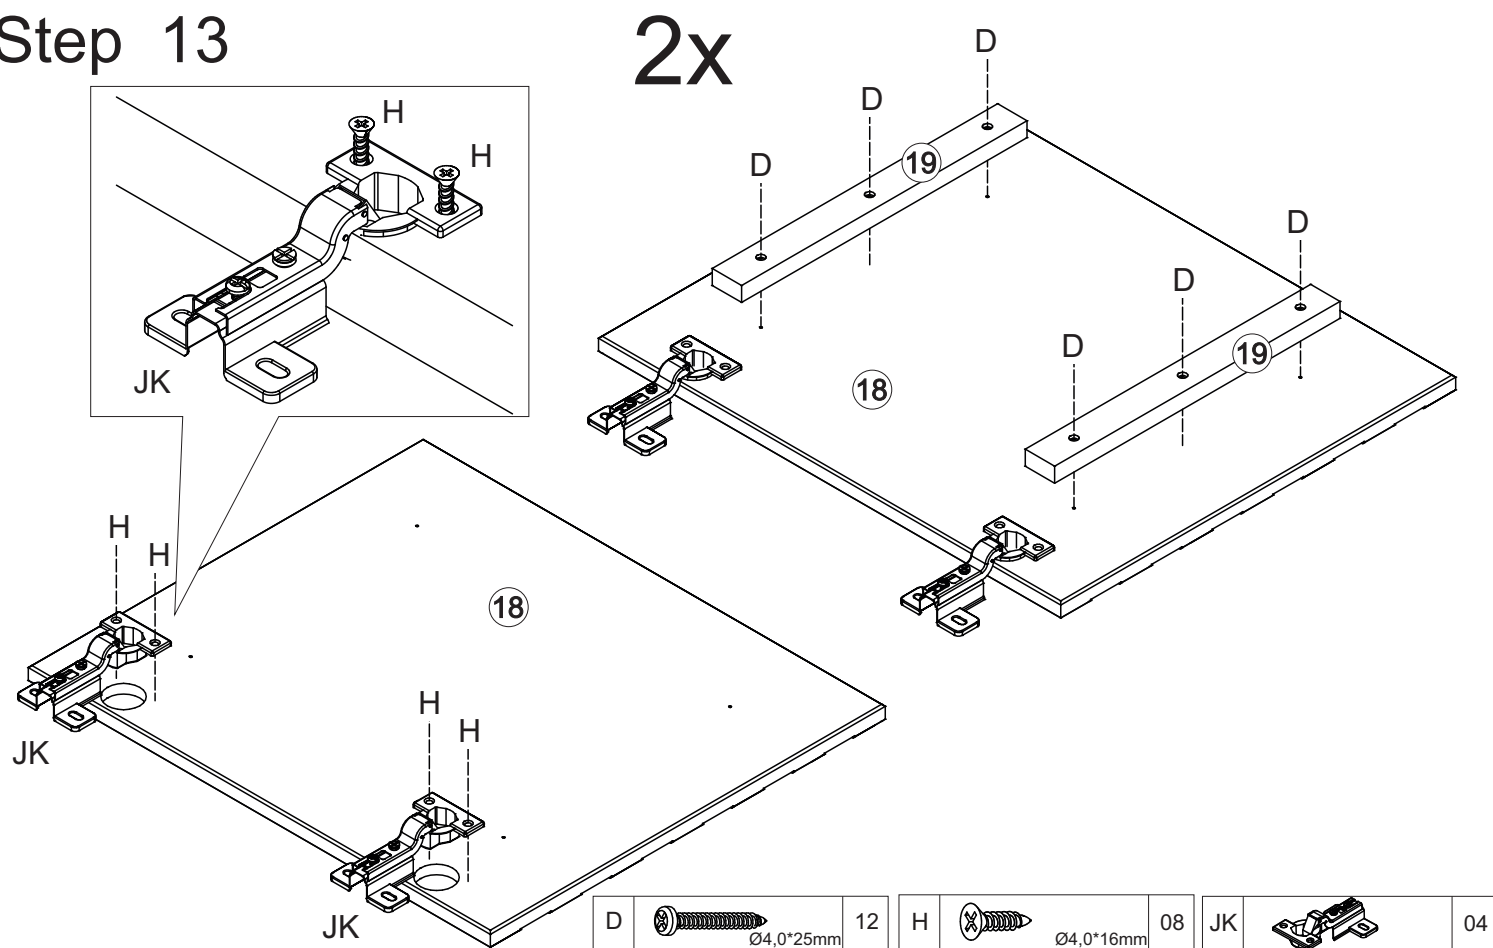


Secure part (18) to part (19) with screw (B).
Attach hardware (JK) part (18), with screw (H).





Step 14

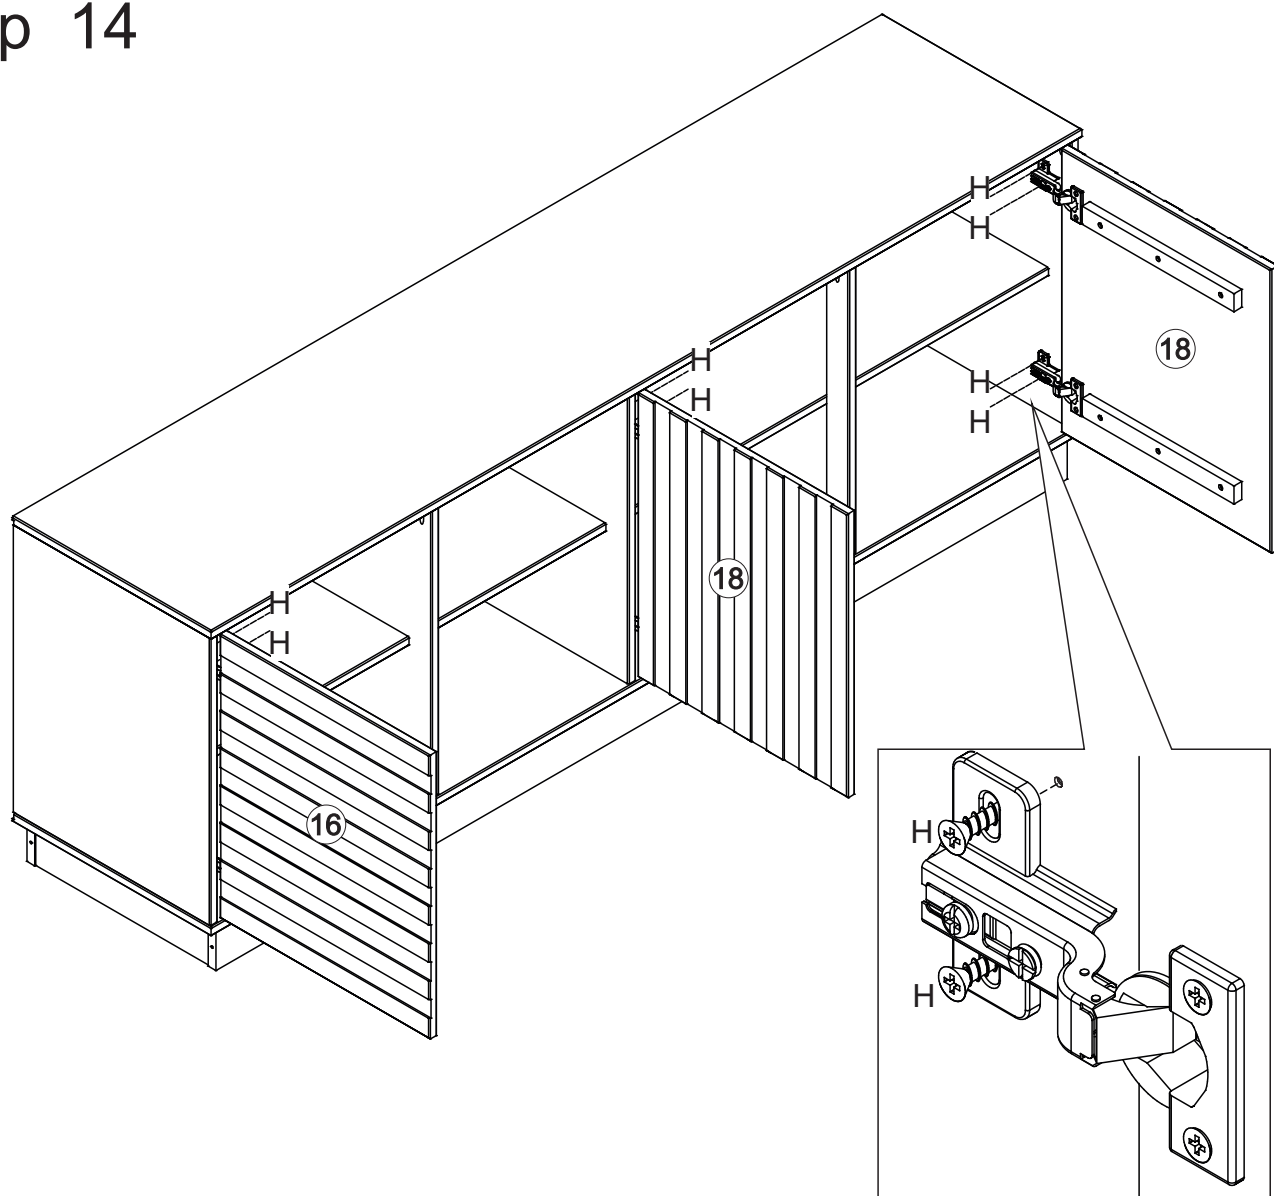

Secure part (16), (18) to part (2), (3) and (5), with screw (H).


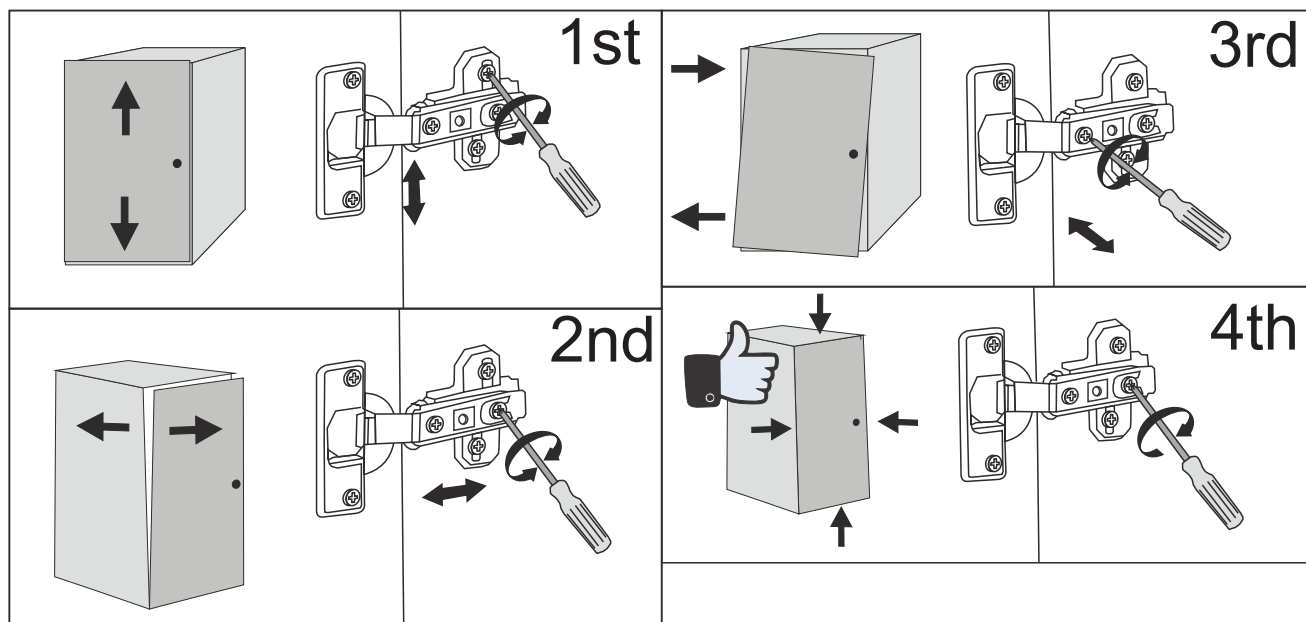


Step 15

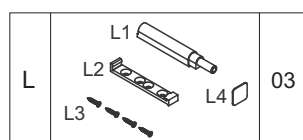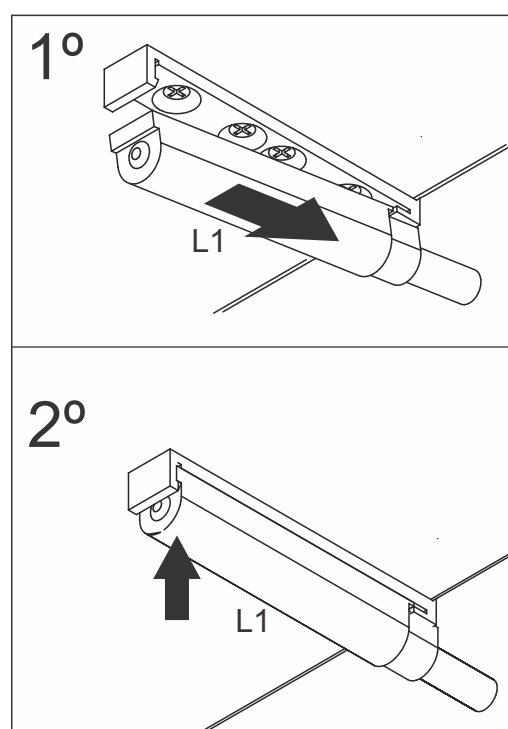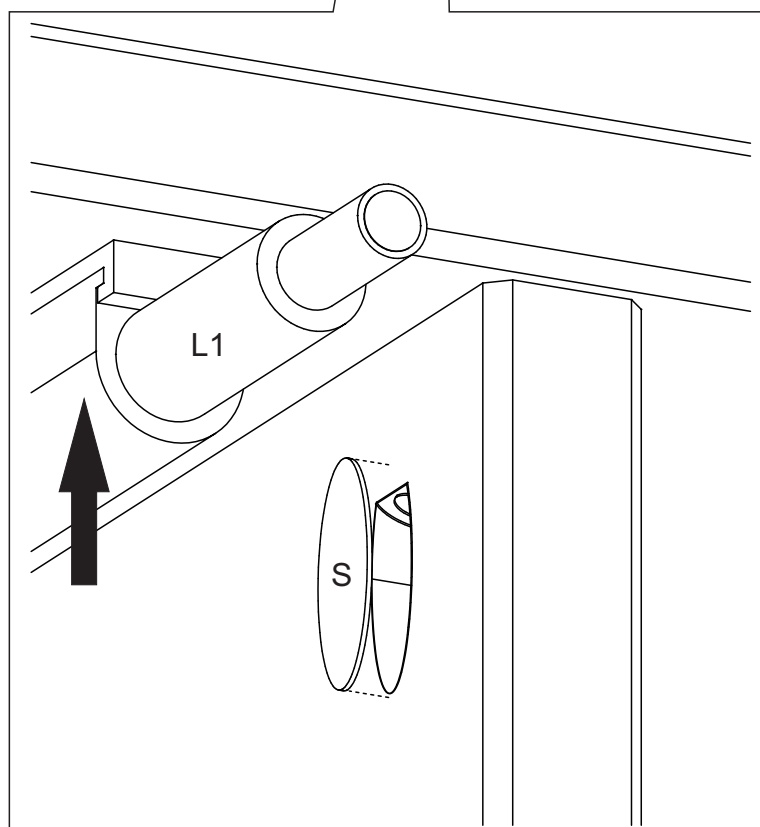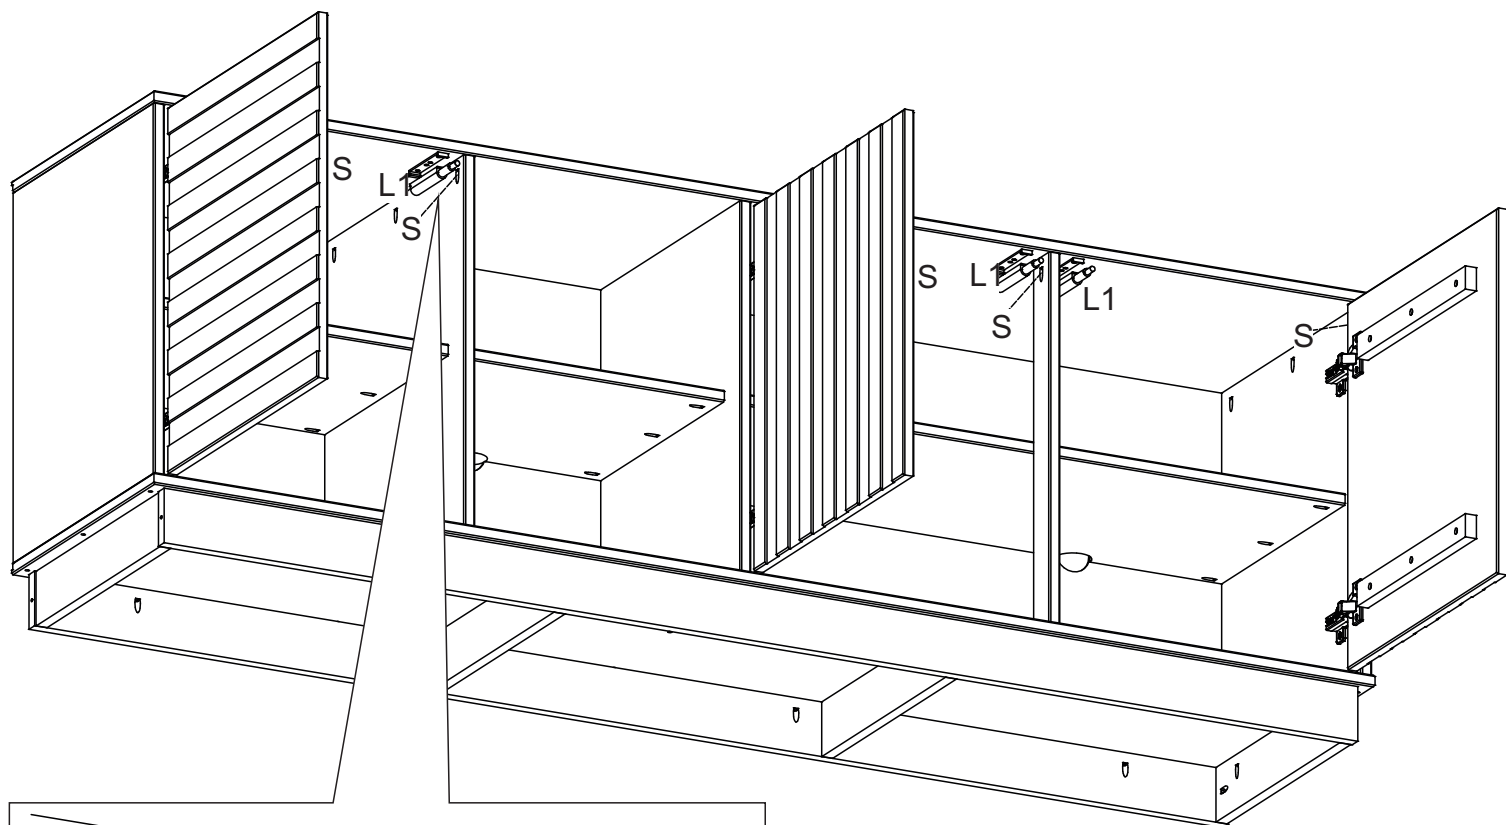


Fixing hardware (L1) according to diagram.
Attach hardware (S) part (2), (3), (4), (5) and (15).

Step 16

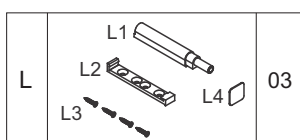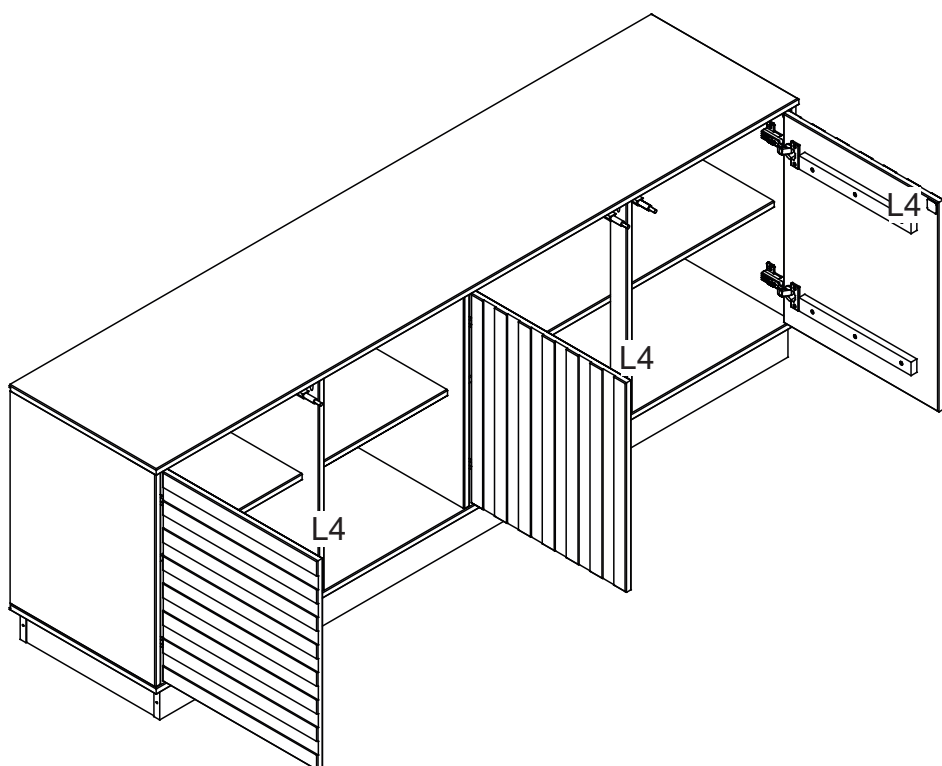

Fixing hardware (L4) according to diagram.



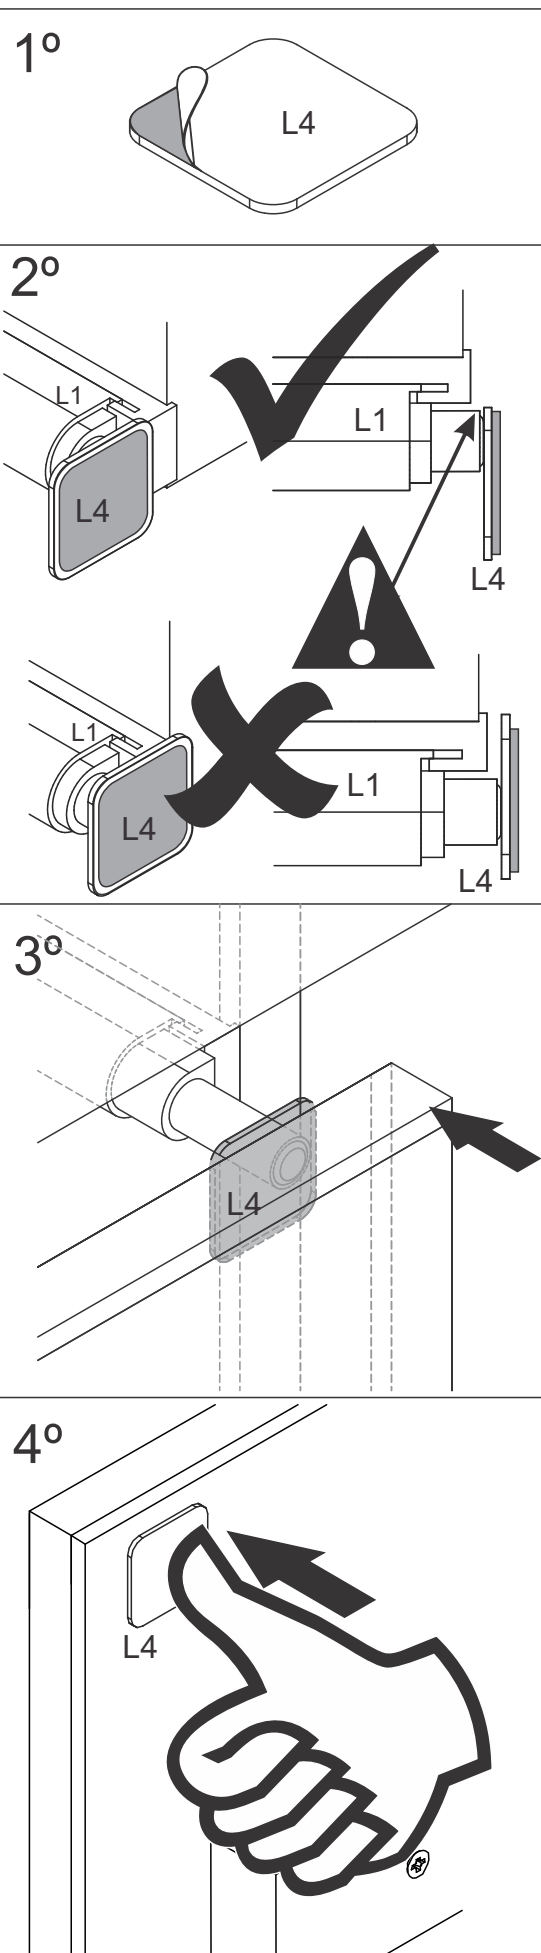





Step 17

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

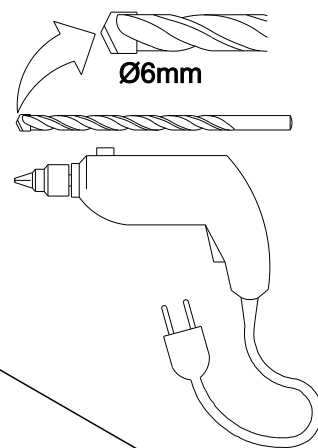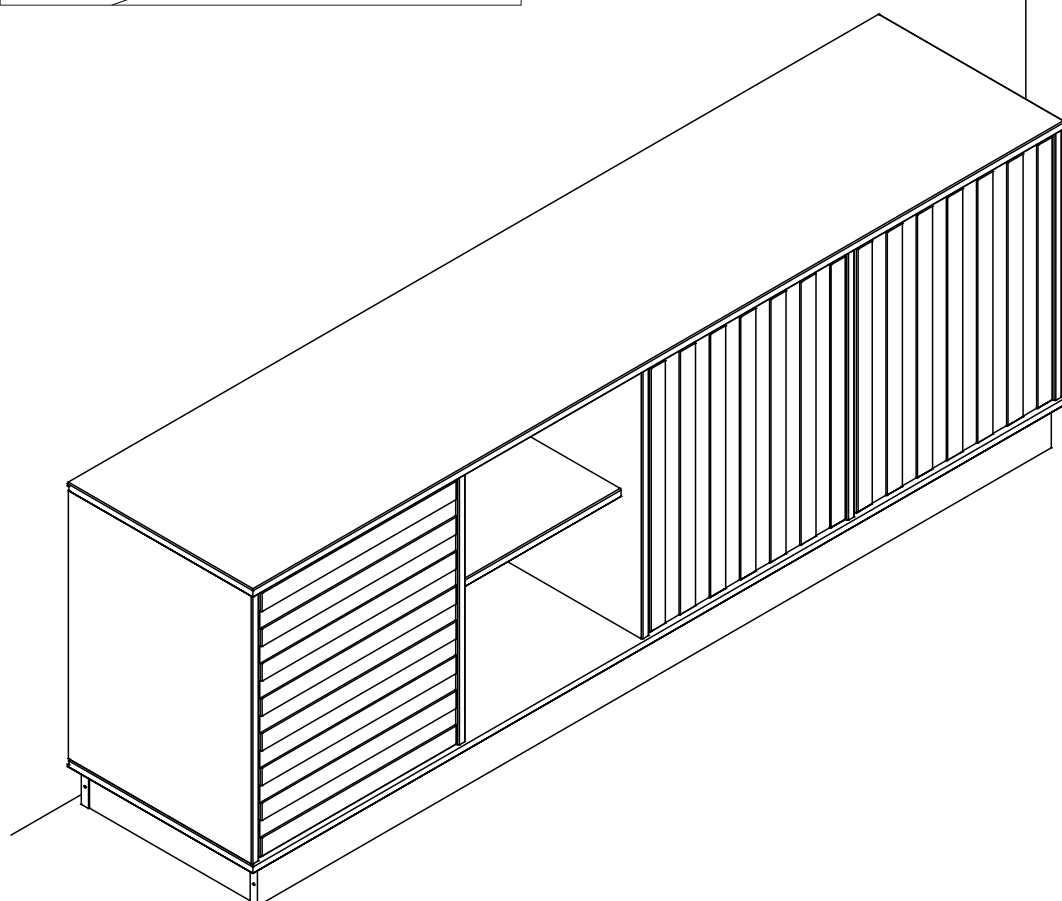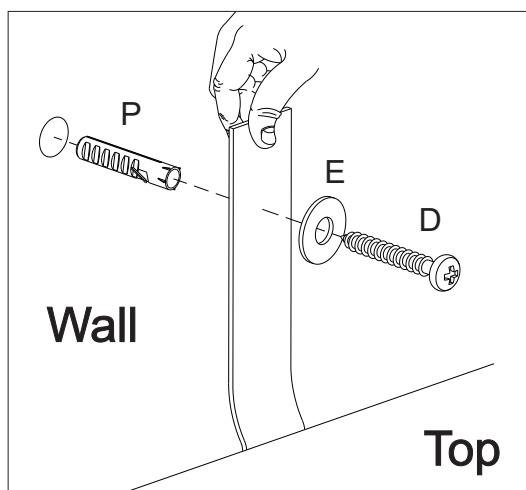Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.



D	 Ø4,0*25mm	01
E		01
P		01

Step 18

