


ASSEMBLY INSTRUCTION





12 458 B - VANITY BASE - A5

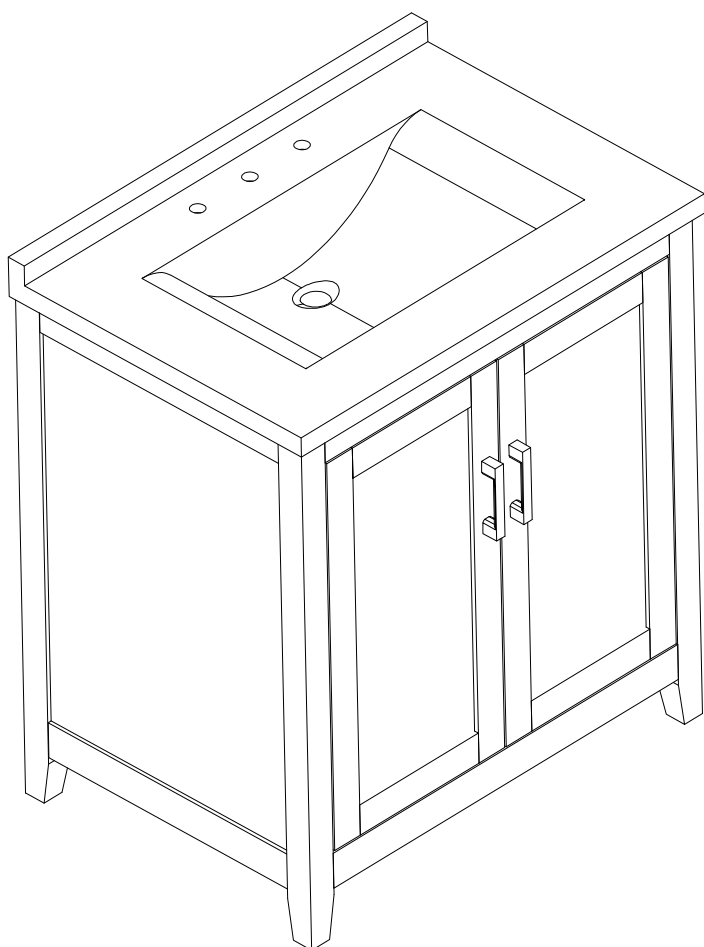






ASSEMBLY INSTRUCTION


12 458 B - VANITY BASE - A5

HARDWARE LIST

							
① M4x70= 1pc	② M6x35= 8pcs	③ M6xØ16= 8 pcs	④ Ø8x40= 2pcs	⑤ M4x50=2pcs	⑥ M4x25= 4pcs	⑦ 2pcs	ToolsNeeded

COMPONENT

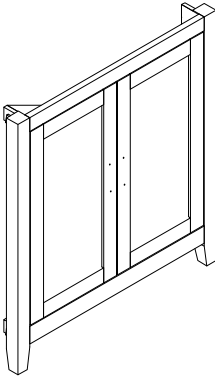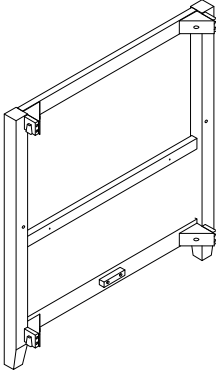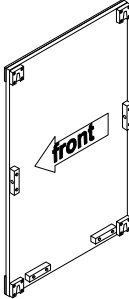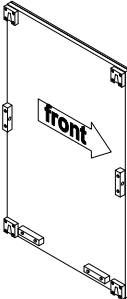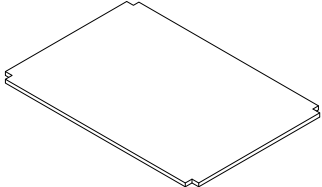				
Ⓐ x1pc	Ⓑ x1pc	Ⓒ x1pc	Ⓓ x1pc	Ⓔ x 1pc

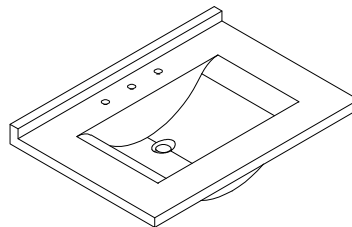

Ⓕ x 1pc

MATERIALS NEEDED (NOT INCLUDED)




Silicone


ASSEMBLY INSTRUCTION

12 458 B - VANITY BASE - A5

Step 1

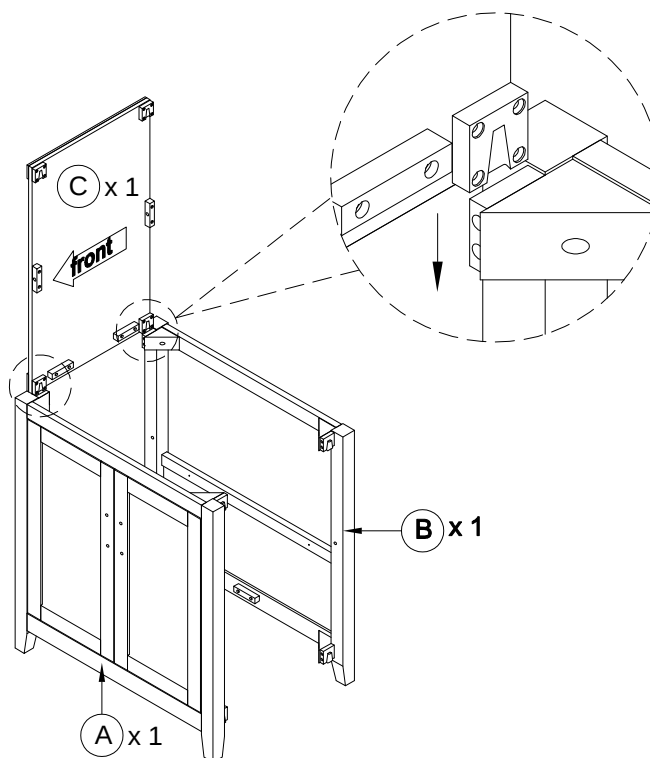


Step 2

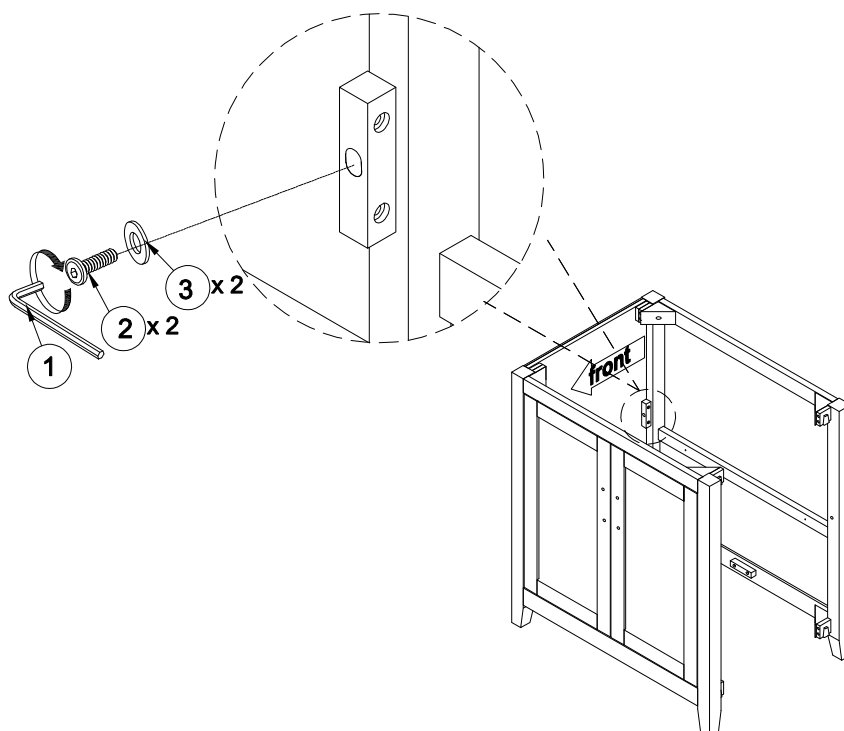


ASSEMBLY INSTRUCTION

12 458 B - VANITY BASE - A5

Step 3

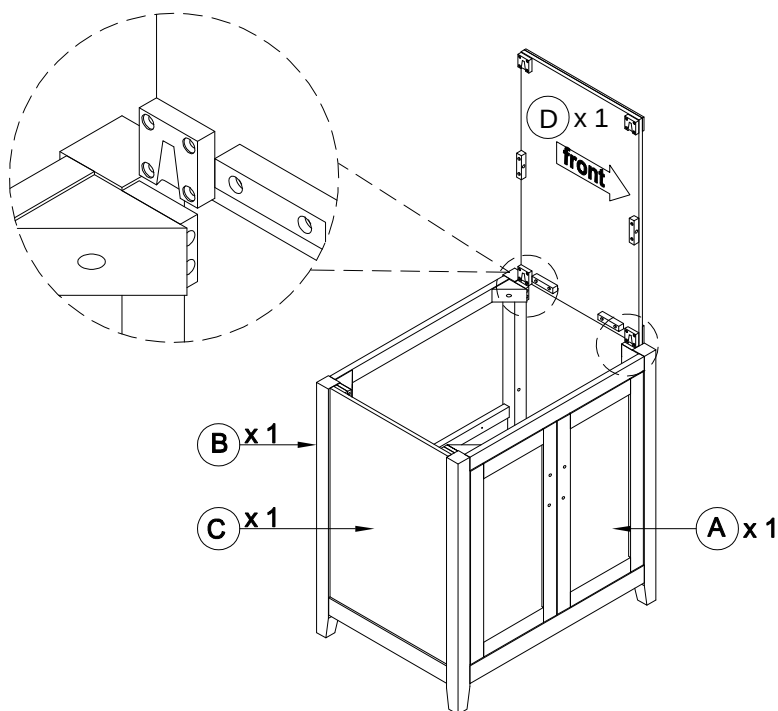

Step 4

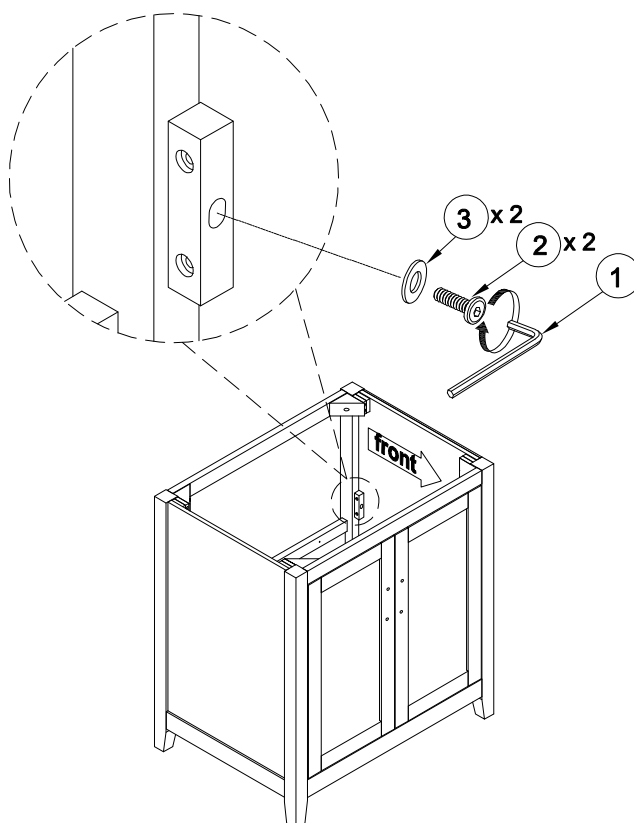


ASSEMBLY INSTRUCTION

12 458 B - VANITY BASE - A5

Step 5




Step 2

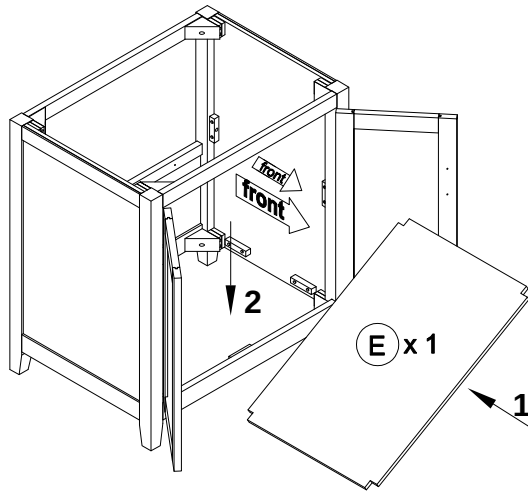

Step 6

SILICONE NOT INCLUDED


- Set the vanity on top of the vanity base, checking the location of the p-trap and drain.
- Remove the top and install the faucet per manufacturer's installation instructions.
- Hand tighten the pop-up drain with a wrench. Be careful not to over-tighten the pop-up drain, over tightening may cause cracks on the marble top.
- Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag.
- Install the faucet water lines and P-trap according to manufacturer's installation instructions

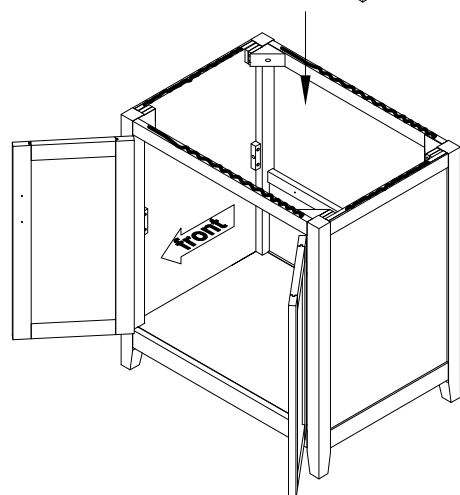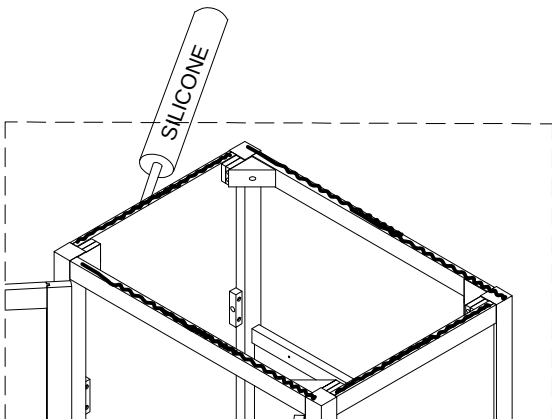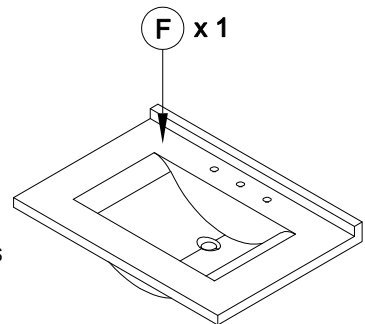


ASSEMBLY INSTRUCTION

12 458 B - VANITY BASE - A5

Step 7

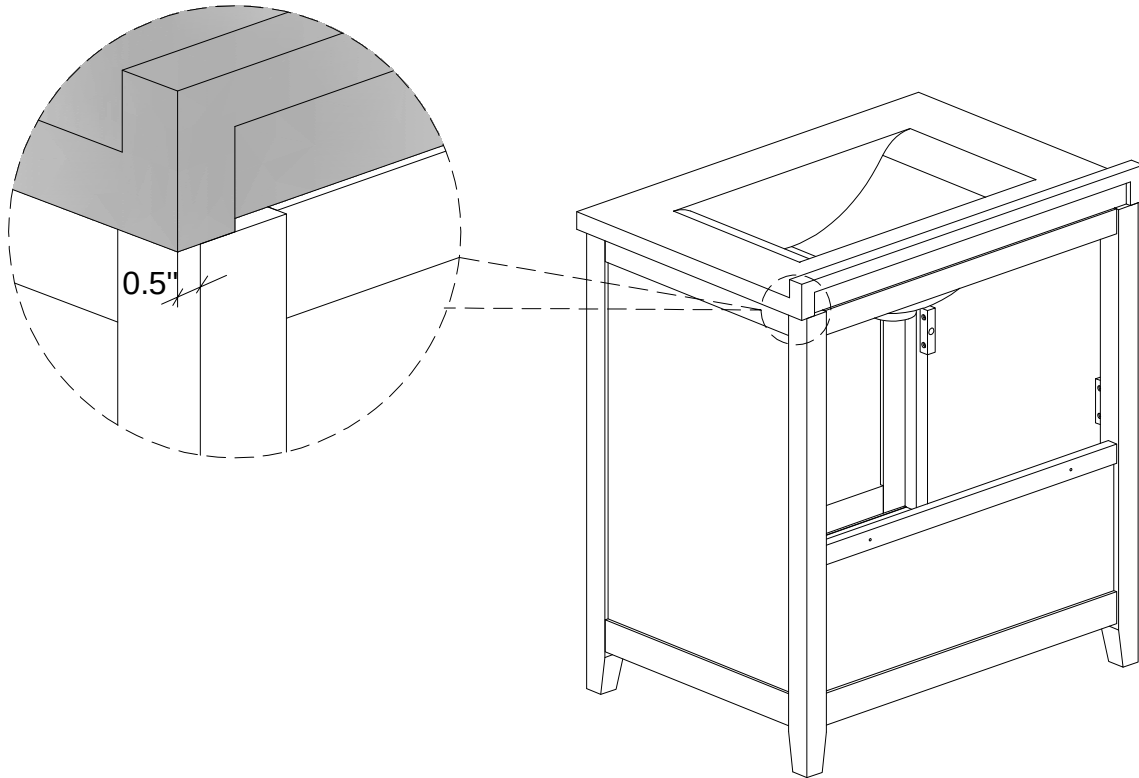


Step 8

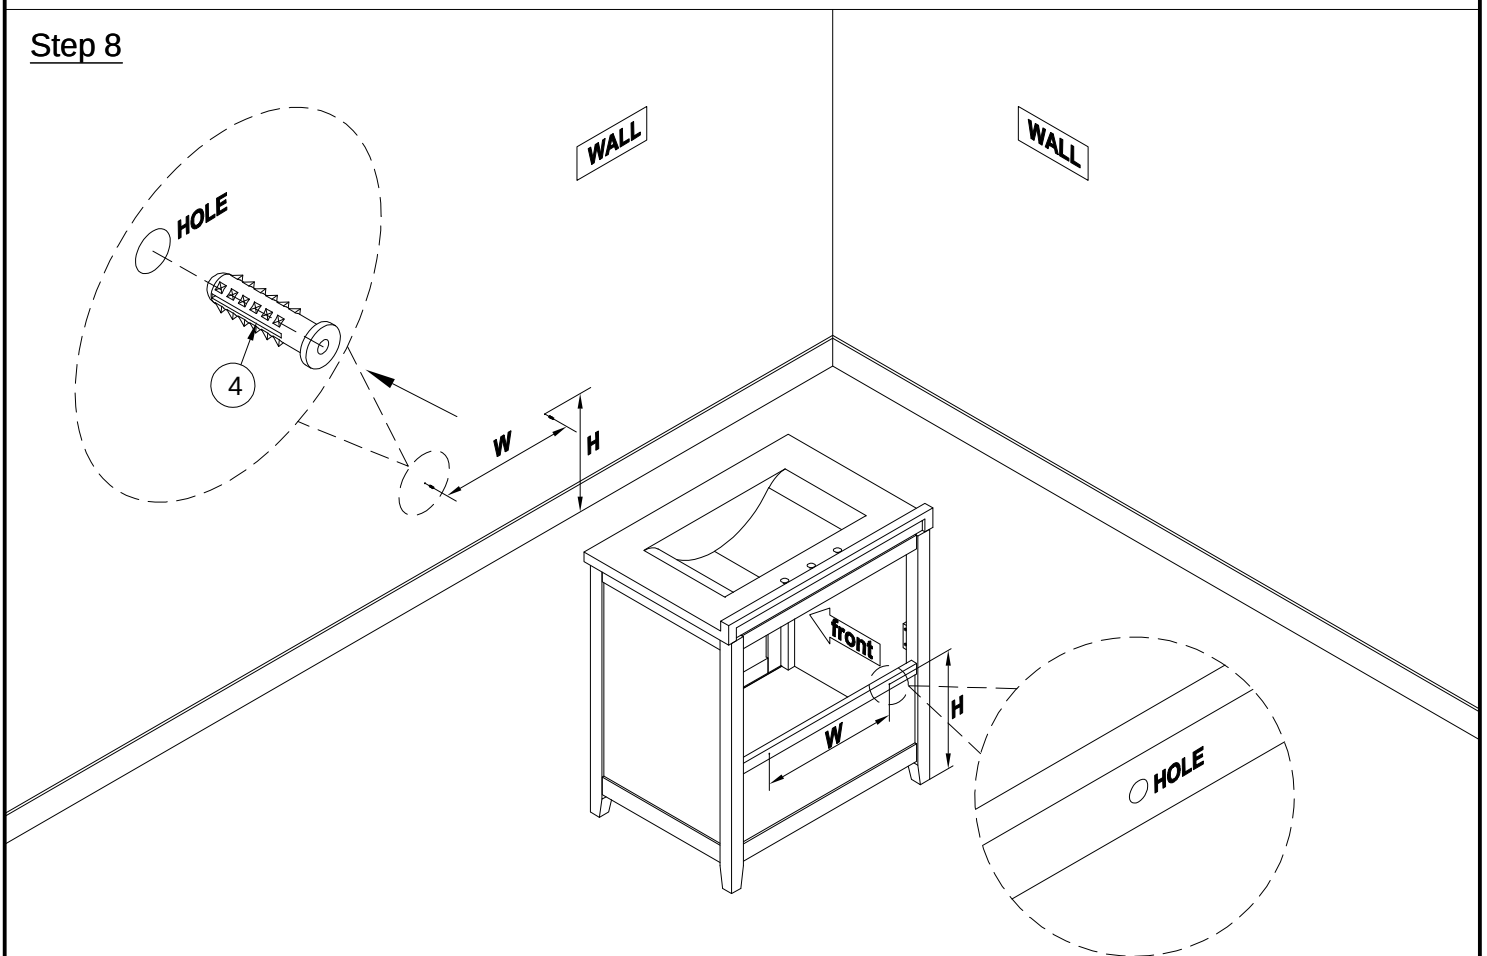

ASSEMBLY INSTRUCTION


12 458 B - VANITY BASE - A5

Step 9

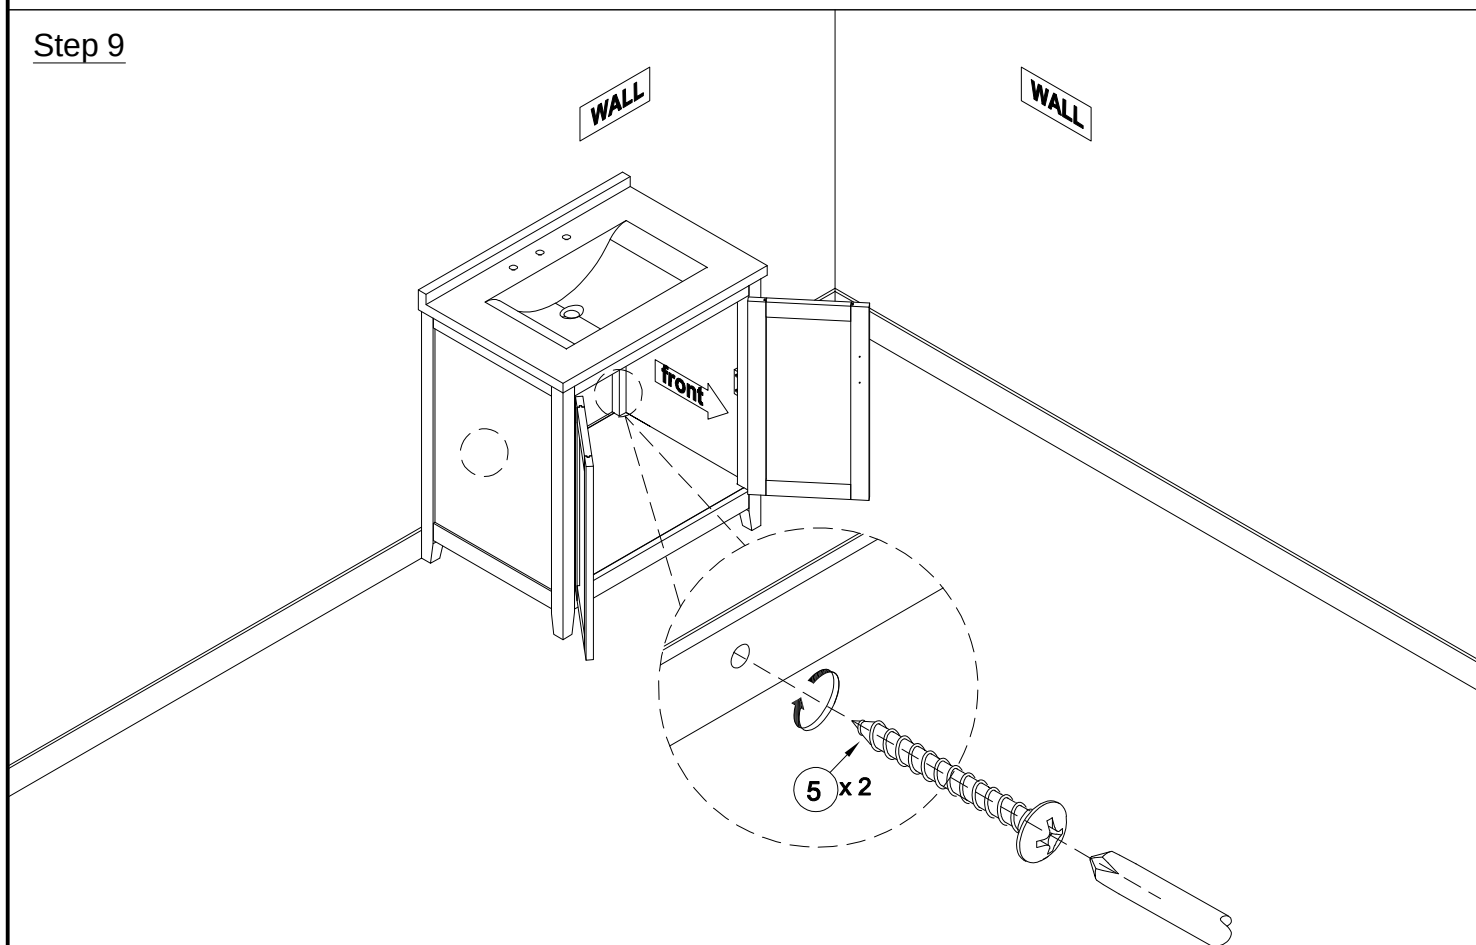

Step 10

Page 6 of 7

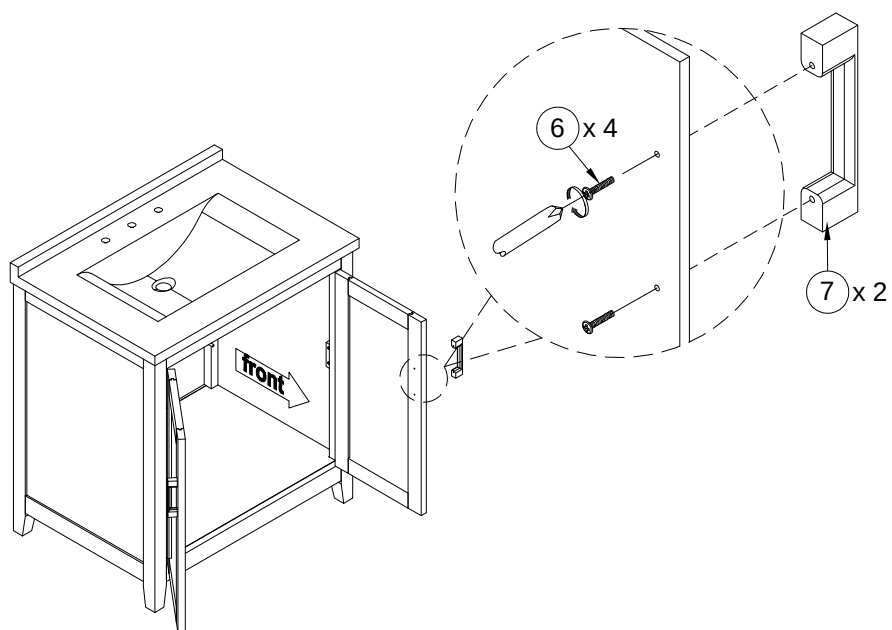

Page 7 of 7