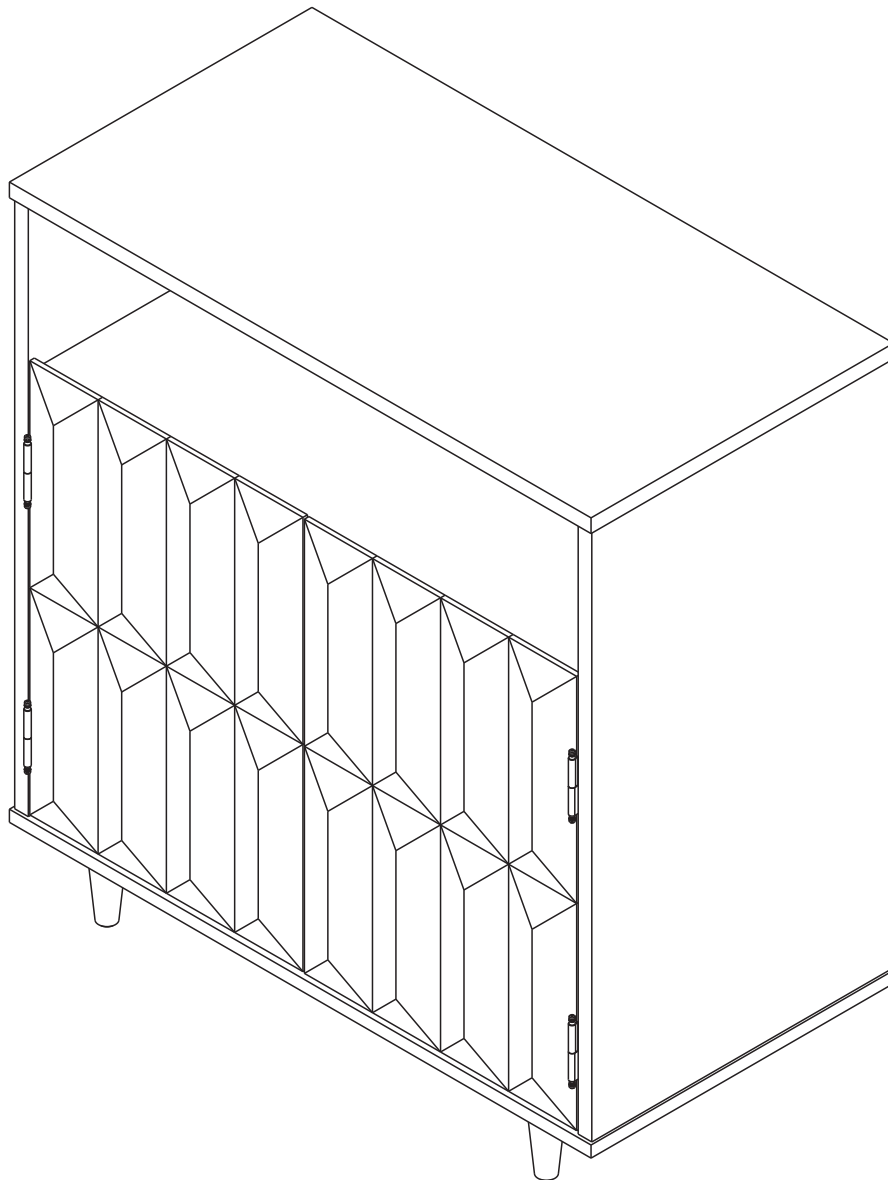


Item #: AF30HEN2D

Assembly Instructions



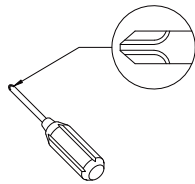
**Walker
Edison**®

Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkerredson.com

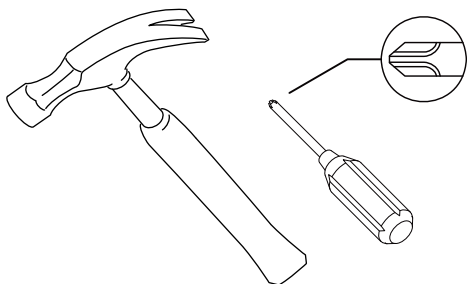
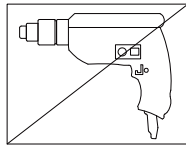
Revised 02/2021

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.



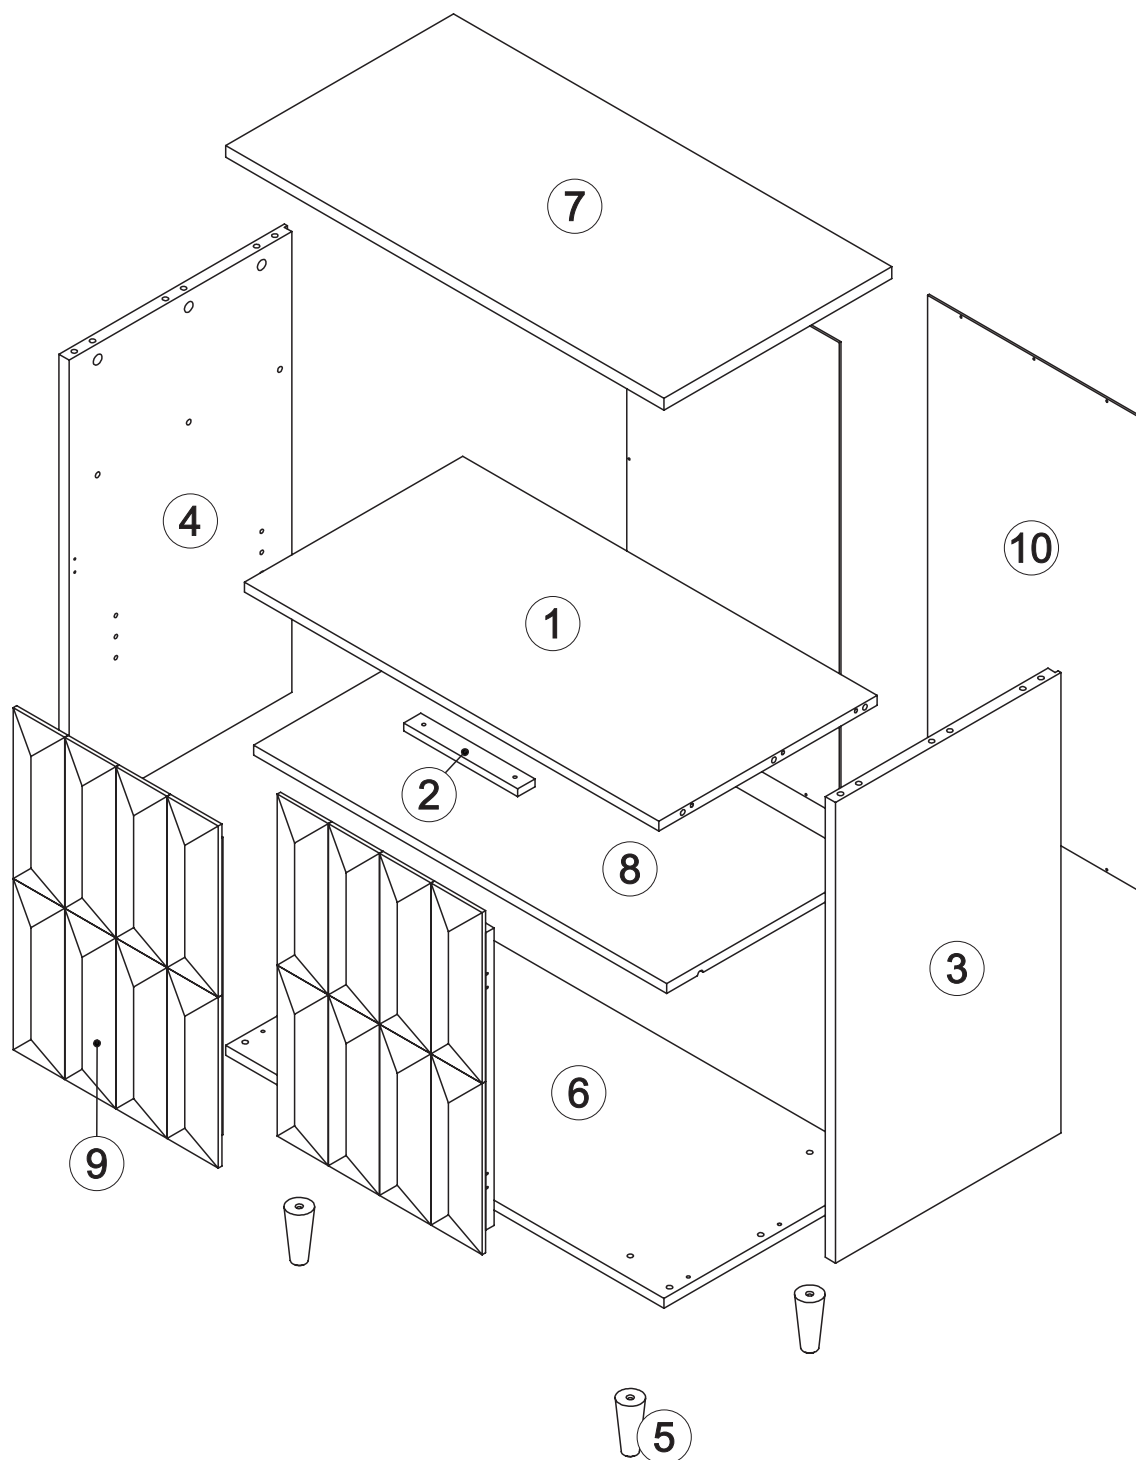
- VI. Power tools should not be used to assemble this product.











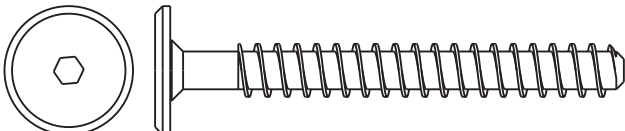
Philips head screwdriver required for assembly
(not included)

Mallet or hammer recommended for assembly
(not included)

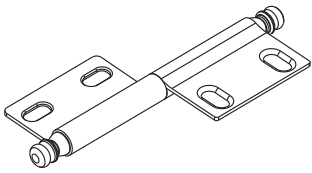
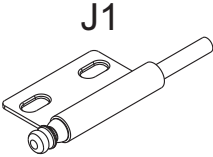
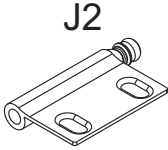
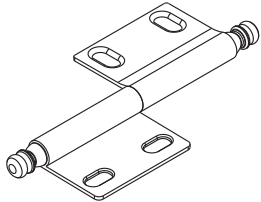
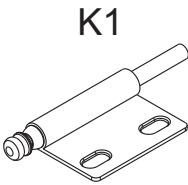
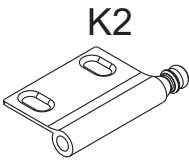


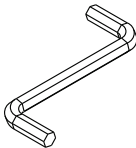

Parts List





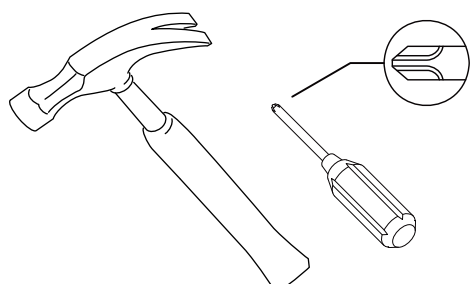
Hardware List

A		Ø 5,5x28mm	Cam Bolt	06 pcs
B		Ø 14x14mm	Cam Lock	06 pcs
C		Ø 4,0x30 mm	Screw	06 pcs
D		Ø 4,0x40 mm	Screw	06 pcs
E		Ø 8,0x30 mm	Wood dowel	18 pcs
F			Plastic Support	04 pcs
G		Ø 3,5x16 mm	Screw	20 pcs
H		3,5x16 mm	Screw	29 pcs
I		7x60 mm	Bolt	04 pcs

Hardware List

J		J1 	J2 	Hinge	02 pcs
K		K1 	K2 	Hinge	02 pcs
L	L1 	L2 		Magnetic Latch	02 pcs
M				Hex key 01 pc	01 pcs
N				Profile “H”	01 pcs

V			Ø 3,5x30mm	Screw	01 pc
W			Ø 6mm	Plastic Anchor	01 pc
X				Washer	02 pcs
Y				Strip	01 pc
Z			Ø 3,5x16mm	Screw	01 pc





Philips head screwdriver required for assembly
(not included)

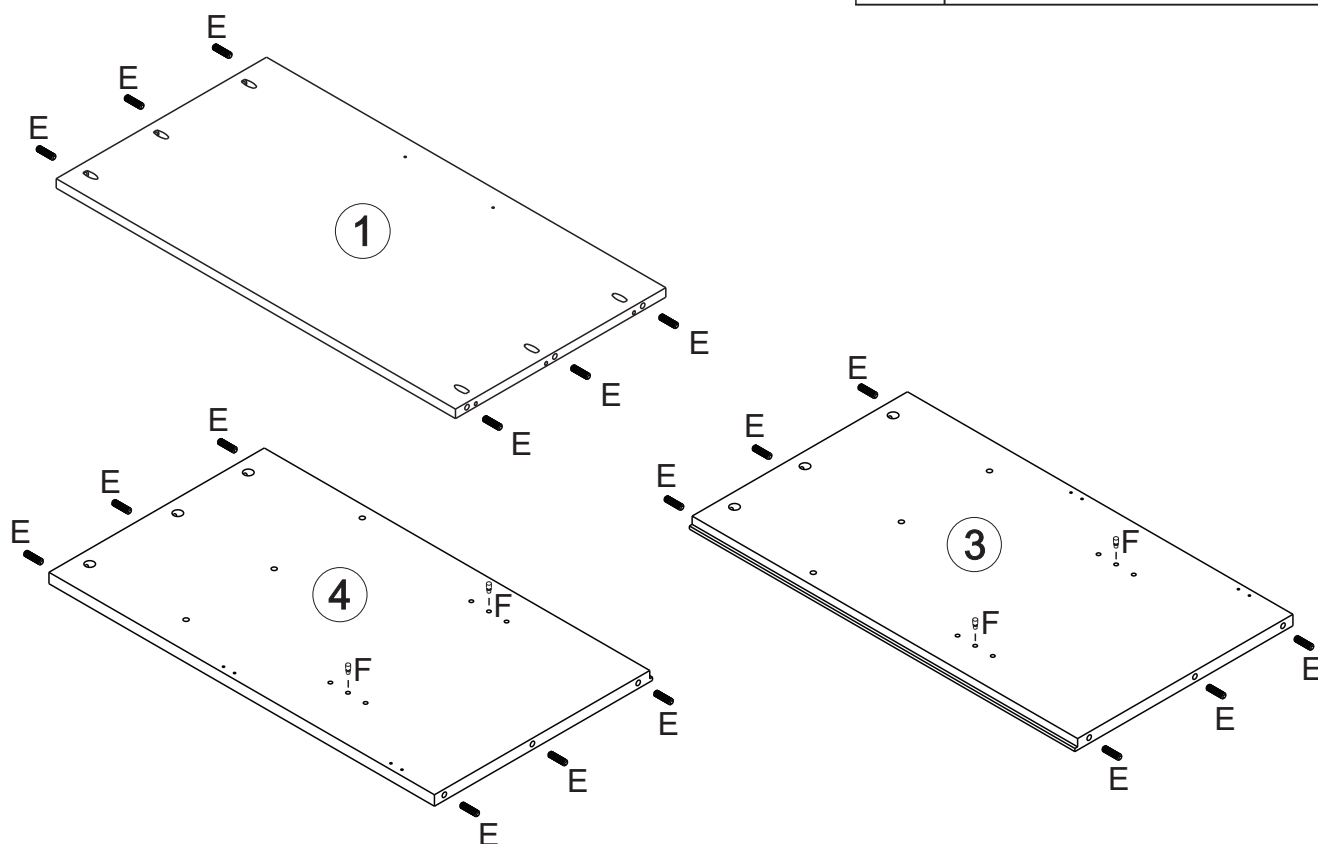
Mallet or hammer recommended for assembly
(not included)

**The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.**

Step 1




Insert wooden dowel (E) into part (1),(3), and (4). Insert support (F) into part (3) and (4).

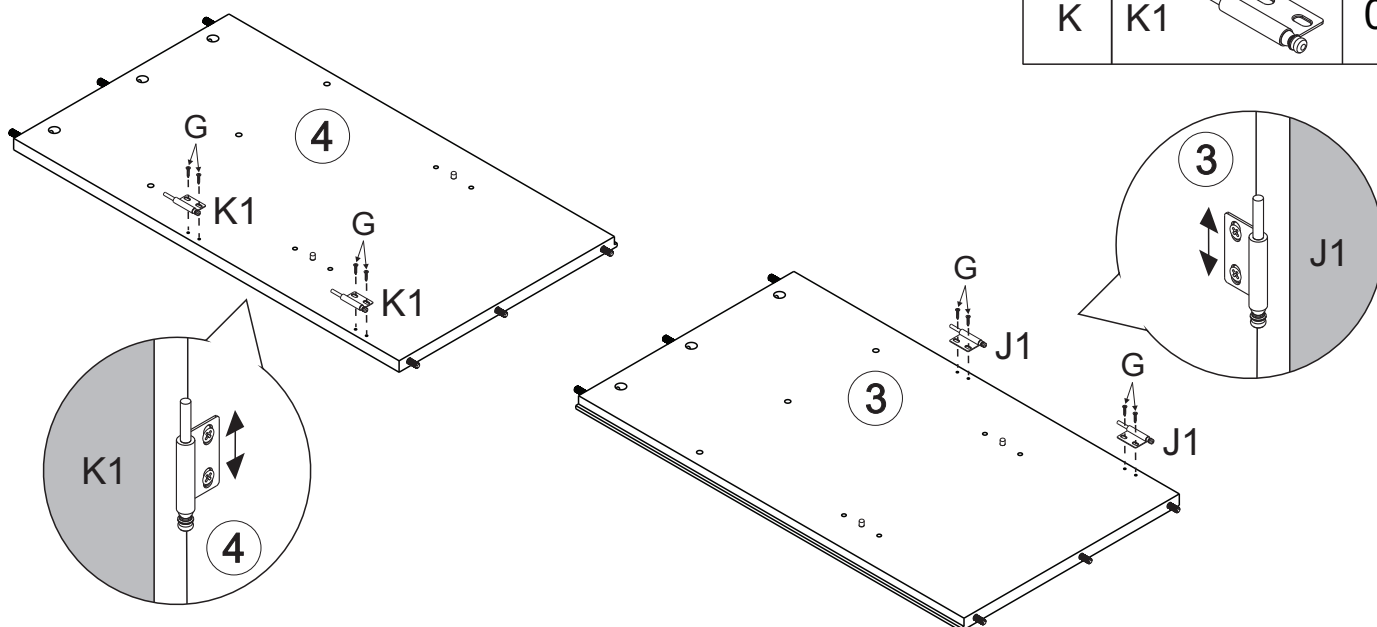
E		18
F		04





Step 2

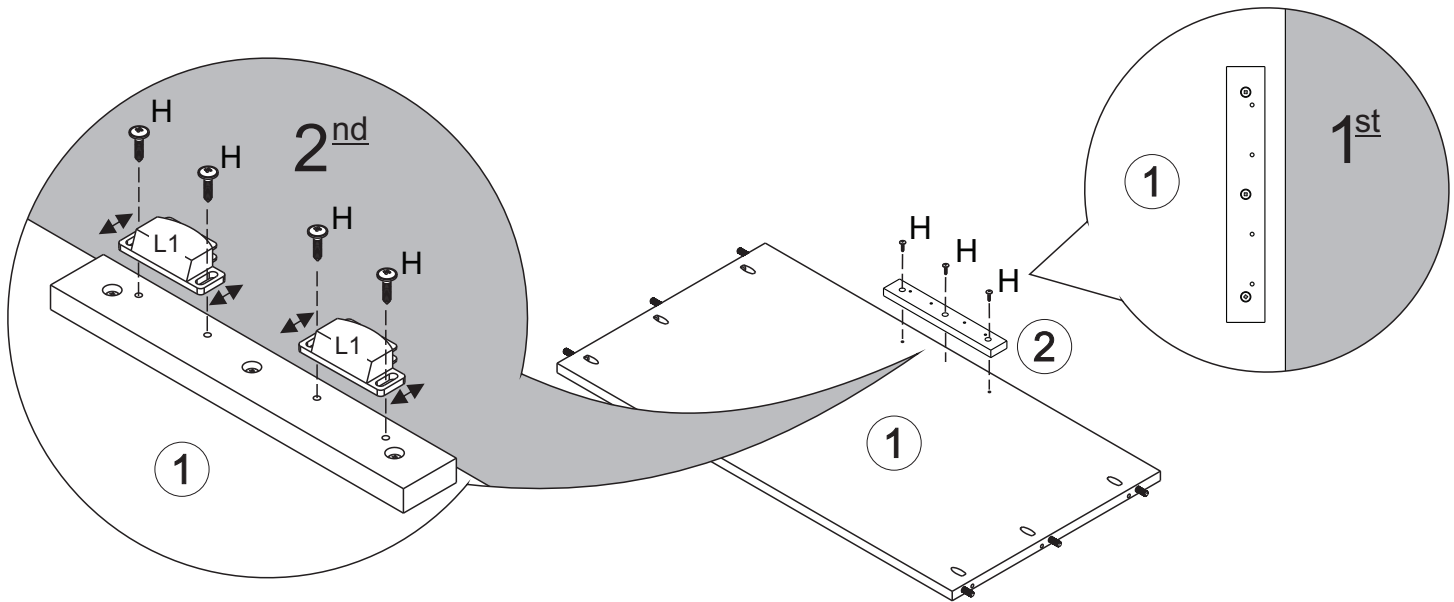
Attach hardware (K1) in the pre drilled side of part (4) using screw (G). Fixing hardware (J1) in the pre drilled side of part (3) according to detail below.

G		08
J	J1 	02
K	K1 	02




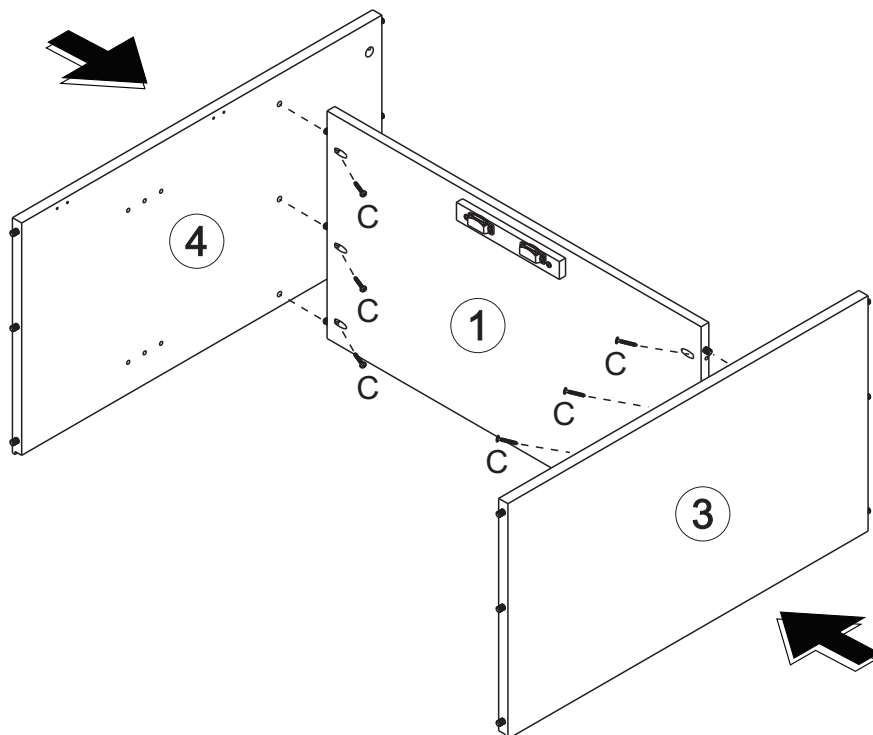
Step 3 Secure part (2) to part (1) with screw (H).
Attach hardware (L1) in the pre drilled of
part (2) using screw (H).

H		07
L	L1 	02





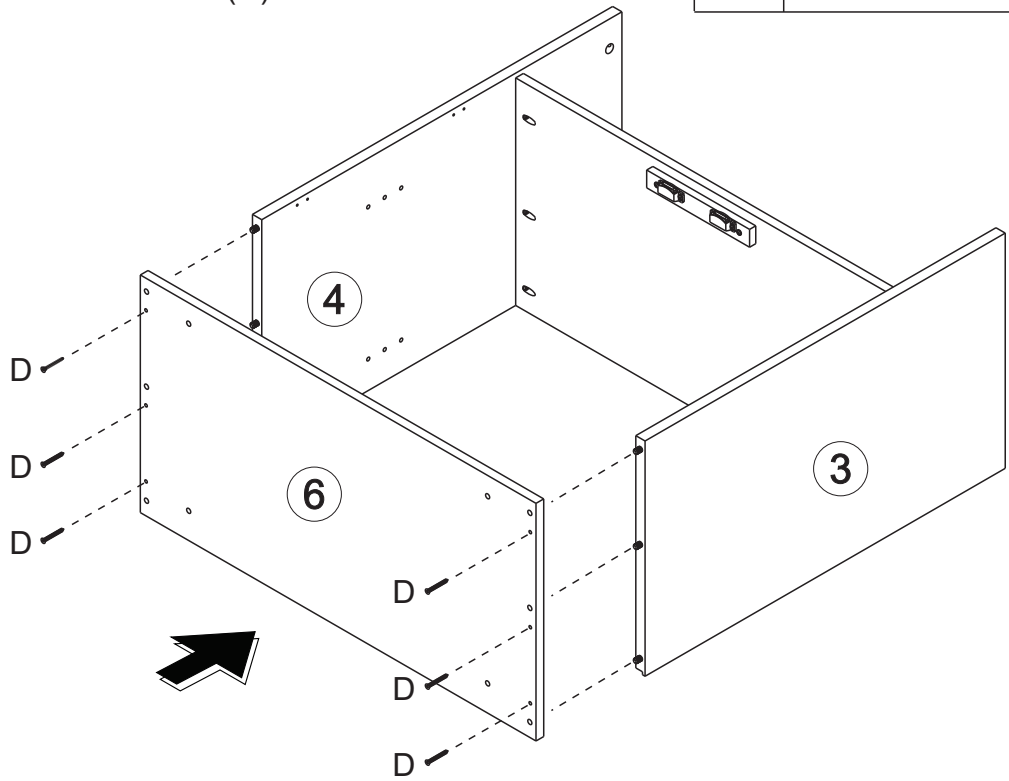
Step 4 Secure part (3) and (4) to part (1)
with screw (C).

C		06
---	---------------------------------------------------------------------------------------	----

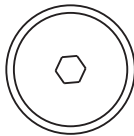
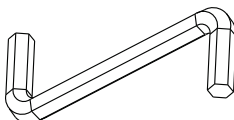


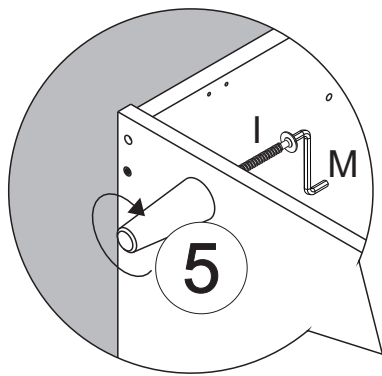
Step 5 Secure part (6) to part (3) and (4) with screw (D).

D			06
---	------------------------------------------------------------------------------------	------------------------------------------------------------------------------------	----

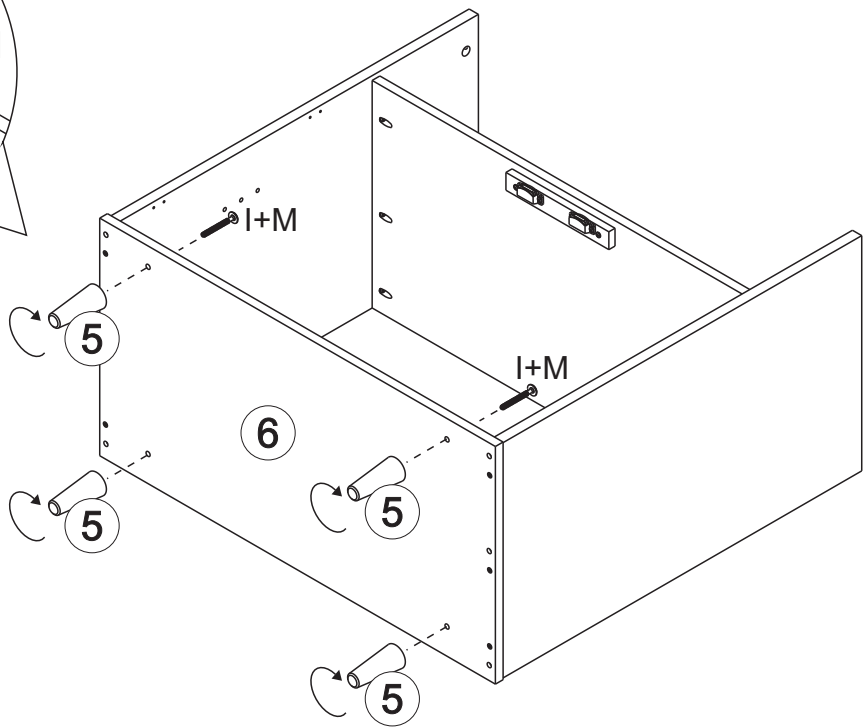


Step 6 Secure parts (5) to part (6) with screw (I) and key (M).

I		04
M		01

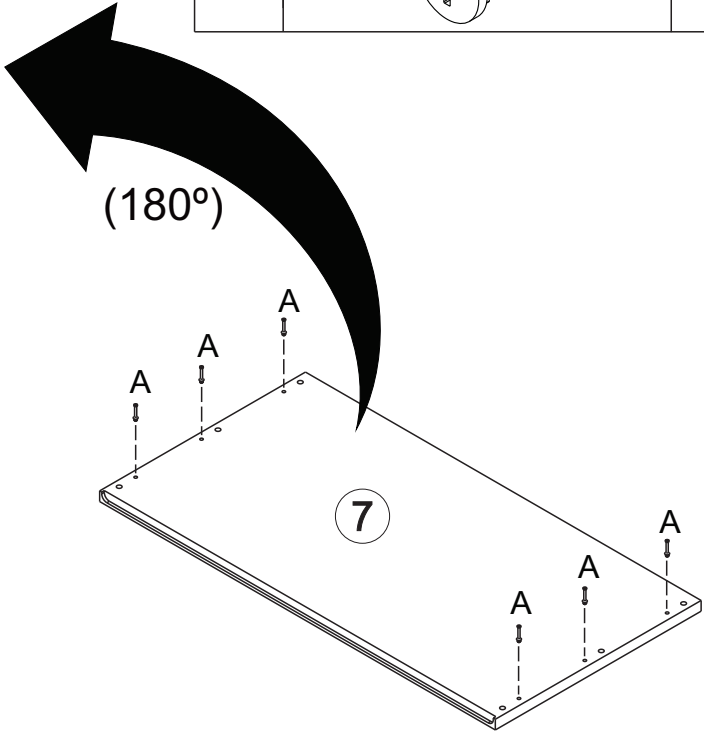
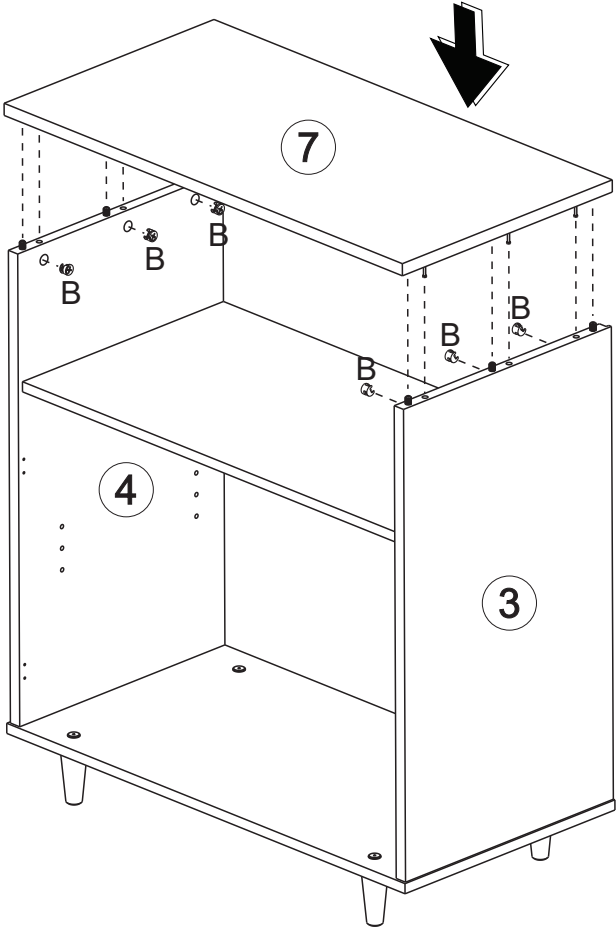


Use the hex key to insert screw I into the floor. Rotate the feet to attach to the unit.



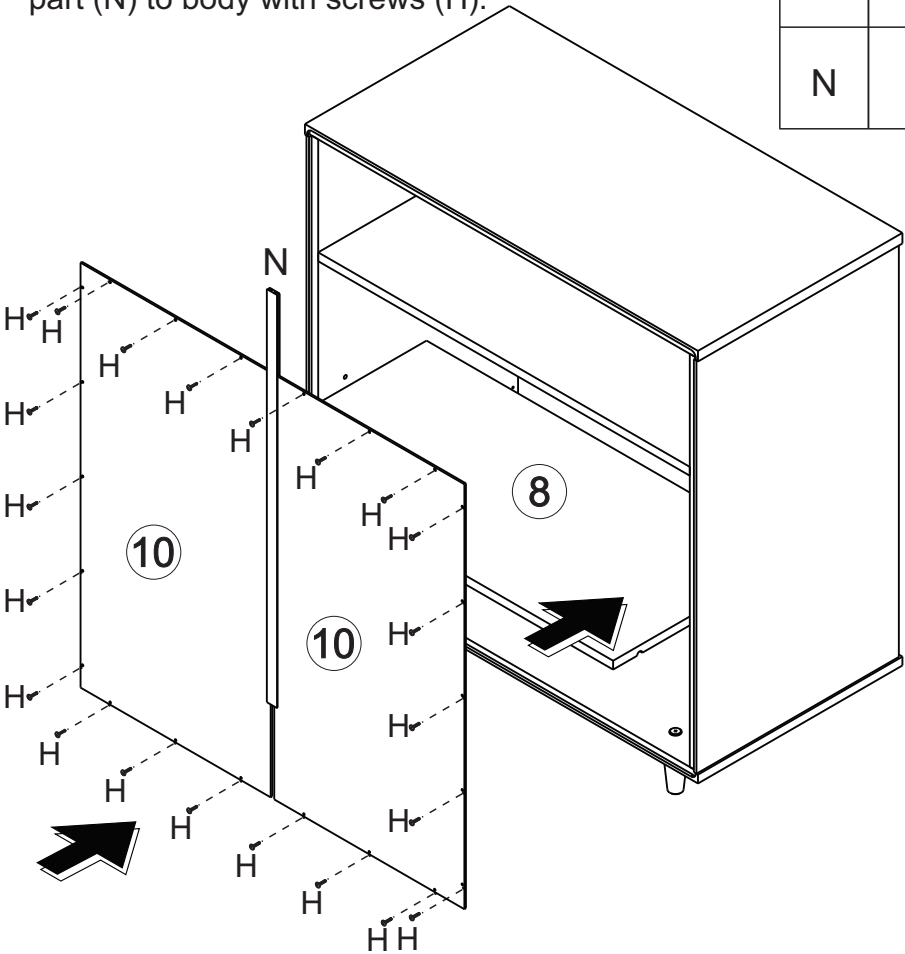
Step 7 Attach cam bolt (A) to part (7). Secure part (7) to part (3) and (4) using minifix cam lock (B).

A		06
B		06







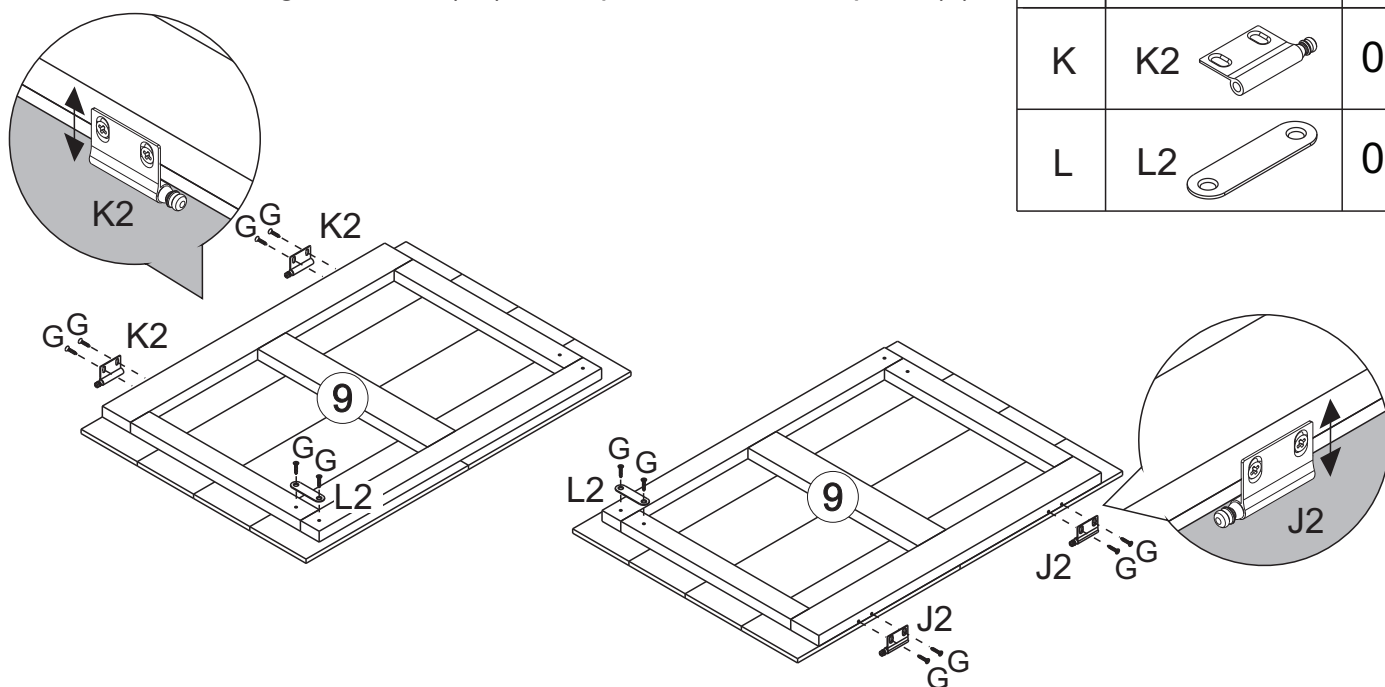
Step 8 Insert part (8) and secure back panel (10) with part (N) to body with screws (H).

H		22
N		01

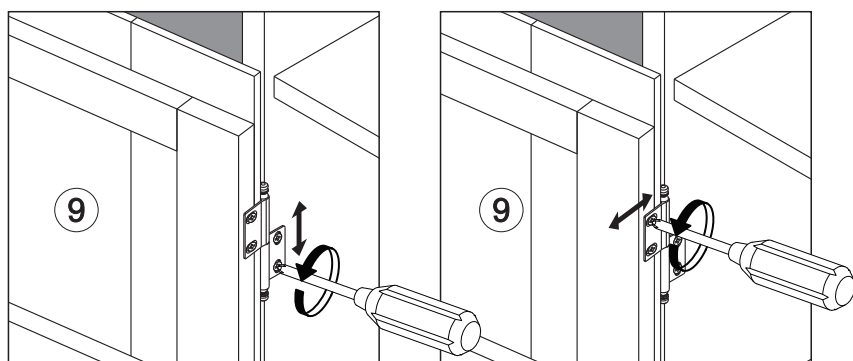
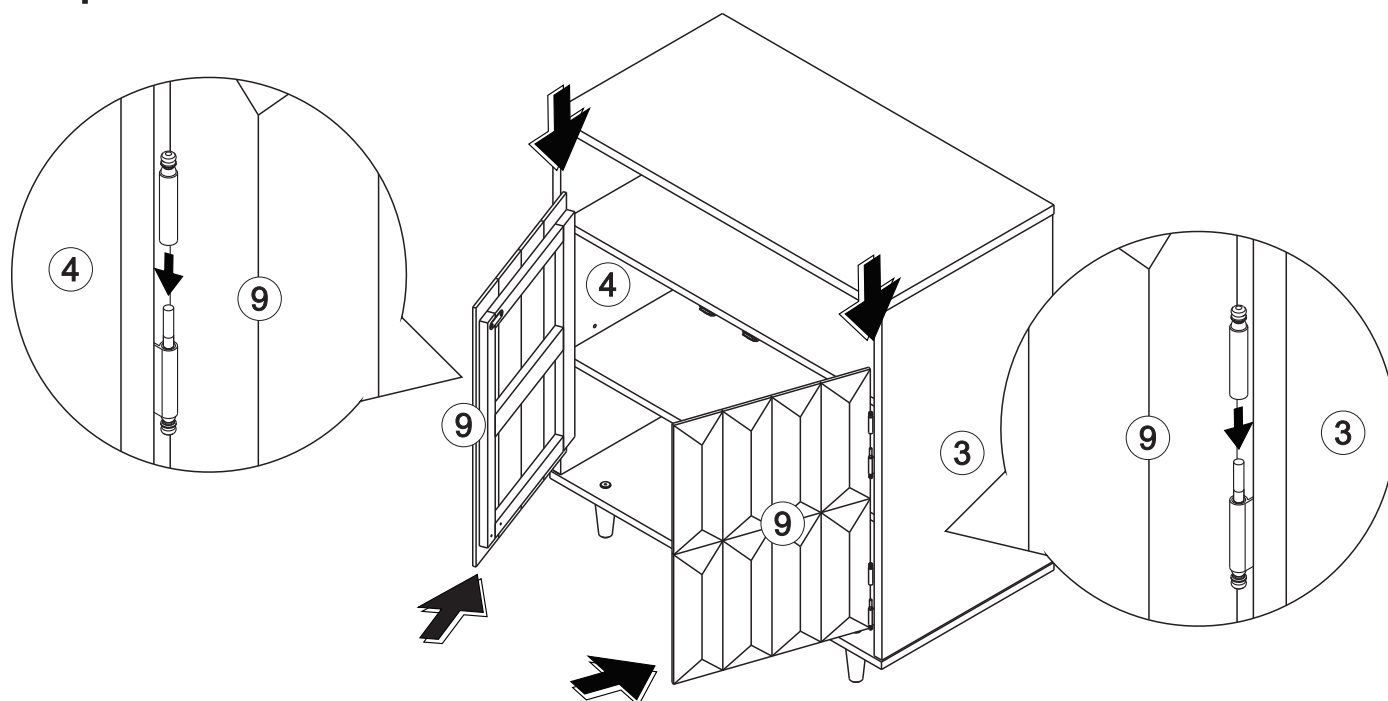


Step 9 Attach hardware (K2) in the pre drilled of part (9) using screw (G).
 Fixing hardware (J2) in the pre drilled of part (9) using screw (G) according to detail below.
 Fixing hardware (L2) in the pre drilled side of parts (9).

G		12
J	J2 	02
K	K2 	02
L	L2 	02



Step 10 Secure doors (9) to part (3) and (4) according to detail below.

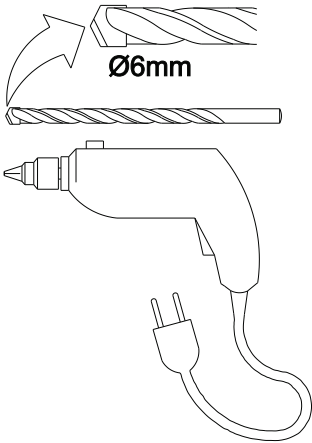
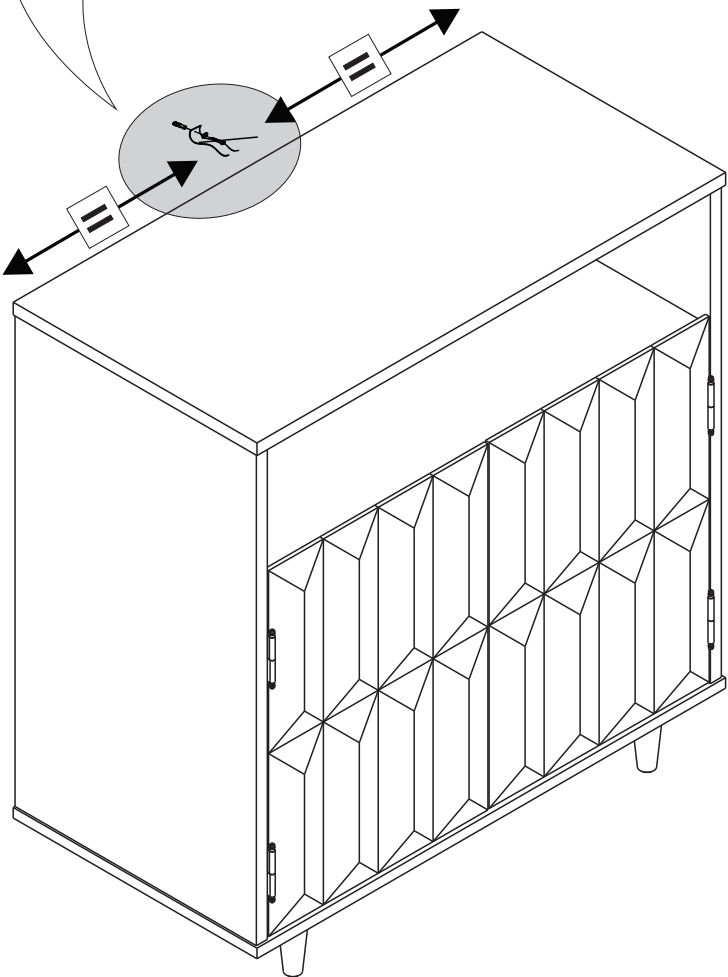
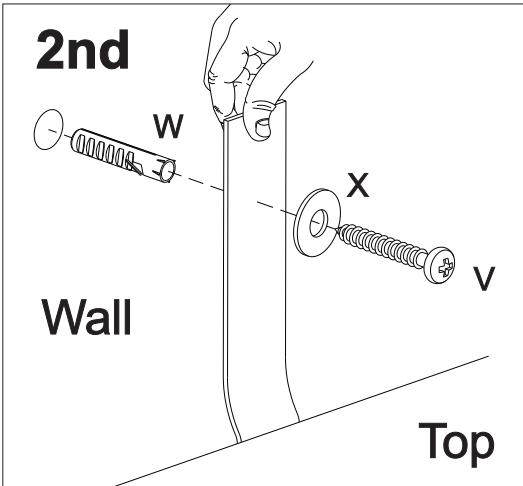
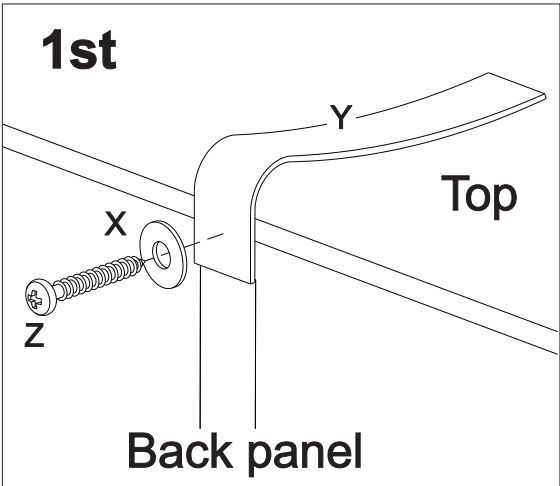


Step 11






WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.



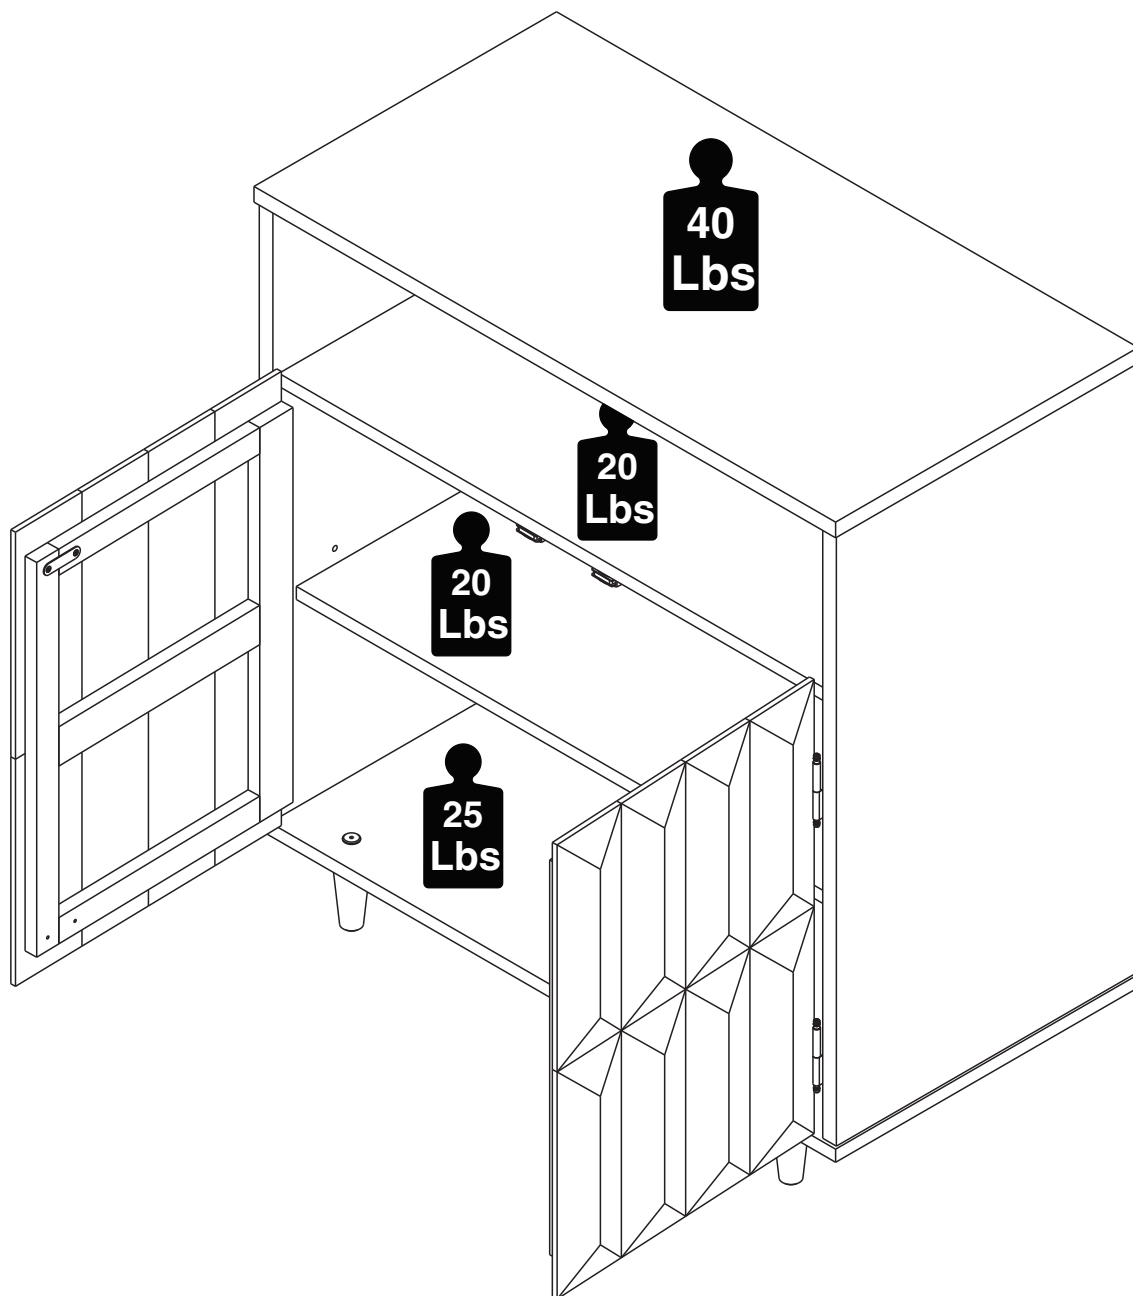
Hardware of Wall Anchor

V		Ø3,5*30mm	01
W		Ø6mm	01
X			02
Y			01
Z		Ø3,5*16mm	01

WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

Final Assembly

Step 12



Assembly Complete!