


# Item #: B38LO2D

## Assembly Instruction

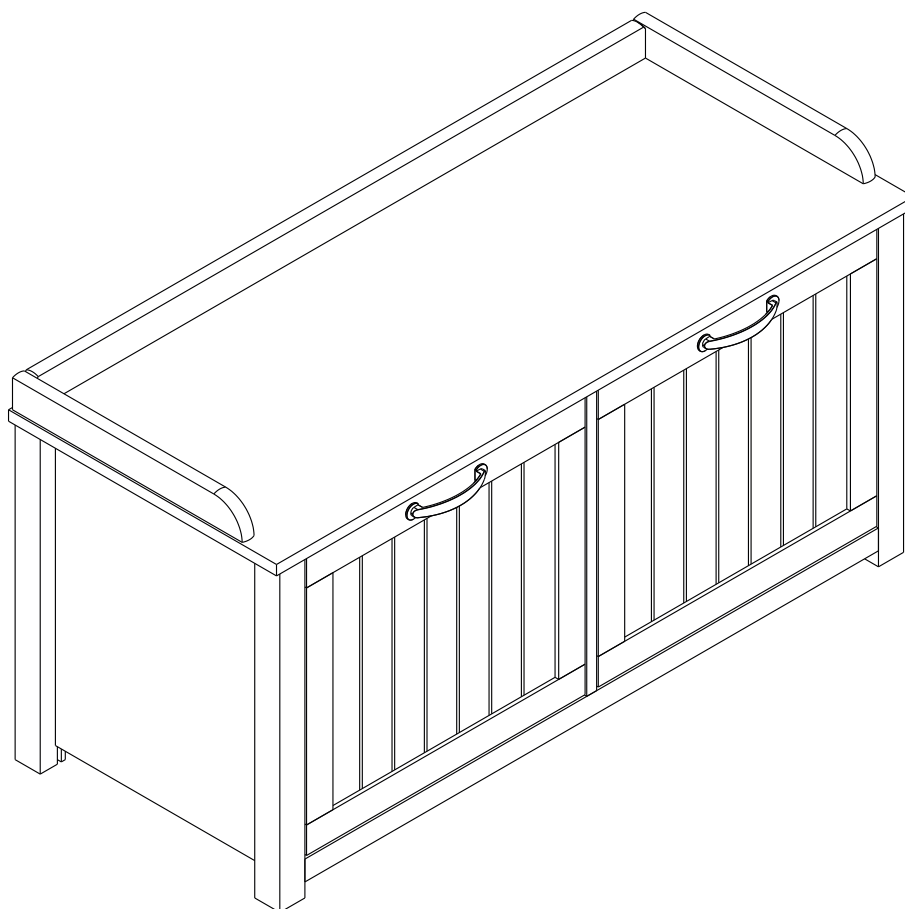


Please visit our website for the most current instructions, assembly tips report damage, or request parts. [www.walkeredison.com](http://www.walkeredison.com)


Revised 12/2020

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product .

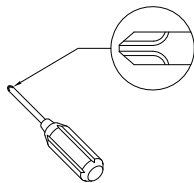



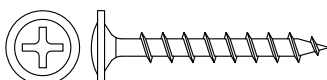
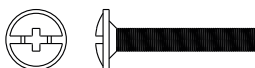
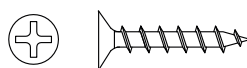
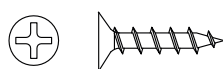
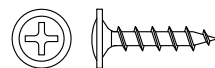


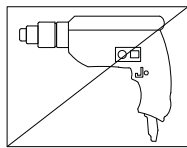
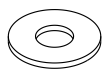
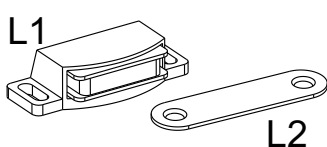
- VI. Power tools should not be used to assemble this product .

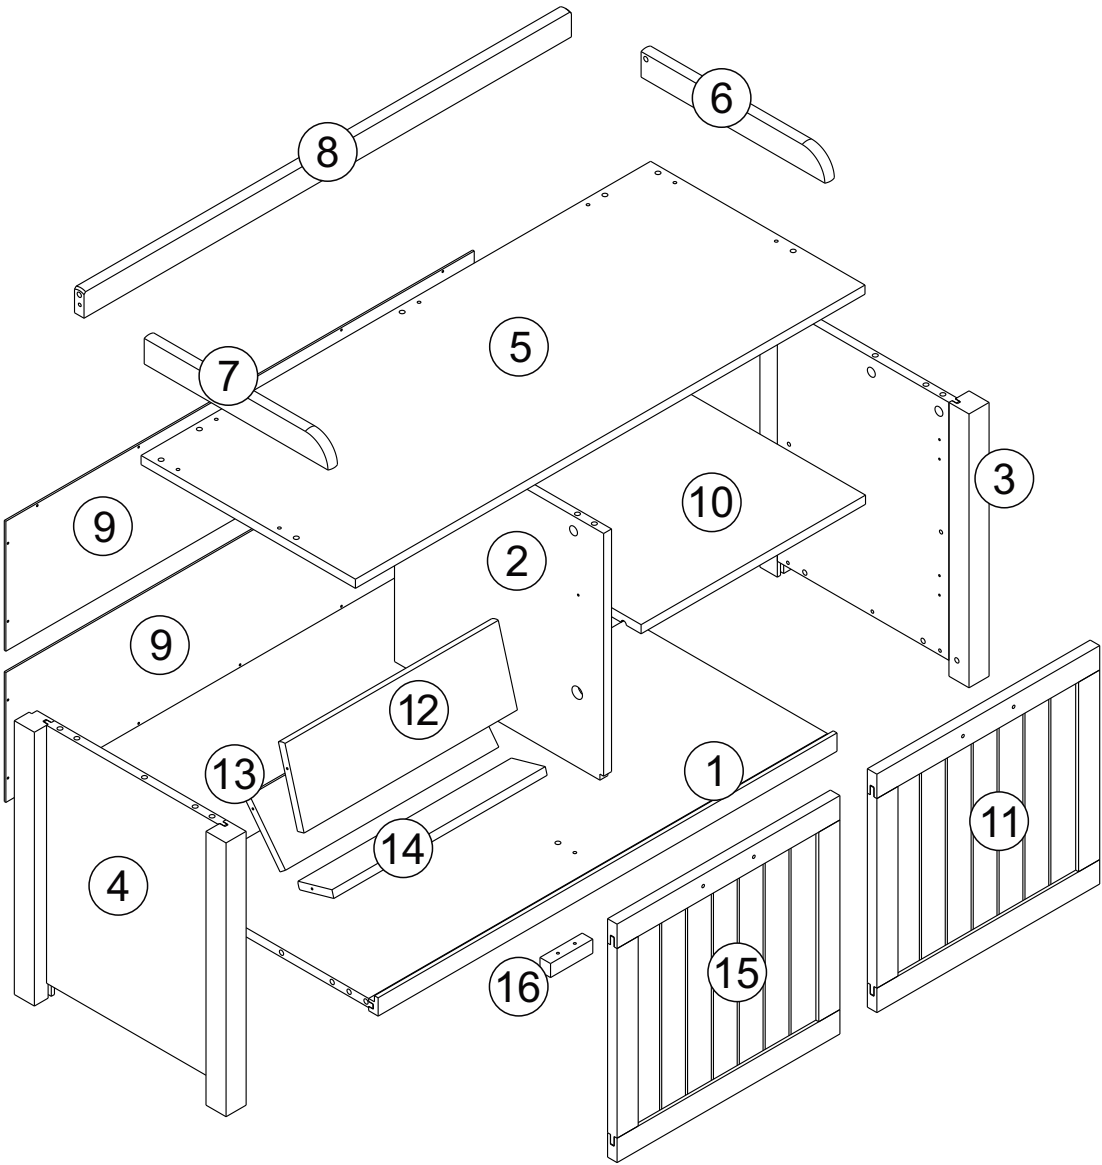




# Parts List


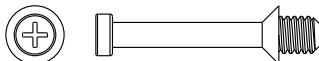



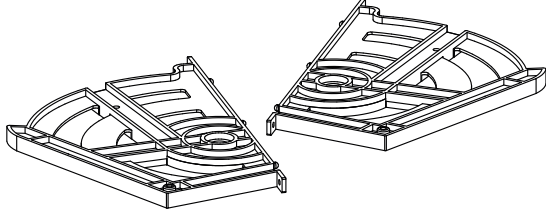



# Hardware List

A		Ø 5,5x28mm	Cam Bolt	15 pcs
B		Ø 14x14mm	Cam Lock	15 pcs
C		Ø 4,0x30 mm	Screw	13 pcs
D		M4x22mm	Screw	04 pcs
E		Ø 3,5x20 mm	Screw	02 pcs
F		Ø 3,5x16 mm	Screw	22 pcs
G		Ø 3,0x16 mm	Screw	18 pcs
H		Ø 8,0x30 mm	Wood dowel	23 pcs
I			Knob	02 pcs
J			Support	04 pcs
K			Washer	02 pcs
L			Magnetic Latch	01 pc
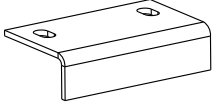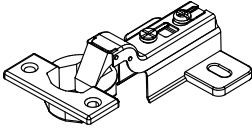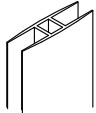
# Hardware List

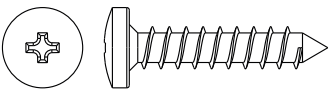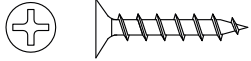M		Jamb	01 pc
N		Hinge	02 pcs
O			01 pc

P		Ø 5,5x25 mm	Screw	02 pcs
Q		Ø 3,5x20 mm	Screw	02 pcs
R				02 pcs
S				02 pcs
T				02 pcs
U				01 pc


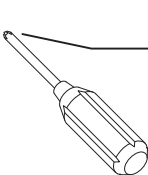


Philips head screwdriver required for assembly  
(not included)

*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*




# Step 1

Insert wooden dowel (H) into part (1), (2), (3), (4), (6), (7) and (8).

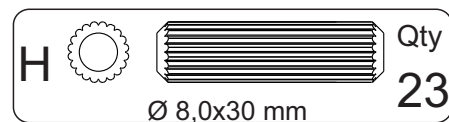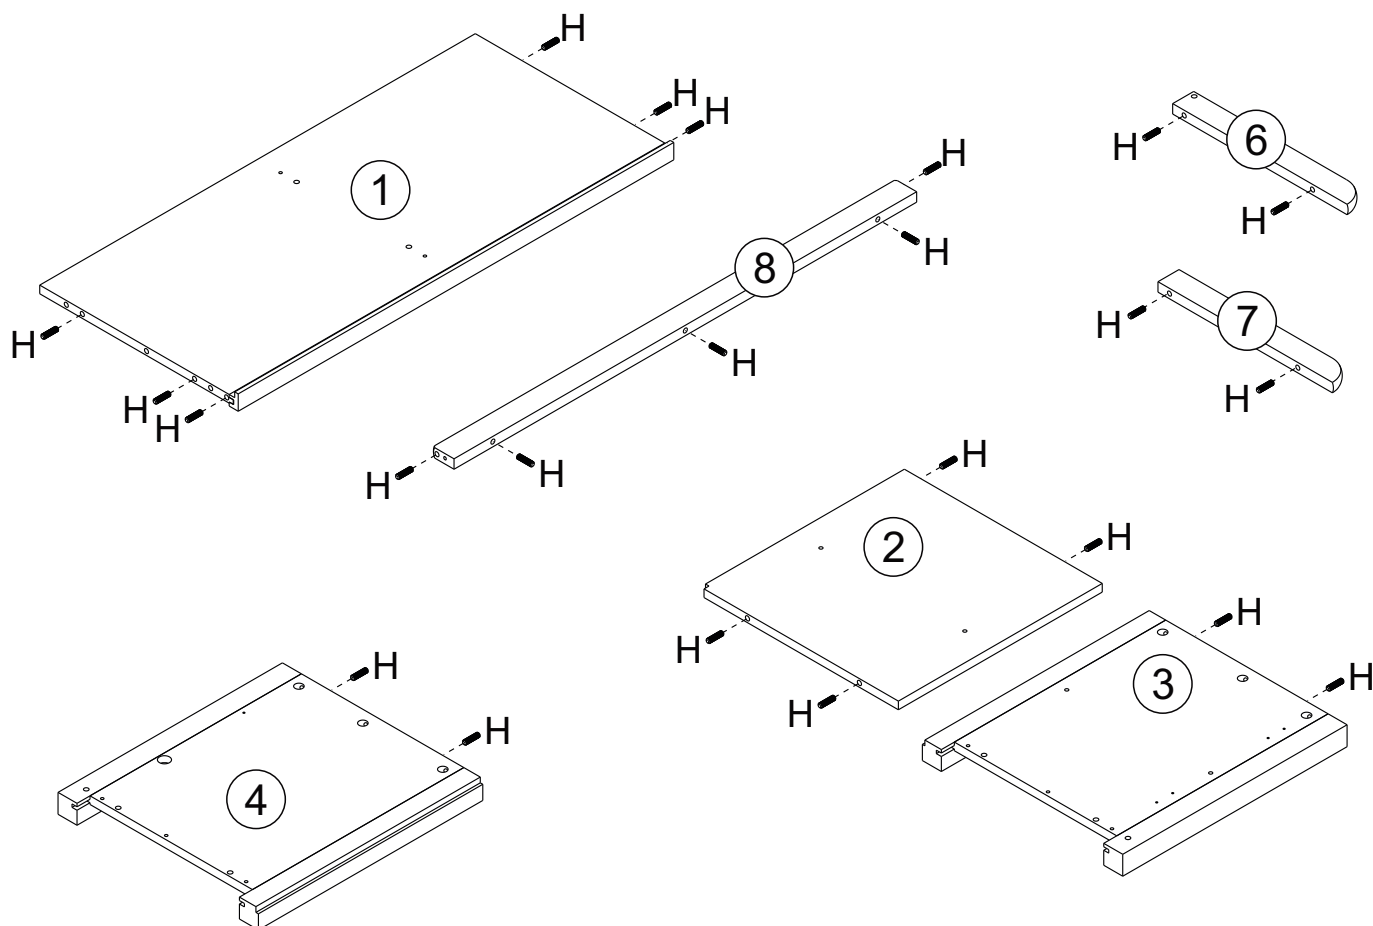



# Step 2

Attach minifix cam lock (A) and support (J) to part (2 and 3).

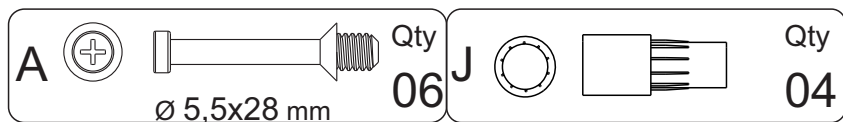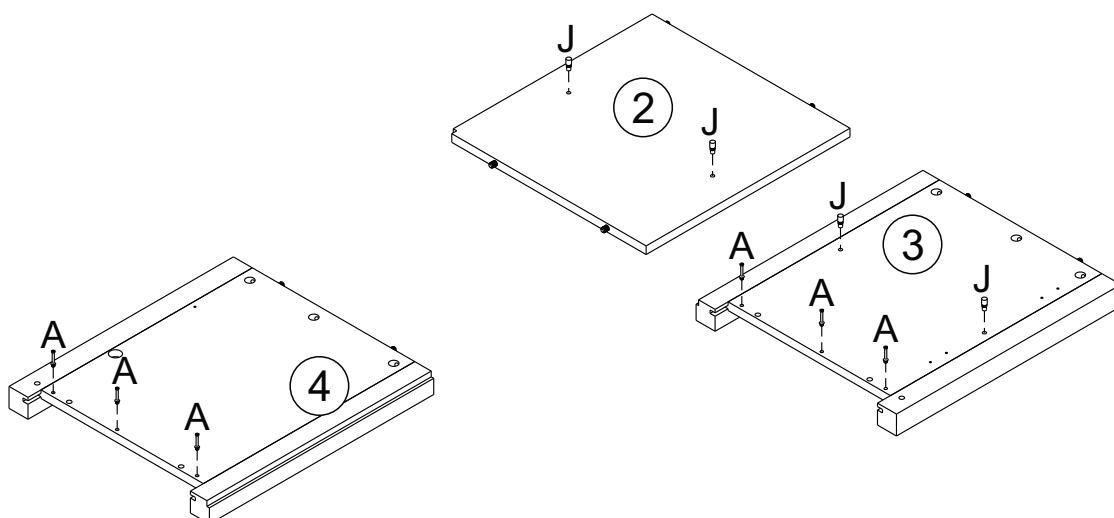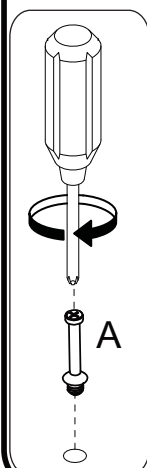

## Step 3



Attach hardware (L1) and (K) in the pre drilled side of part (5) using screw (E).  
Fixing hardware (M) with screw (F). Attach cam bolt (A) into part (5).

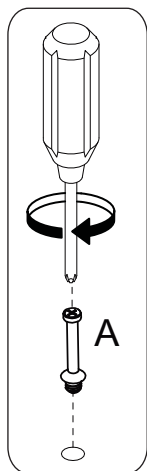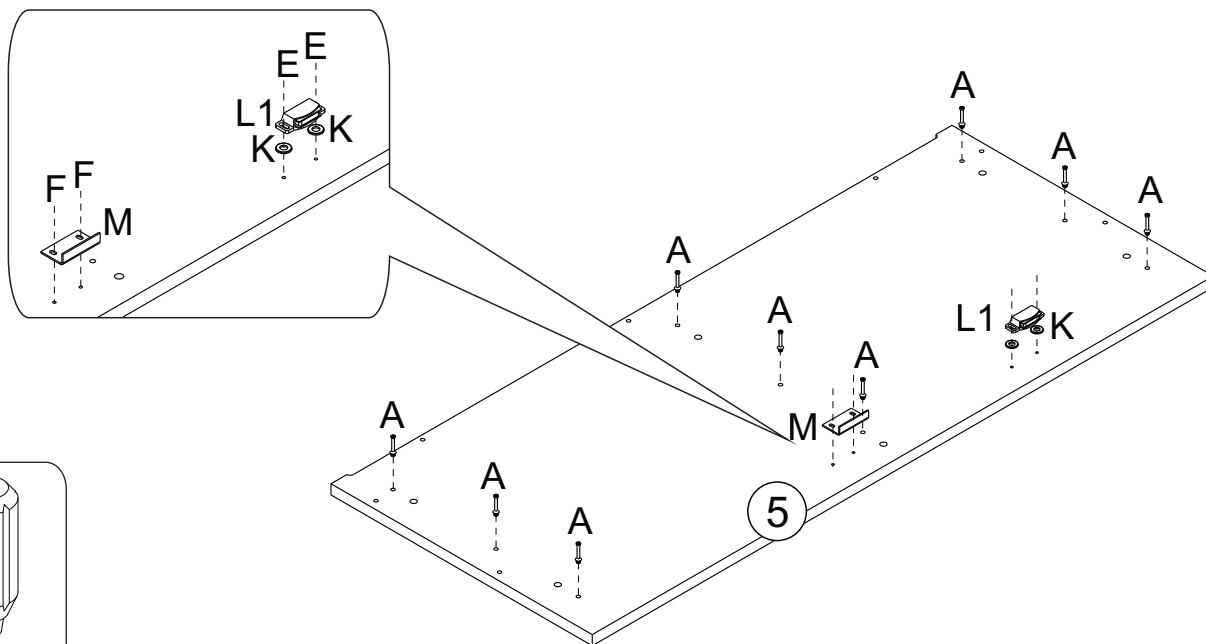

A		Qty 09	E		Qty 02	K		Qty 02
	Ø 5,5x28 mm			Ø 3,5x20 mm				
L1		Qty 01	M		Qty 01	F		Qty 02
							Ø 3,5x16 mm	

## Step 4


Secure part (1) to part (2) with screw (C).

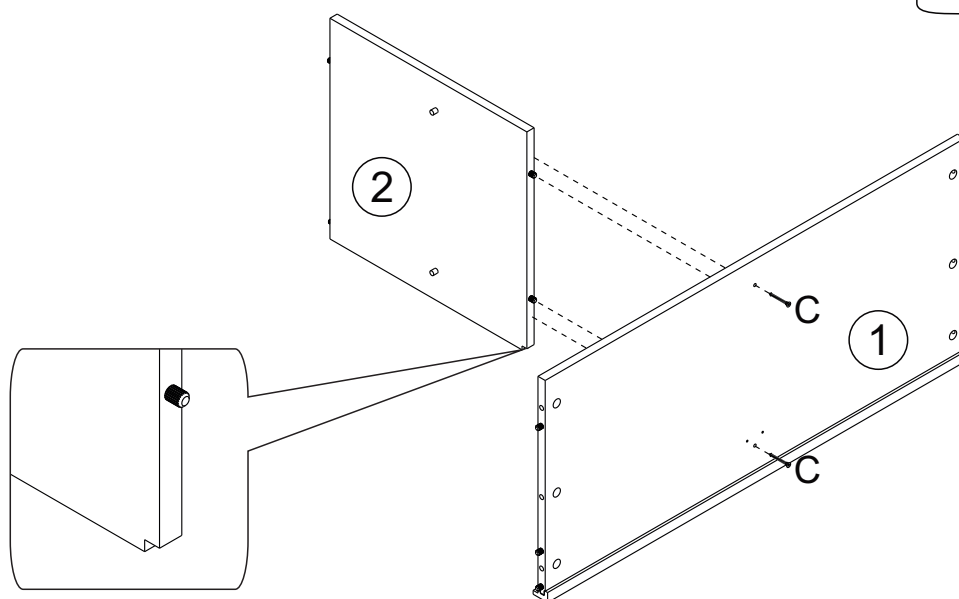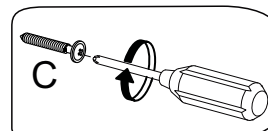

C		Qty 02
	Ø 4,0x30 mm	


## Step 5

Secure part (3), (4), to part (1) with cam bolt (B). Attach part (16) to part (1) with screw (C).

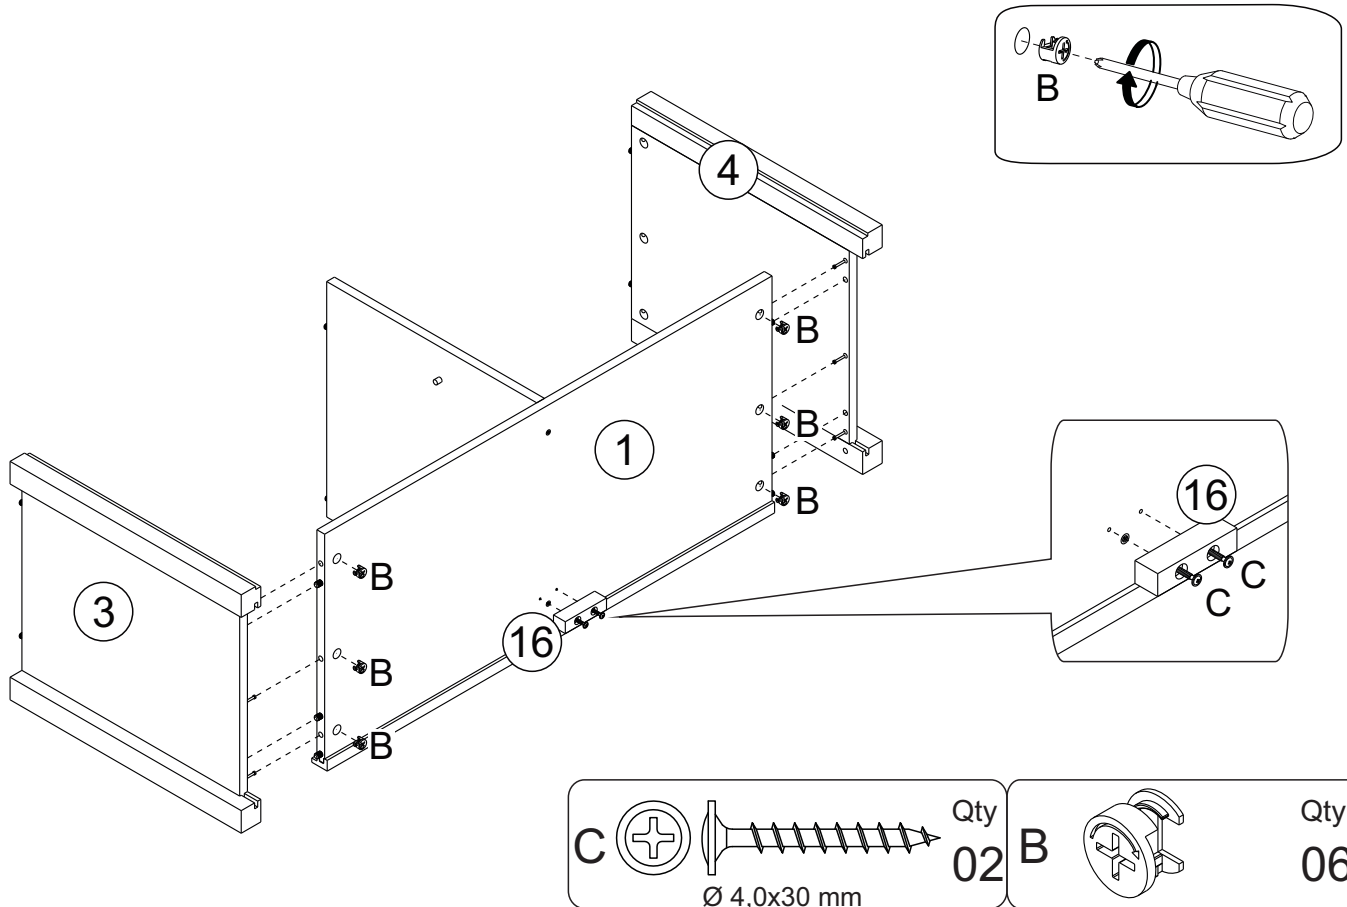

## Step 6


Secure part (5) to part (2), (3), (4) using minifix cam bolt (B).

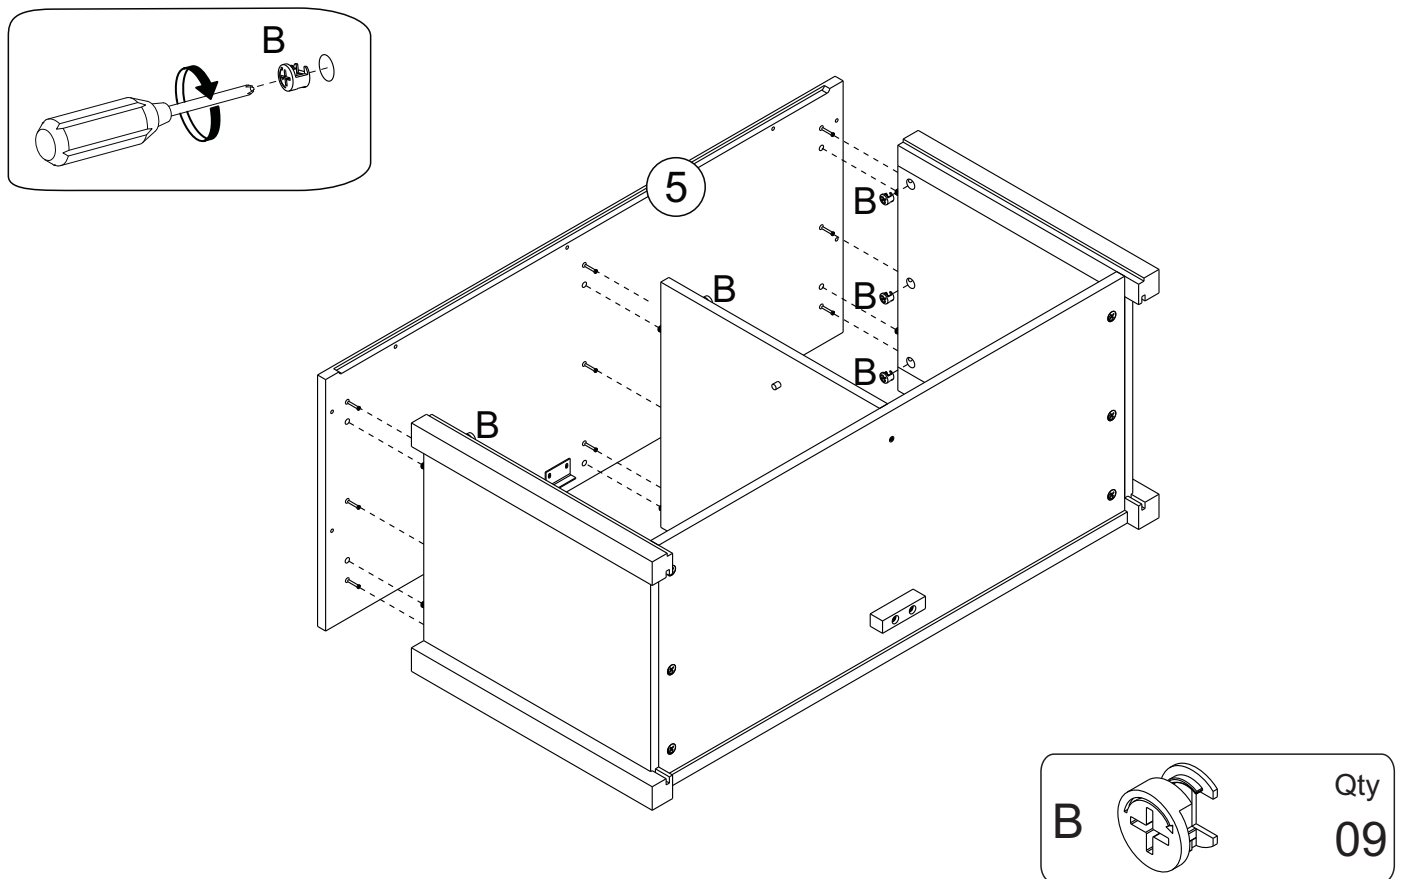




## Step 7

Secure part (5) to parts (6), (7), (8) with screw (C).

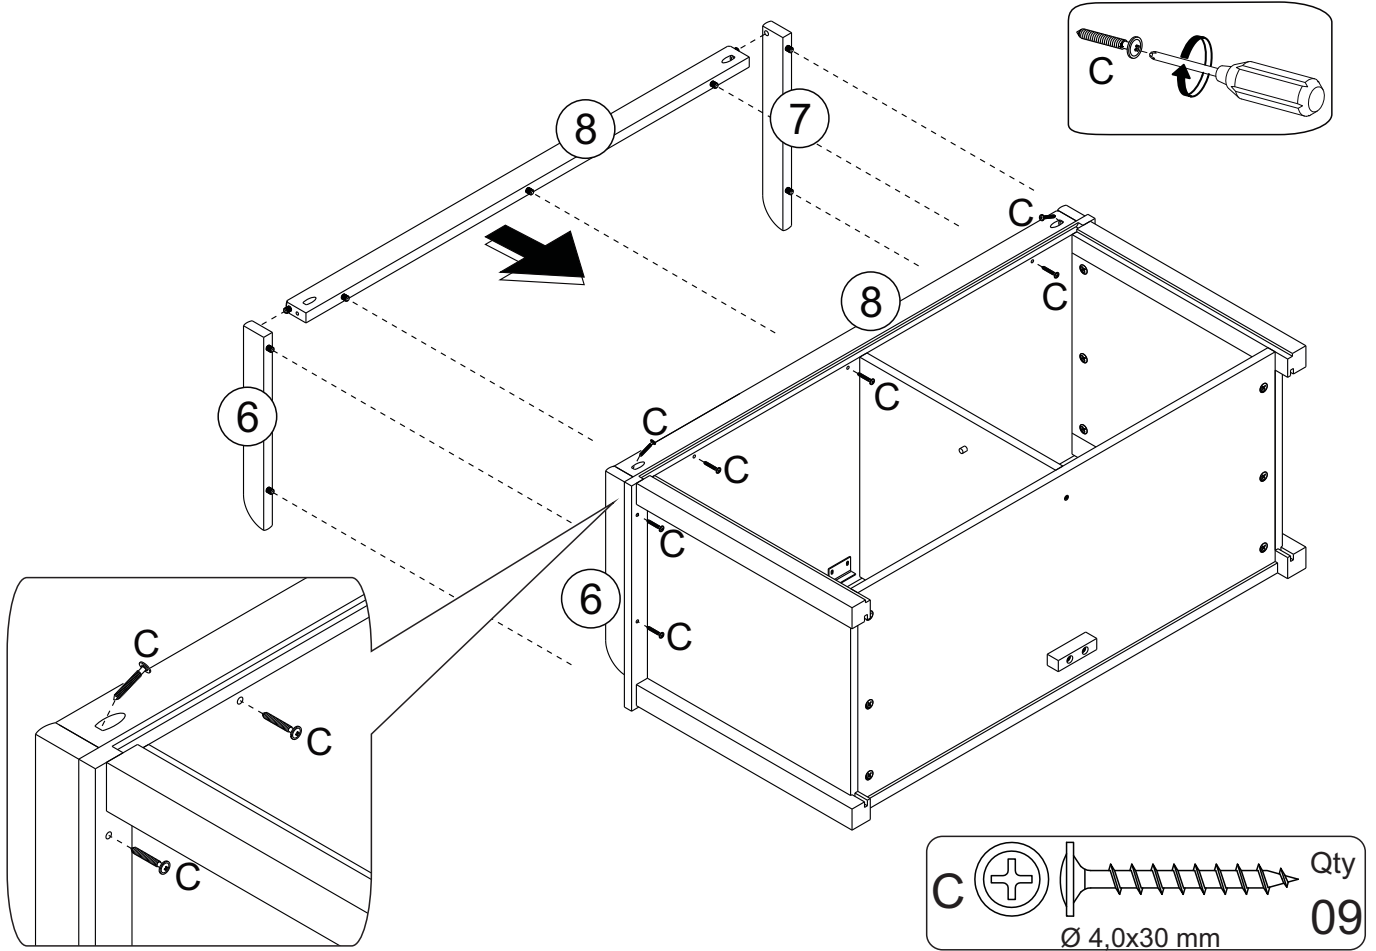


## Step 8


Secure back panel (9) and profile (O) to body with screws (G).

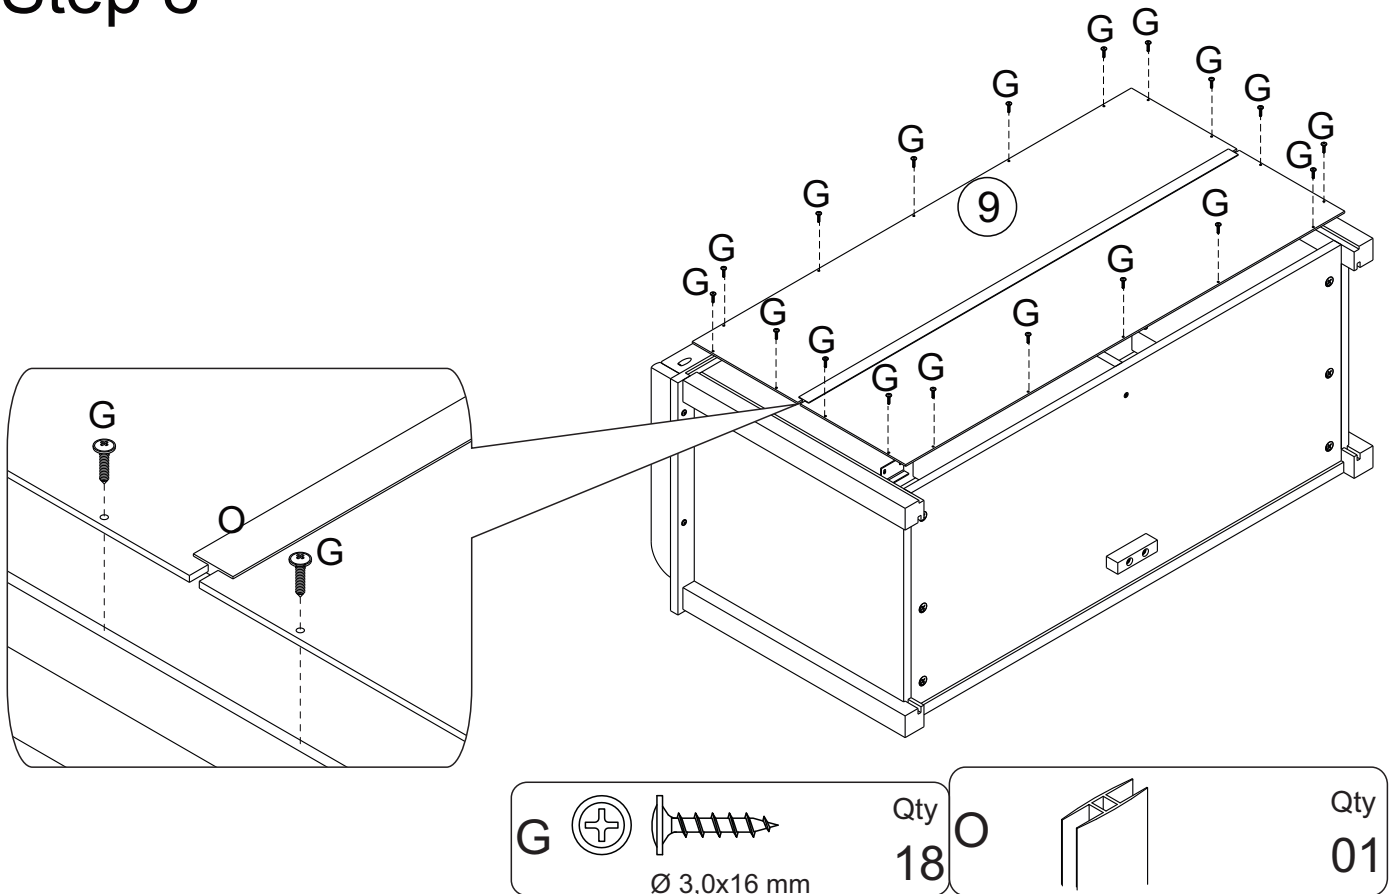

## Step 9


Insert Shelf (10). Attach hardware (S) to part (4) and (2).

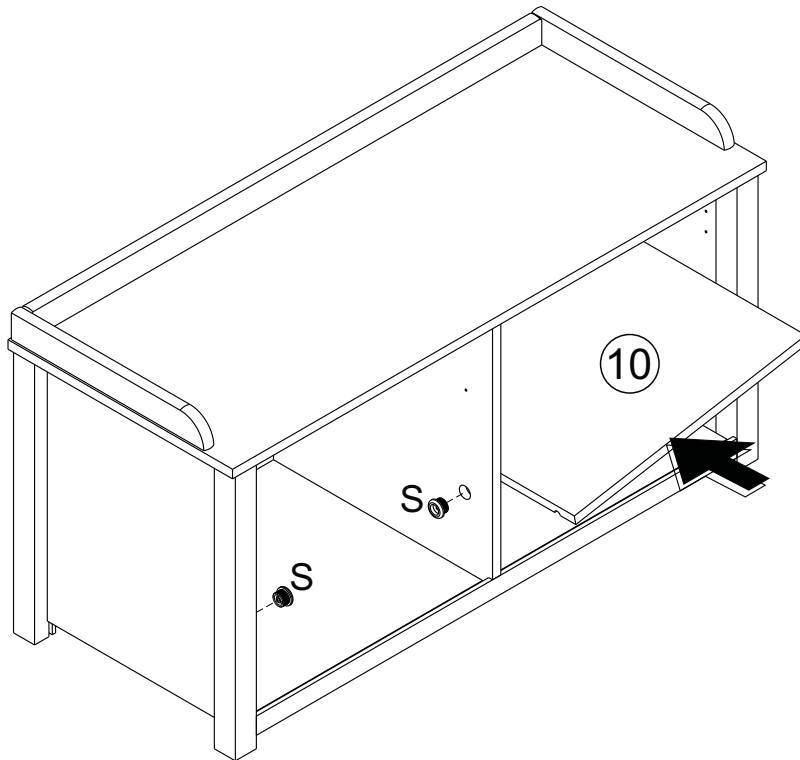




S		Qty
		02

## Step 10

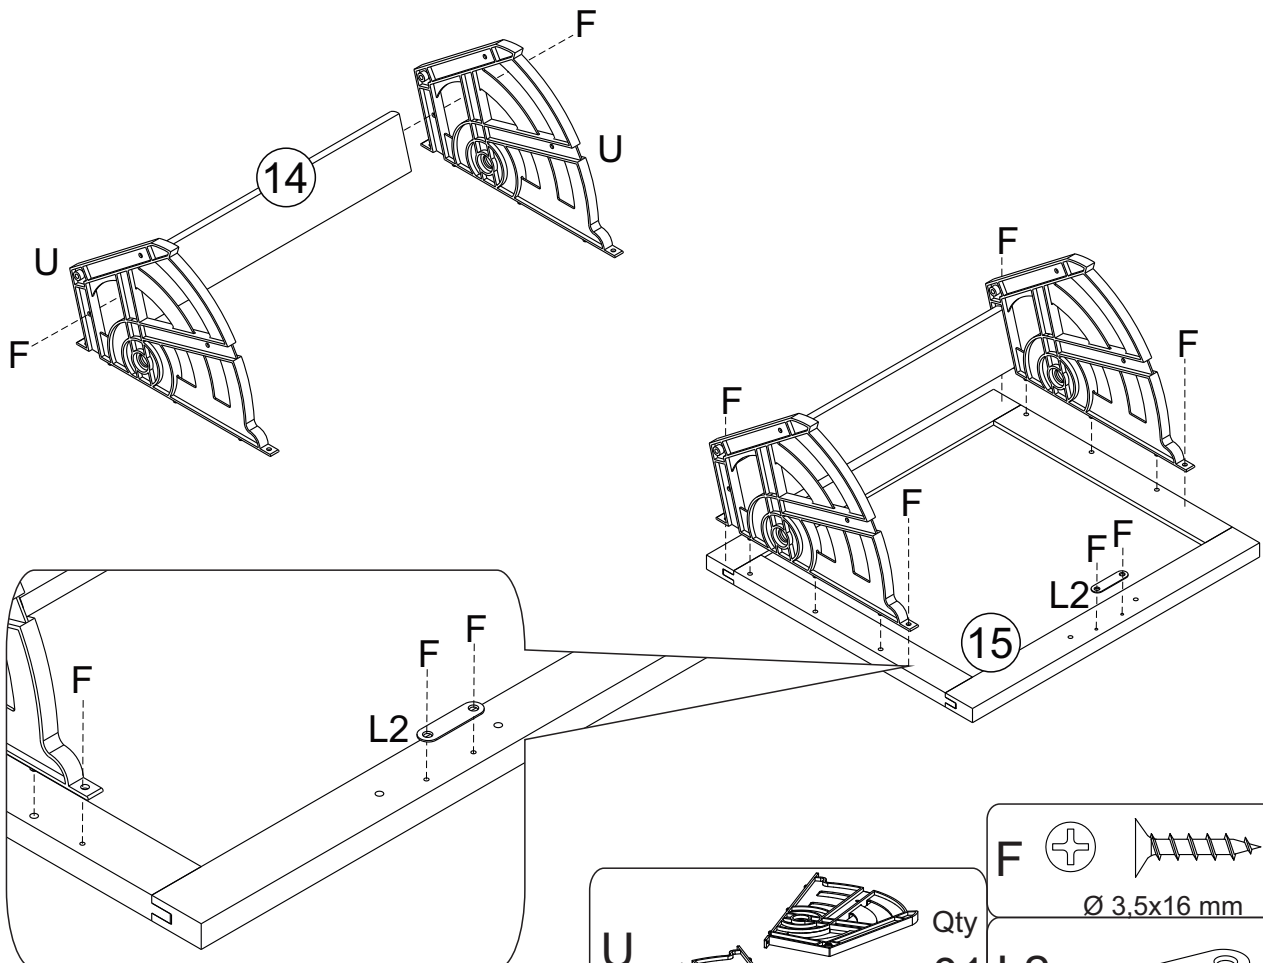First, secure part (14) to hardware (U) with screw (F). Second, secure hardware (U) to part (15) with screw (F). Attach hardware (L2) with screw (F).








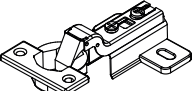
U		Qty
		01

F		Qty
	Ø 3,5x16 mm	08
L2		Qty
		01

# Step 11



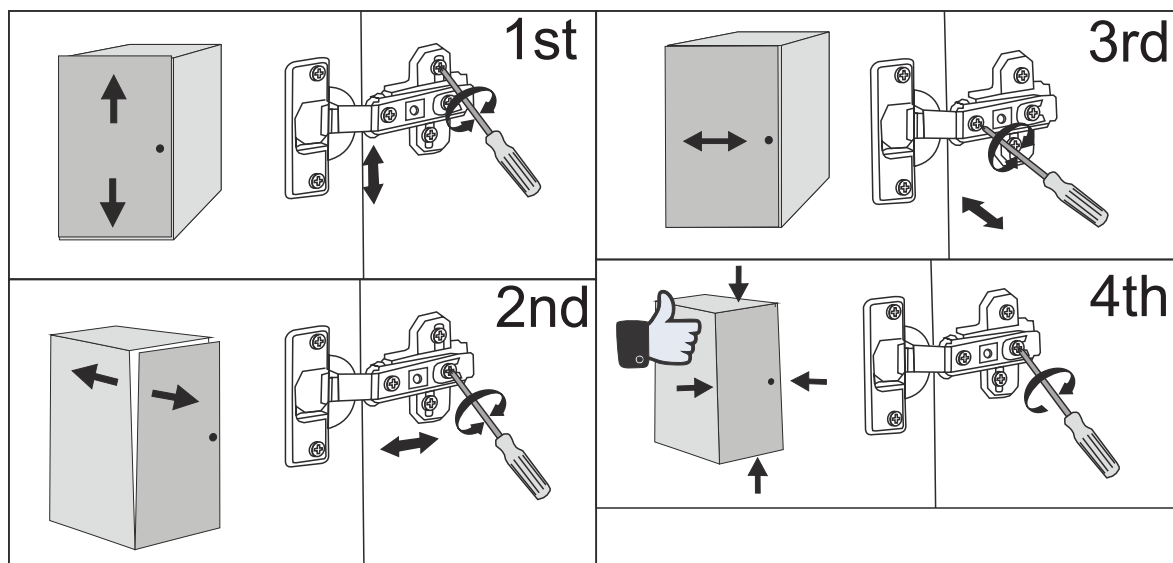
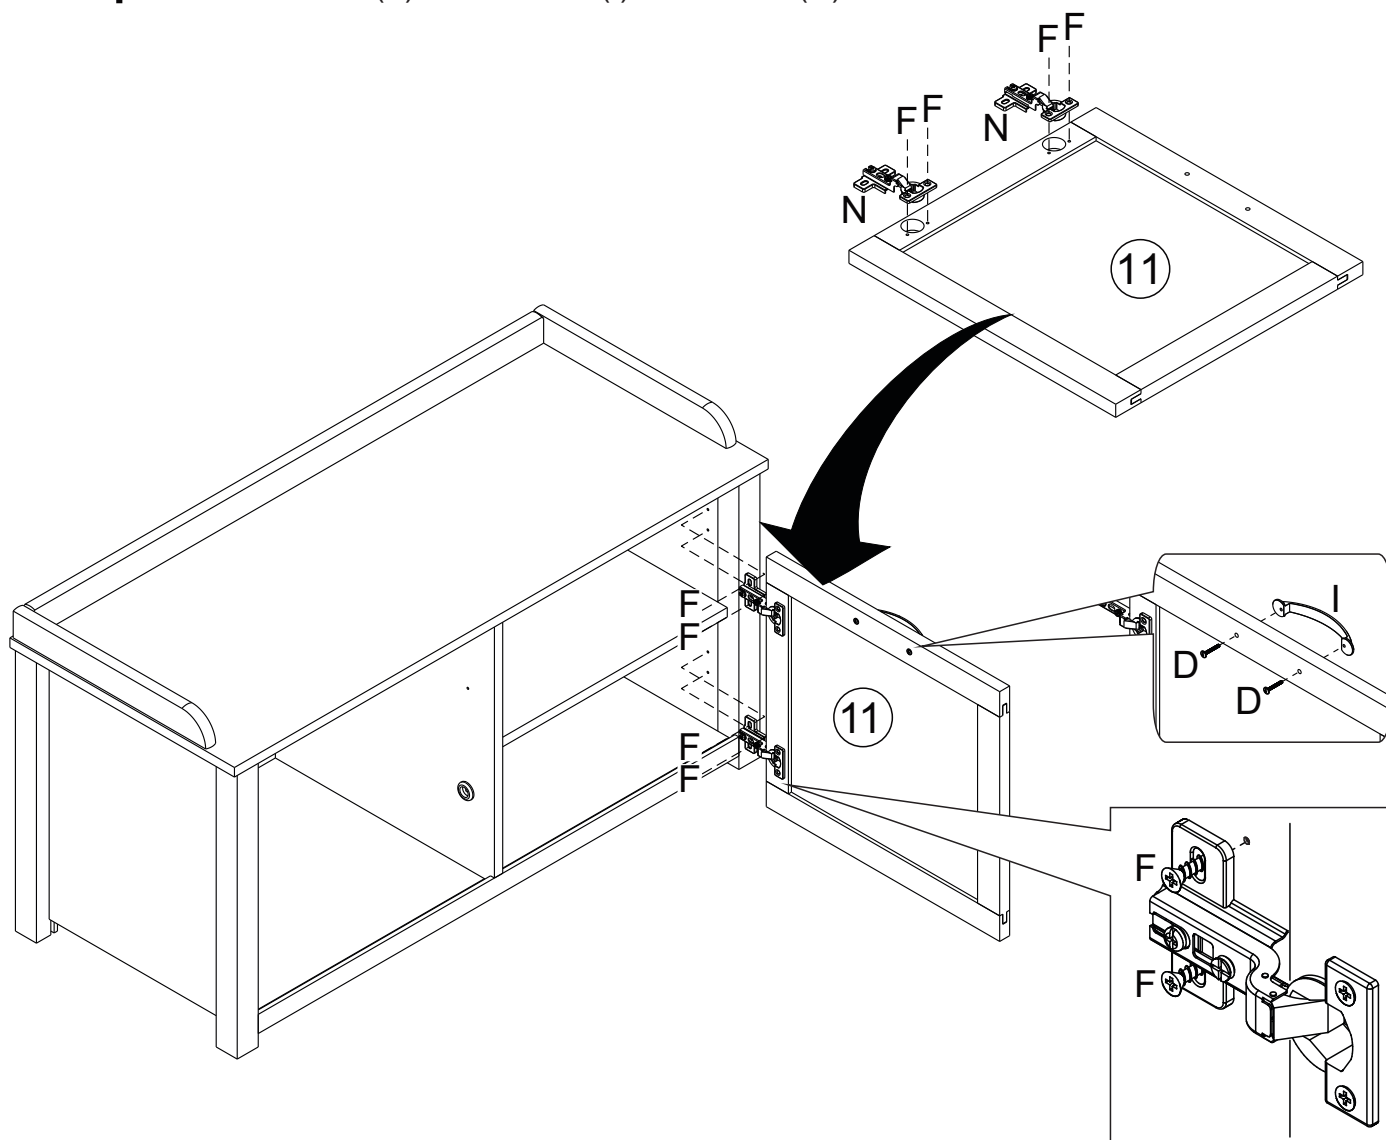
Attach hardware (N) to door (11) with screw (F). Attach part (11) to body with screw (F). Insert knob (I) with screw (D).



<b>F</b>  Qty <b>08</b> $\varnothing$ 3,5x16 mm	<b>I</b>  Qty <b>01</b>	<b>D</b>  Qty <b>02</b> M 4x22 mm	<b>N</b>  Qty <b>02</b>
---	---	---	--



## Step 12

Insert knob (I) to part (15) with screw (D). Attach hardware (R) with screw (P).

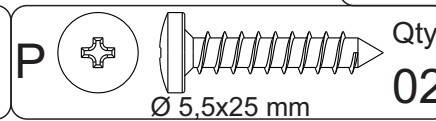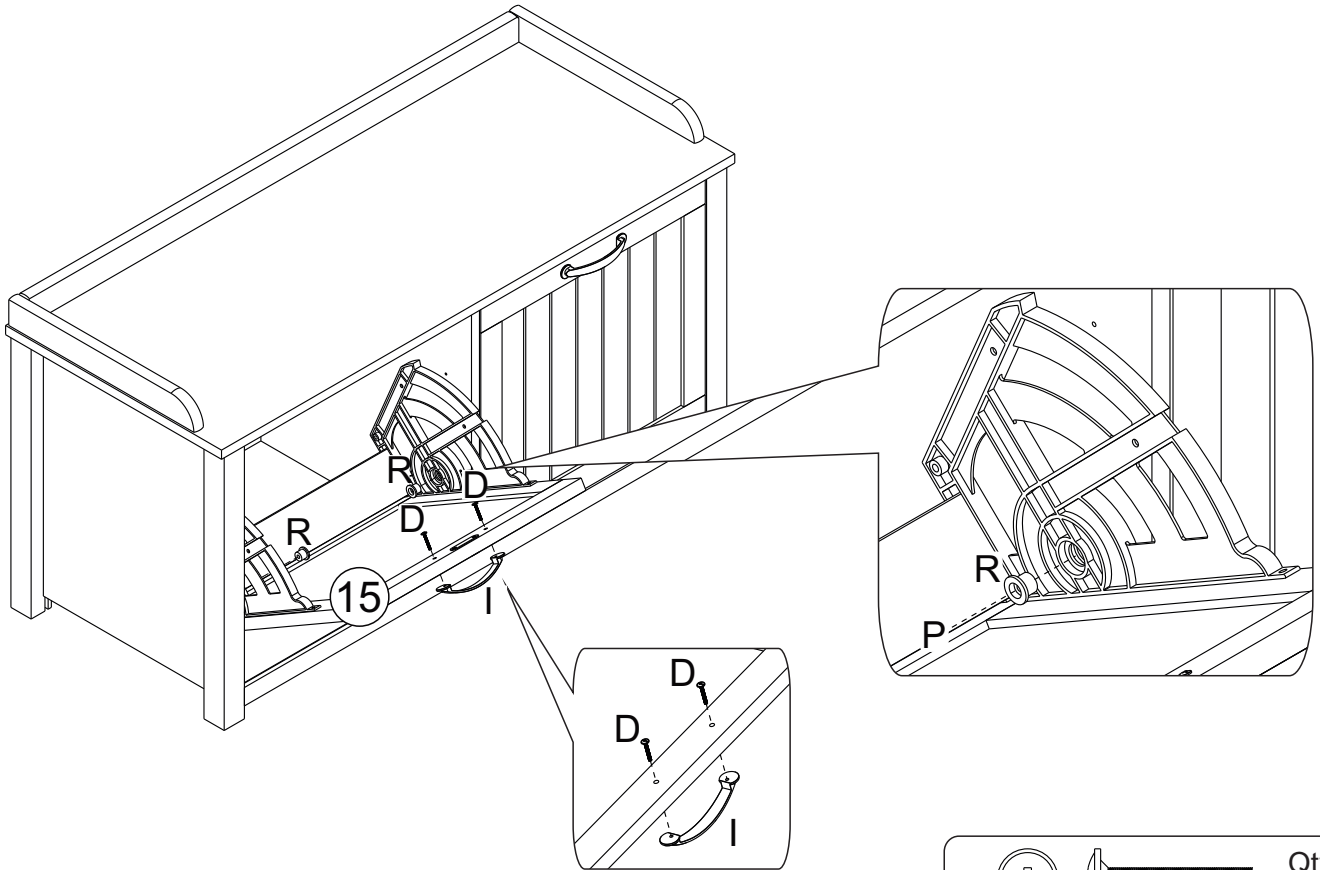


## Step 13

Insert part (12) and (13) with screw F.

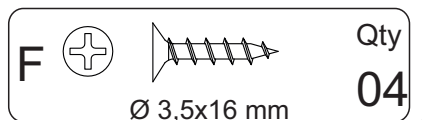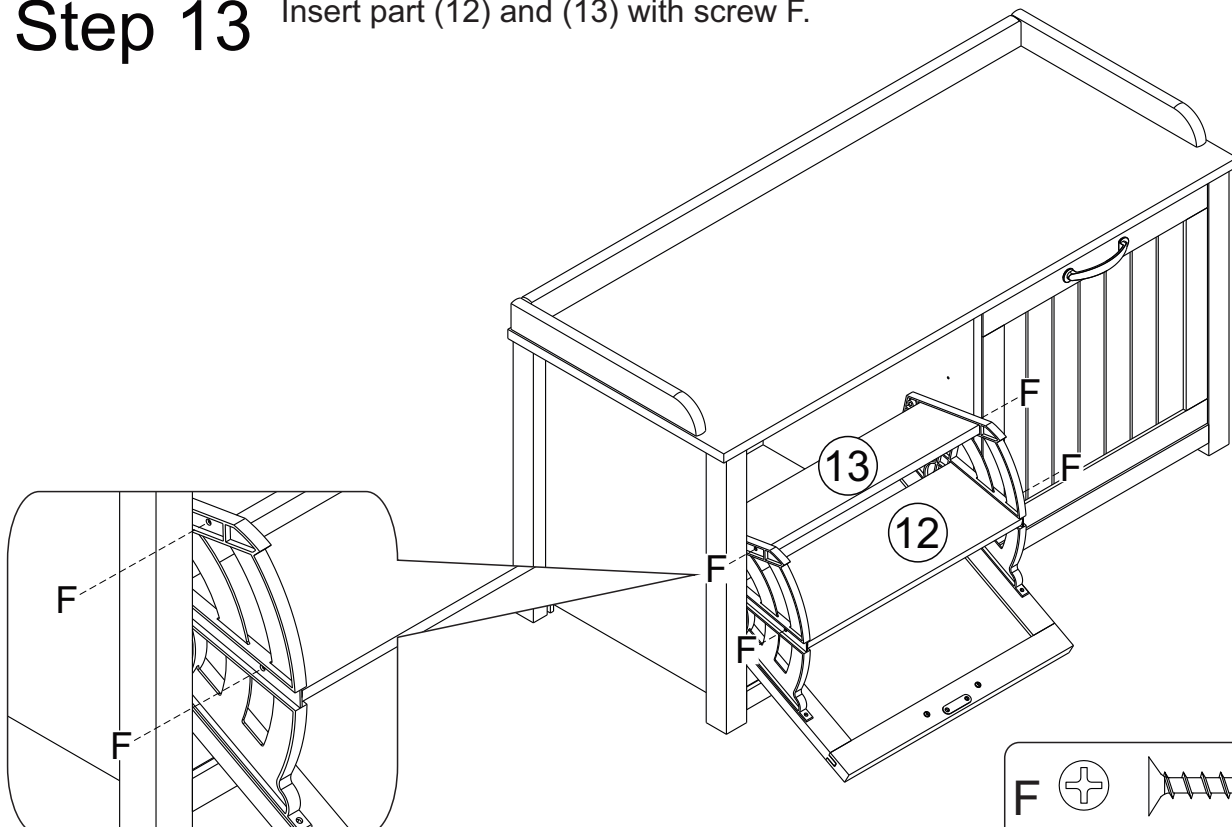


**Step 14** Attach hardware (T) with screw (Q).

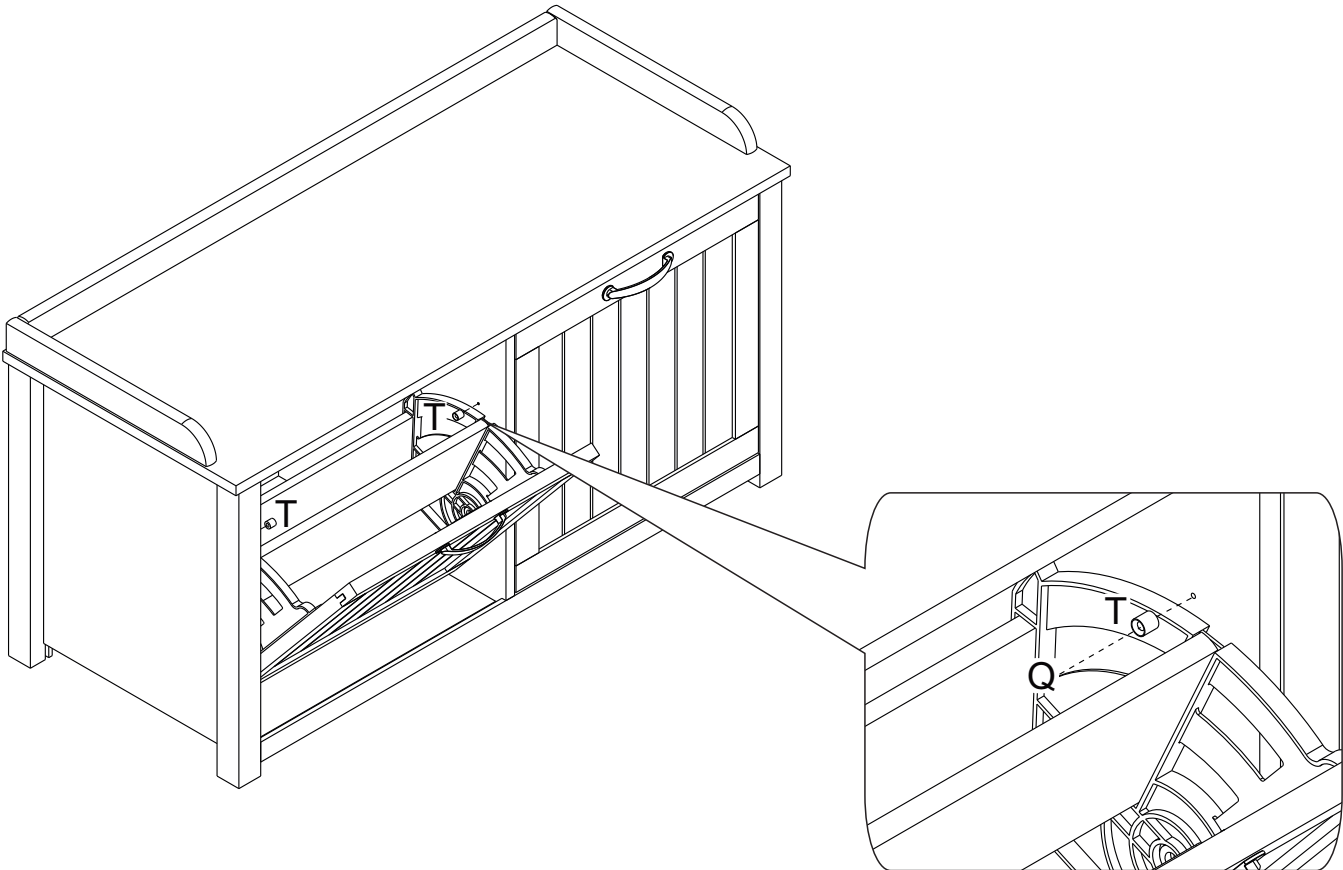

Q			Qty	T		Qty
		Ø 3.5x20 mm	02			02

**Step 15**

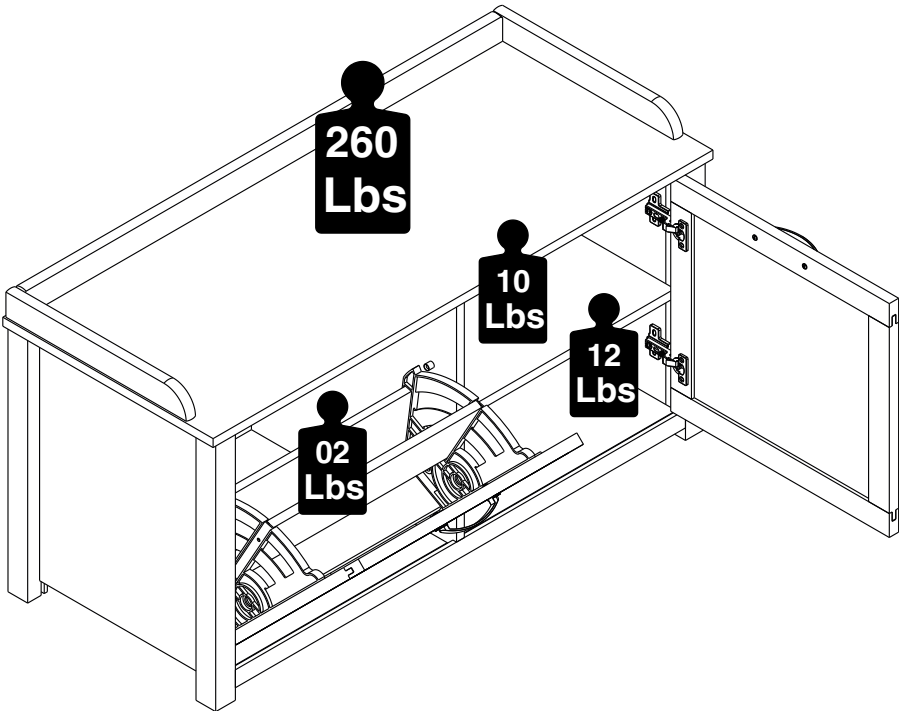

**Final Assembly**