
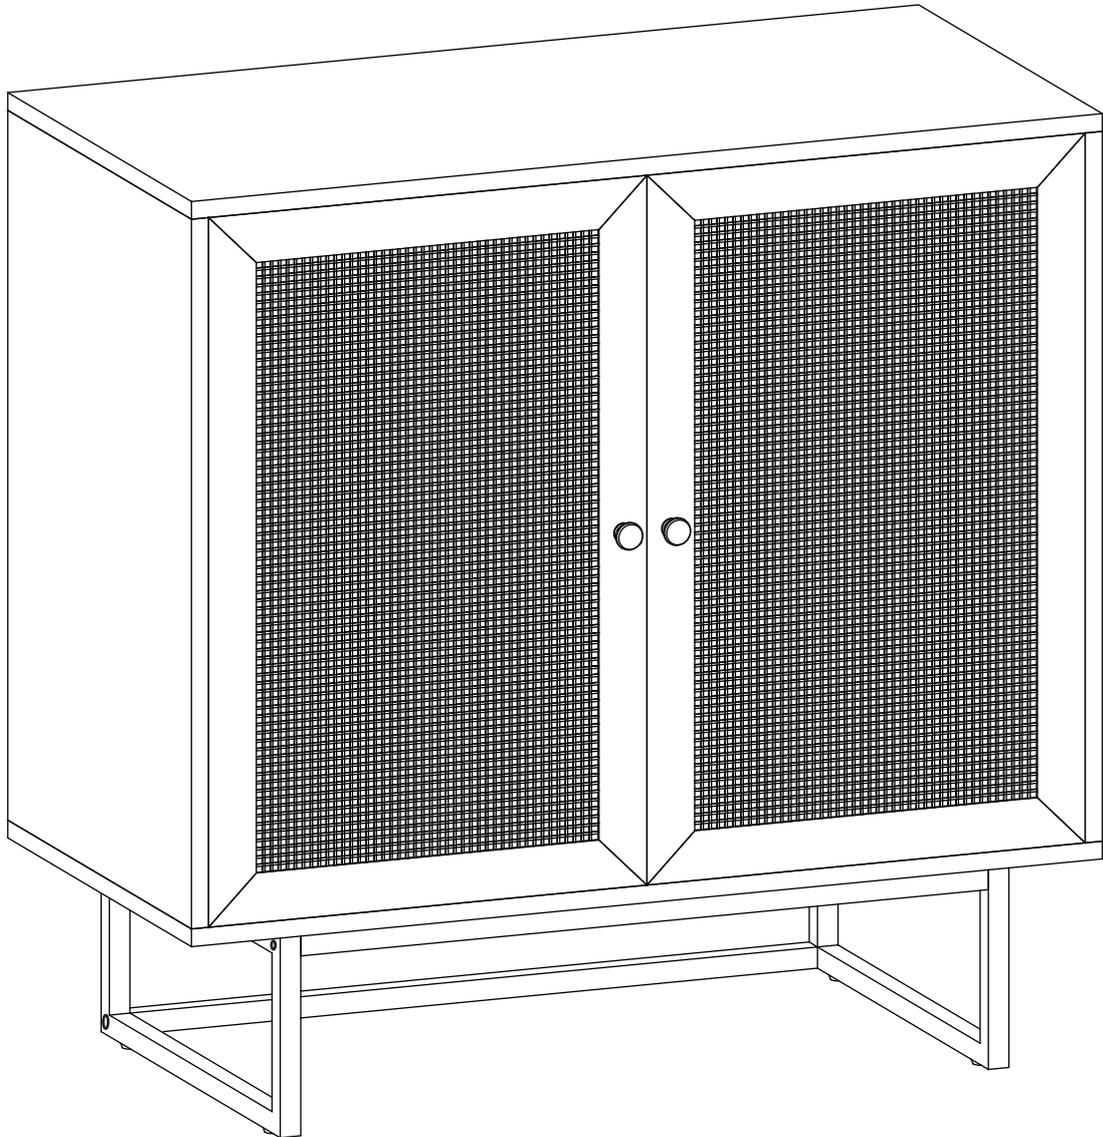
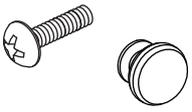


Storage cabinet

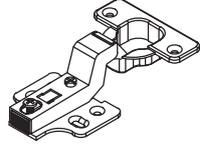


ASSEMBLY INSTRUCTION


HARDWARE LIST

<p>A</p> <p>10 PCS</p>	 <p>Ø6x35mm</p>	<p>B</p> <p>10 PCS</p>	 <p>Ø15x10mm</p>	<p>C</p> <p>12 PCS</p>	 <p>Ø6x30mm</p>	<p>D</p> <p>2 PCS</p>	
<p>E</p> <p>6 PCS</p>	 <p>Ø4x35mm</p>	<p>F</p> <p>24 PCS</p>	 <p>Ø3.5x14mm</p>	<p>G</p> <p>4 PCS</p>		<p>H</p> <p>6 PCS</p>	 <p>Ø6x30mm</p>
<p>I</p> <p>1 PC</p>	 <p>M4mm</p>	<p>J</p> <p>8 PCS</p>		<p>K</p> <p>8 PCS</p>	 <p>Ø3x16mm</p>	<p>L</p> <p>4 PCS</p>	
<p>M</p> <p>2 PCS</p>	 <p>Ø6x30mm</p>	<p>N</p> <p>2 PCS</p>	 <p>Ø4x14mm</p>	<p>O</p> <p>2 PCS</p>		<p>P</p> <p>4 PCS</p>	
<p>Q</p> <p>8 PCS</p>	 <p>Ø6x25mm</p>	<p>R</p> <p>4 PCS</p>					


PARTS LIST

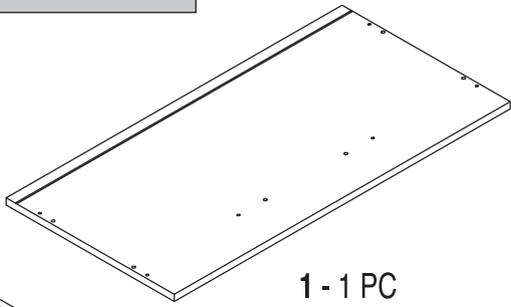


1 - 1 PC

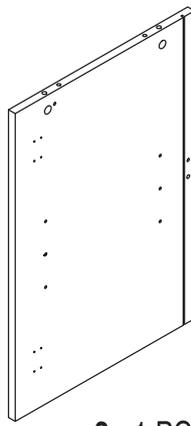


2 - 1 PC

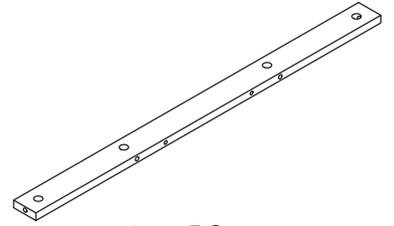


3 - 1 PC

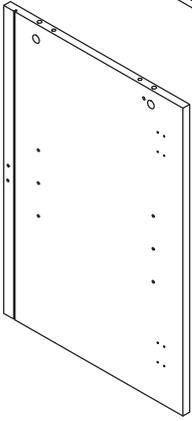

4 - 1 PC

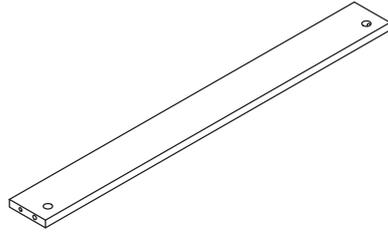


5 - 1 PC

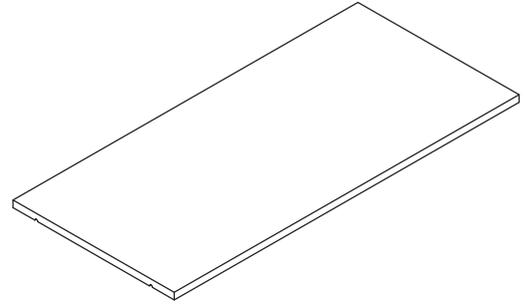


6 - 1 PC



7 - 2 PCS

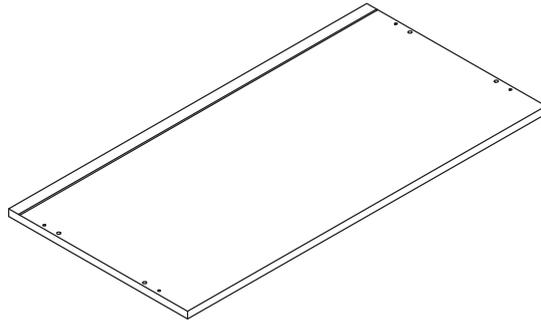


8 - 1 PC

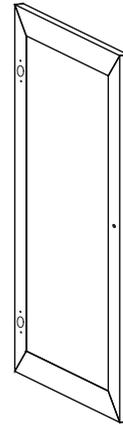


9 - 2 PCS




10 - 1 PC

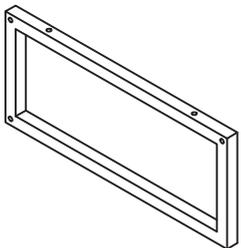

11 - 2 PCS

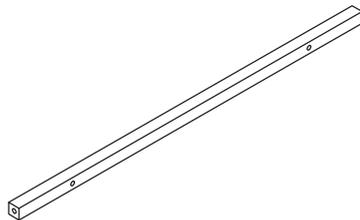

12 - 2 PCS

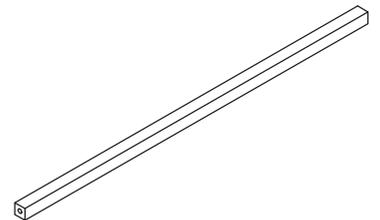


13 - 1 PC

ASSEMBLY STEPS

STEP 1.


Insert quickfit screws (A) into parts 1, 2 and 4, as shown.

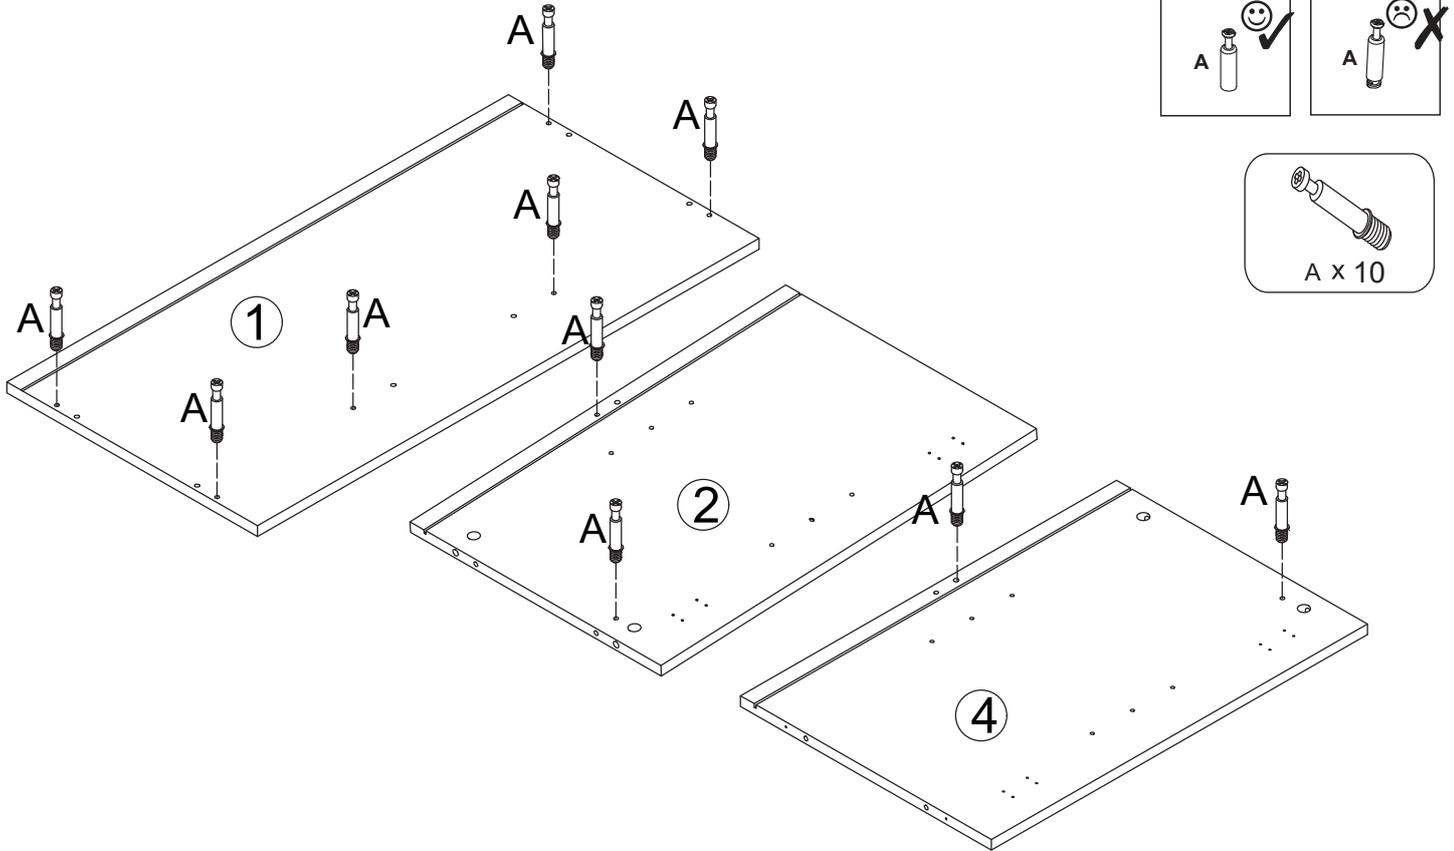

STEP 2.

Fix handles (D) to doors 9 using screws (D), as shown.

Fix Hinges (L) to doors 9 using screws (F), as shown.

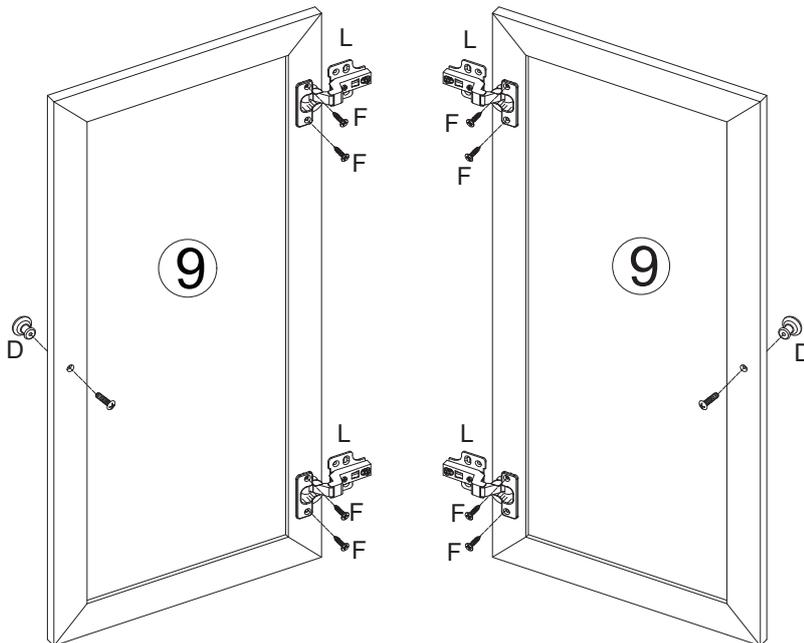

ASSEMBLY STEPS






STEP 3.

Insert wooden dowel (C) to part 2.

Insert cam locks (B) into part 5 and part 3.

Fit part 2 to part 3 and part 5, as shown.

Turn cam locks clockwise to tighten.

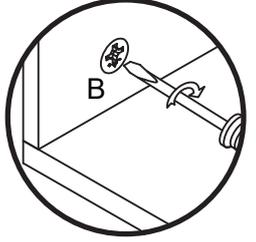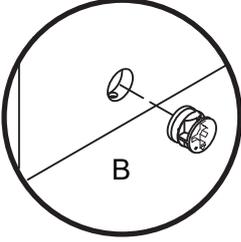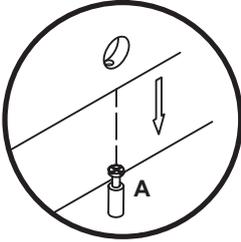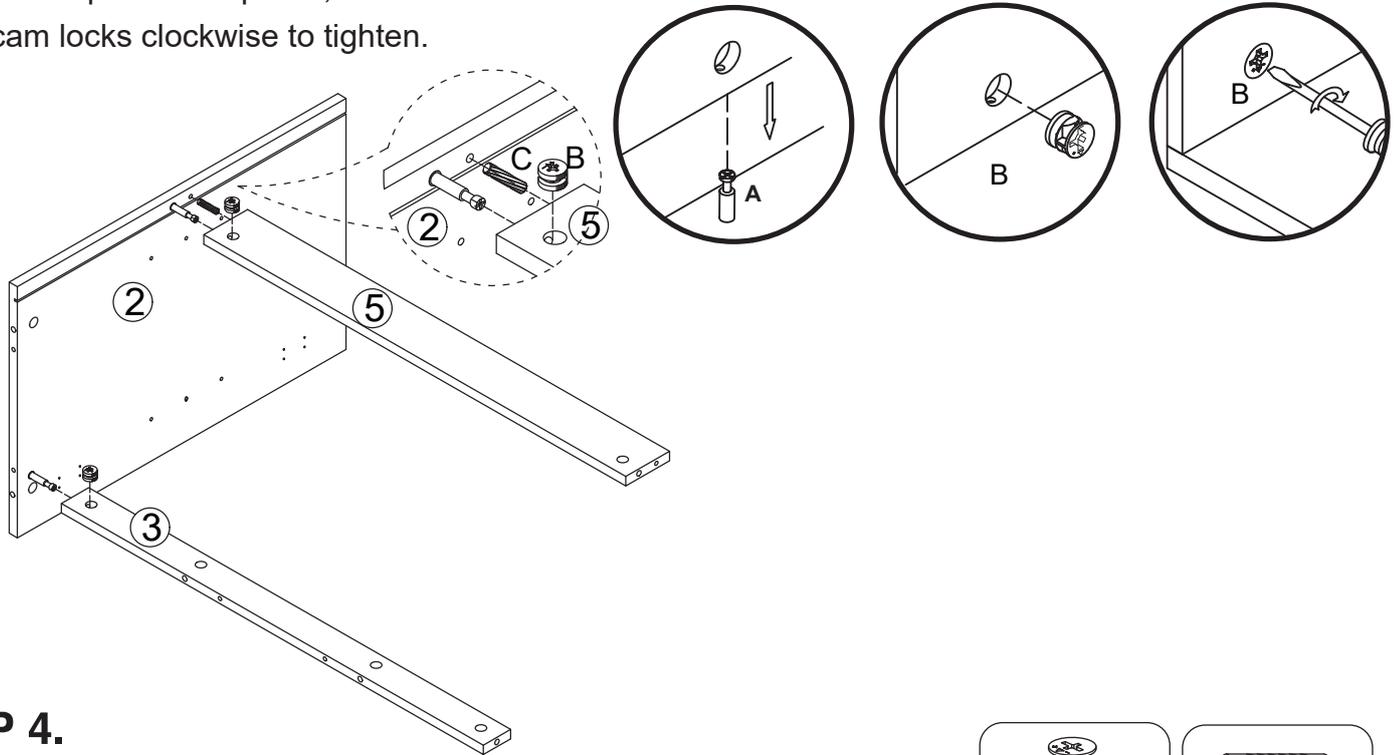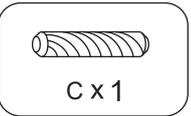






STEP 4.

Insert wooden dowel (C) to part 4.

Insert cam locks (B) into part 5 and part 3.

Fit part 4 to part 3 and part 5, as shown.

Turn cam locks clockwise to tighten.

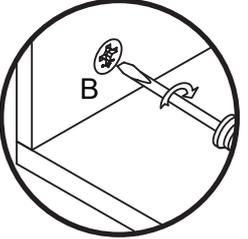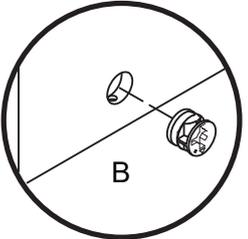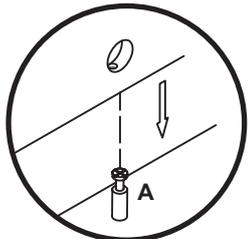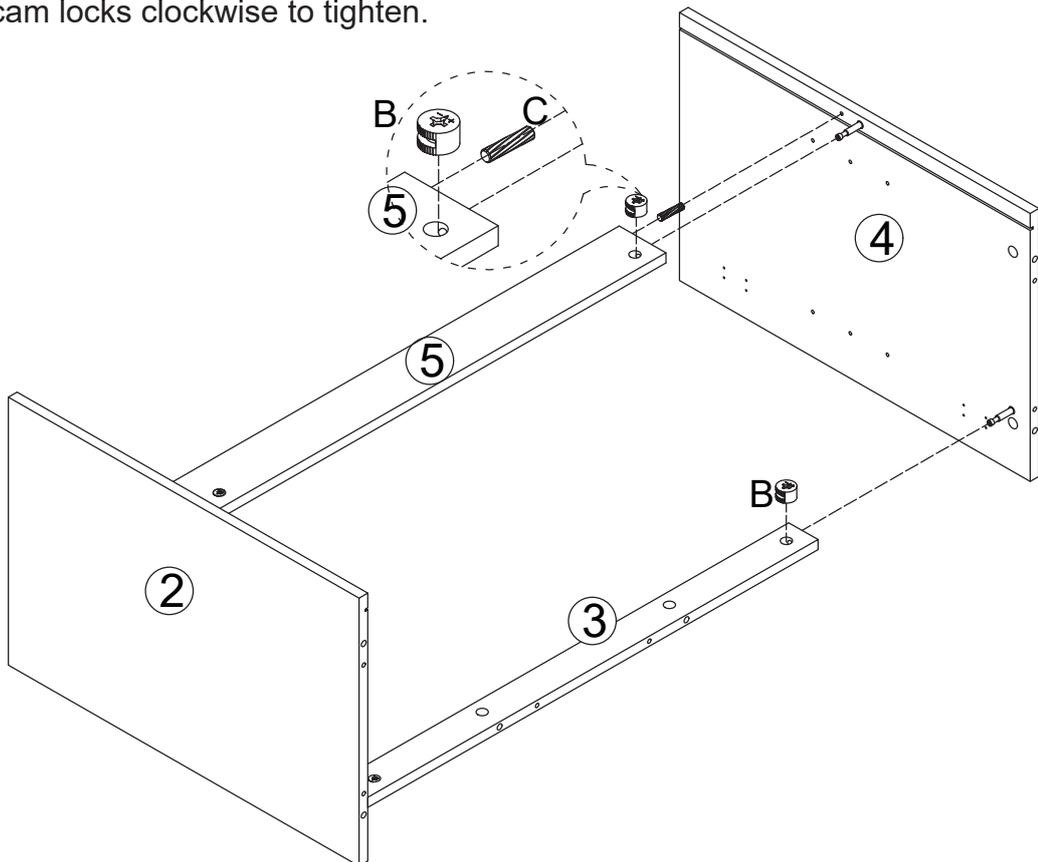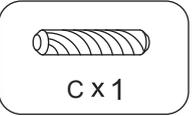

ASSEMBLY STEPS







STEP 5.

Insert wooden dowels (C) to part 1 .

Insert cam locks (B) into parts 2, 3 and 4.


Fit part 1 to parts 2, 3 and 4, as shown.

Turn cam lock clock wise to tighten.

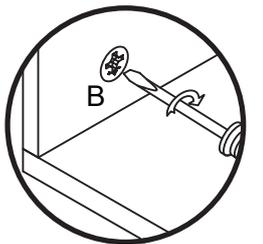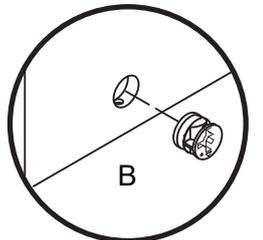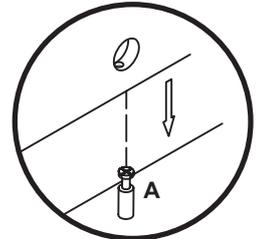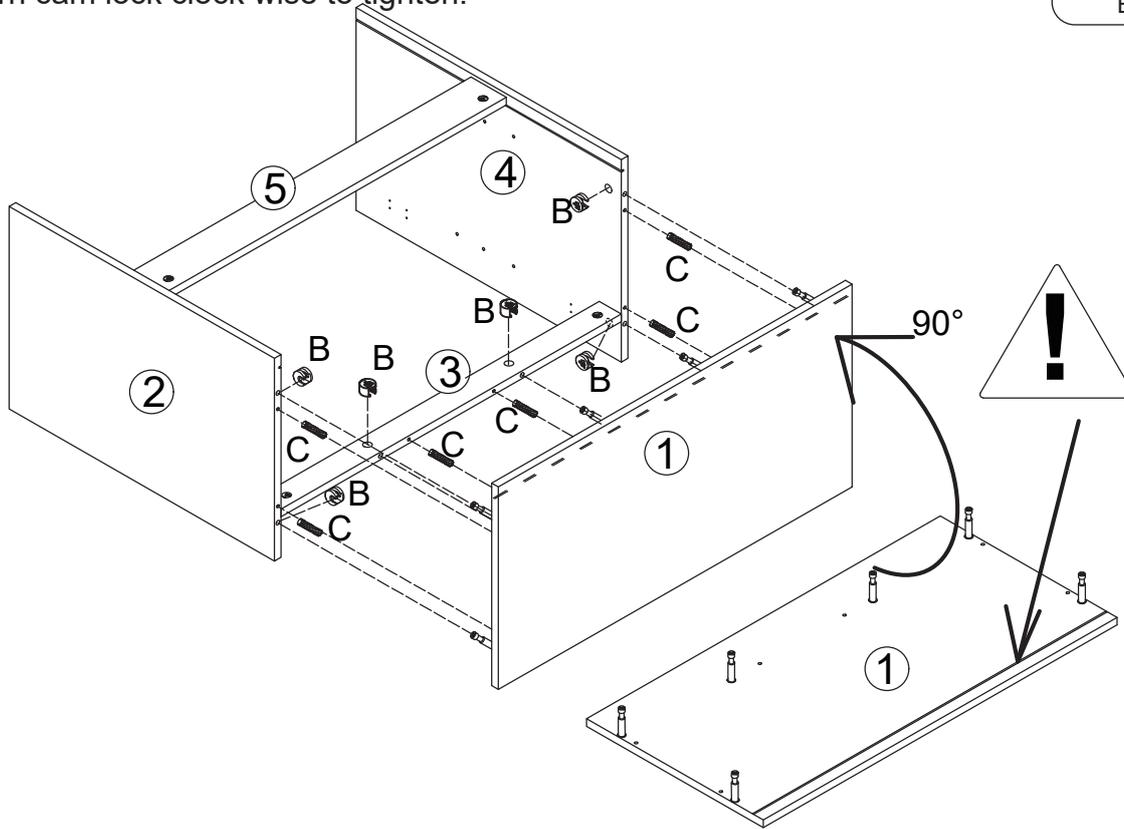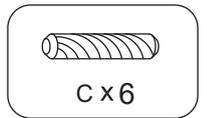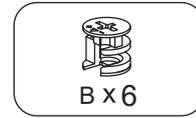

STEP 6.

Slide parts 7 and part 10 into grooves between parts 2 , 4 and 1, as shown.

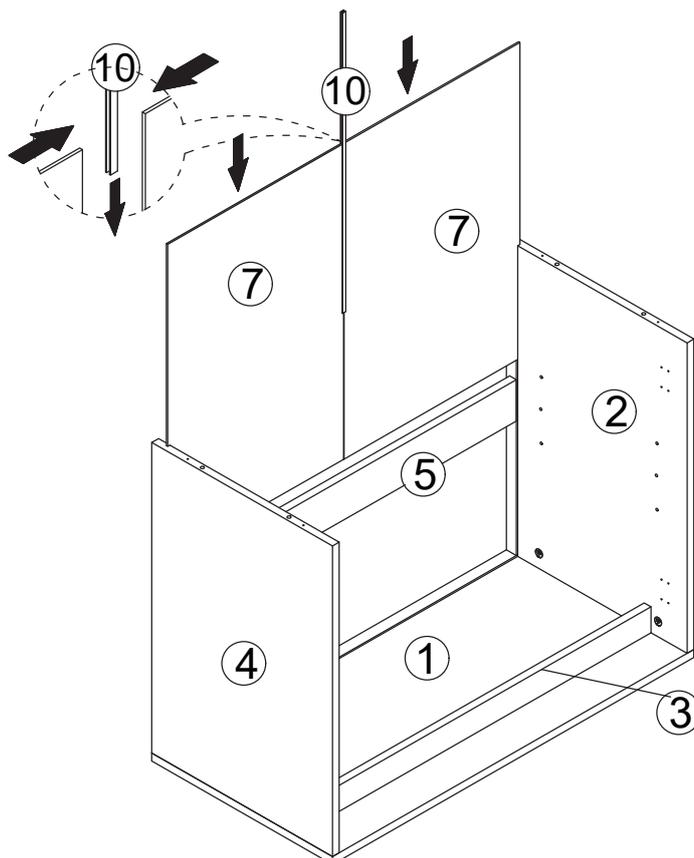


ASSEMBLY STEPS

STEP 7.

Insert wooden dowels (C) to part 2 and part 4, as shown.


Fix part 8 to part 2 and part 4 using screws (E), as shown

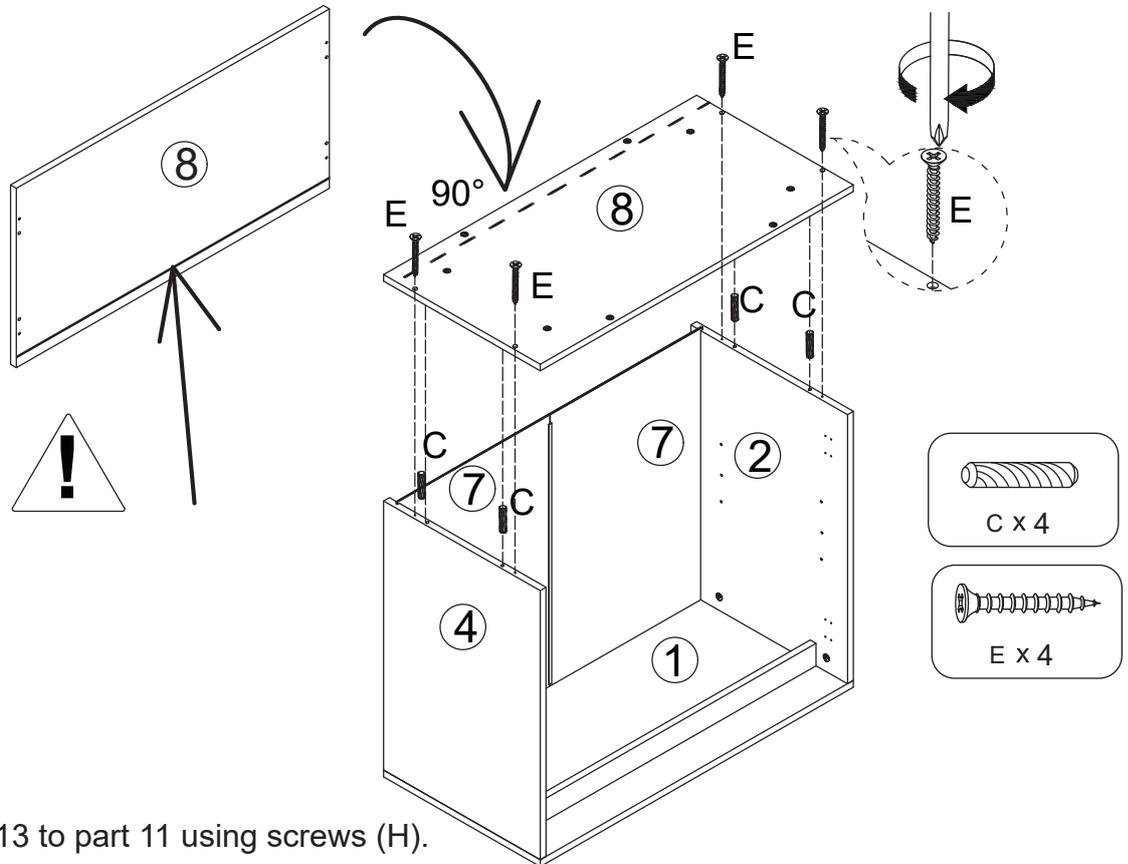

STEP 8.

Fix part 12 and part 13 to part 11 using screws (H).

Turn Allen key (I) clockwise to tighten, as shown.

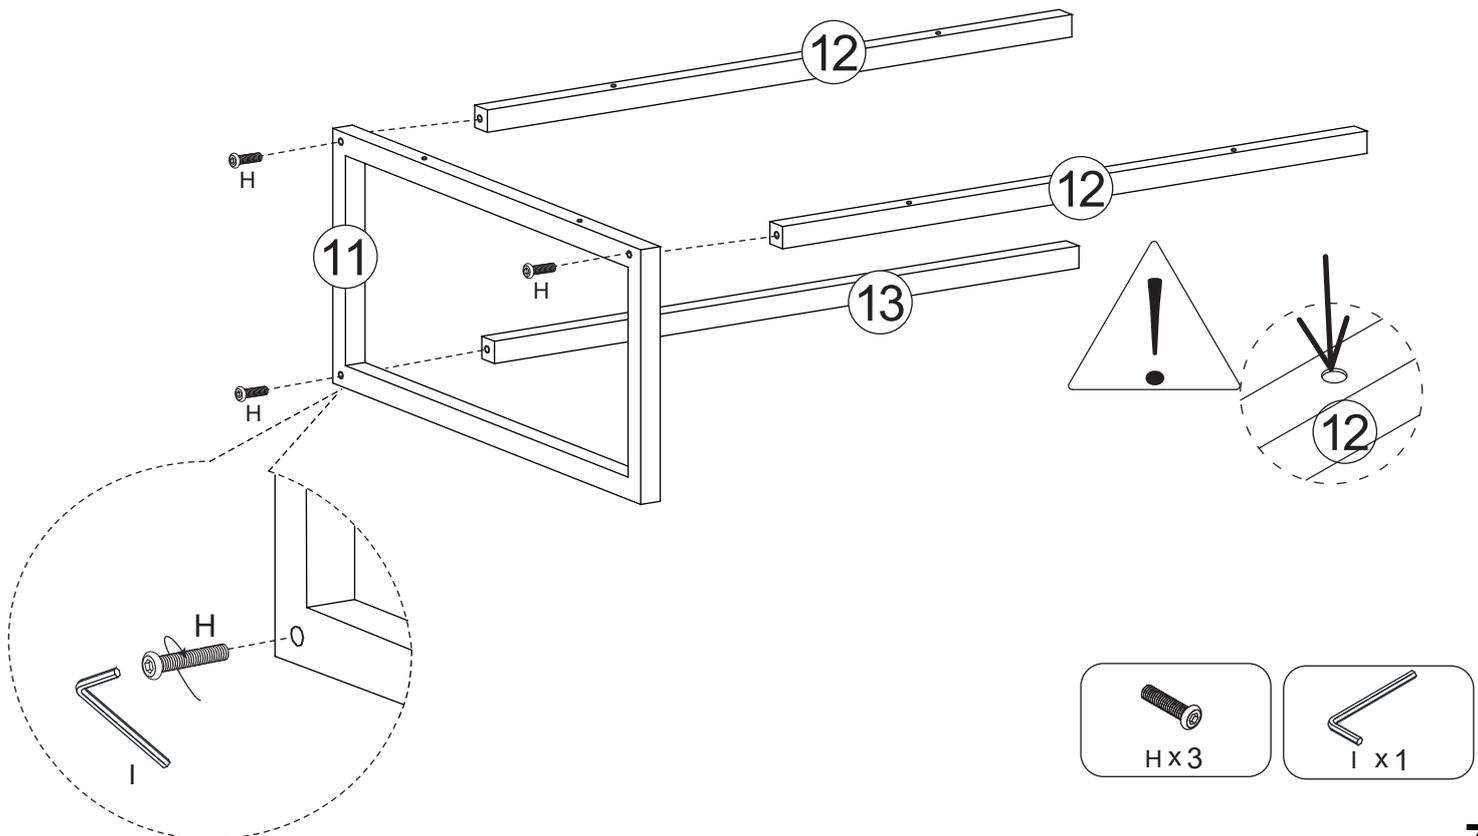


ASSEMBLY STEPS

STEP 9.


Fix part 12 and part 13 to part 11 using screws (H).

Turn Allen key (I) clockwise to tighten, as shown.

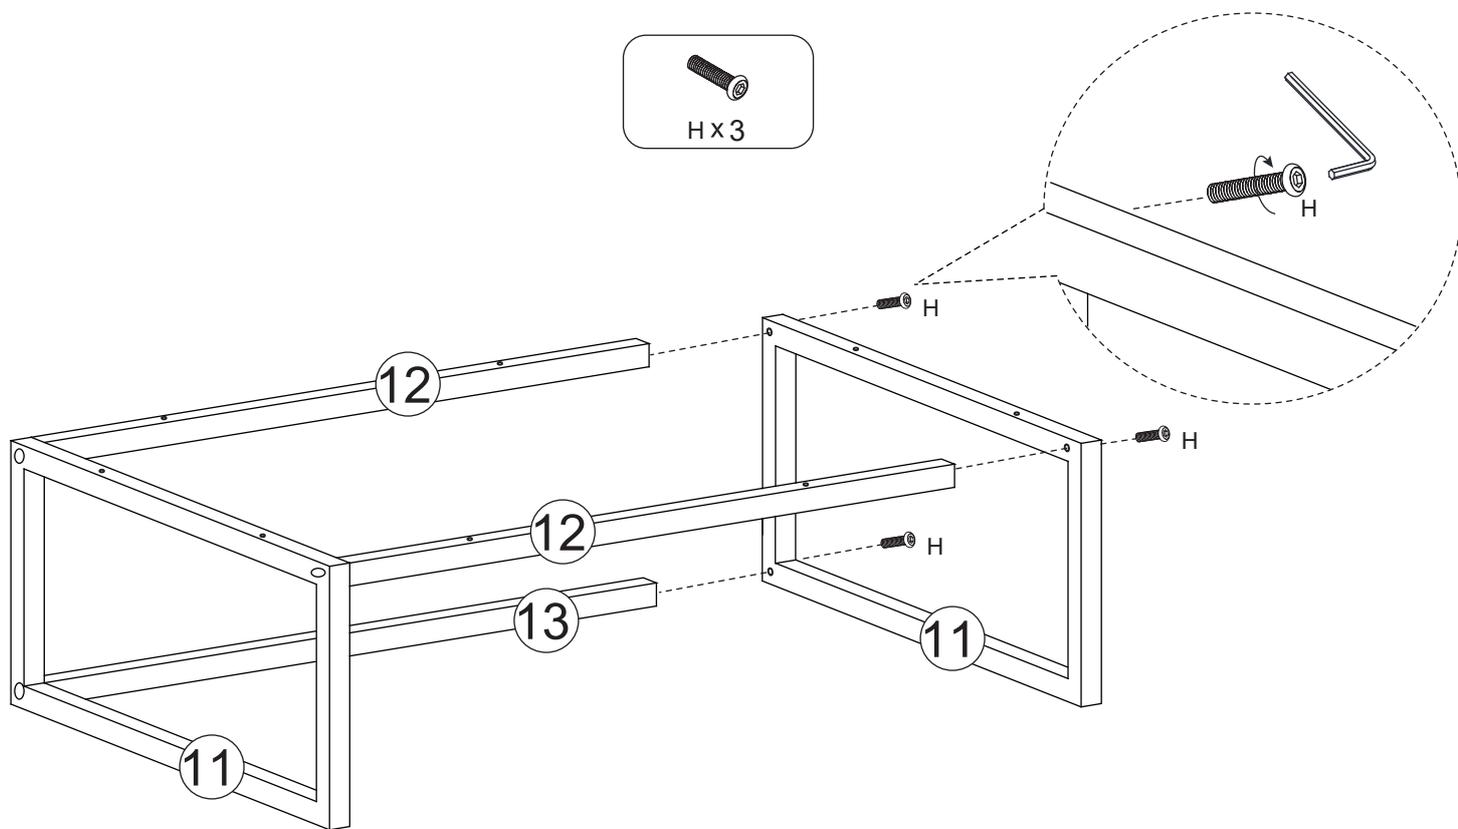

STEP 10.

Insert Foot nails (G) to parts 11, as shown.

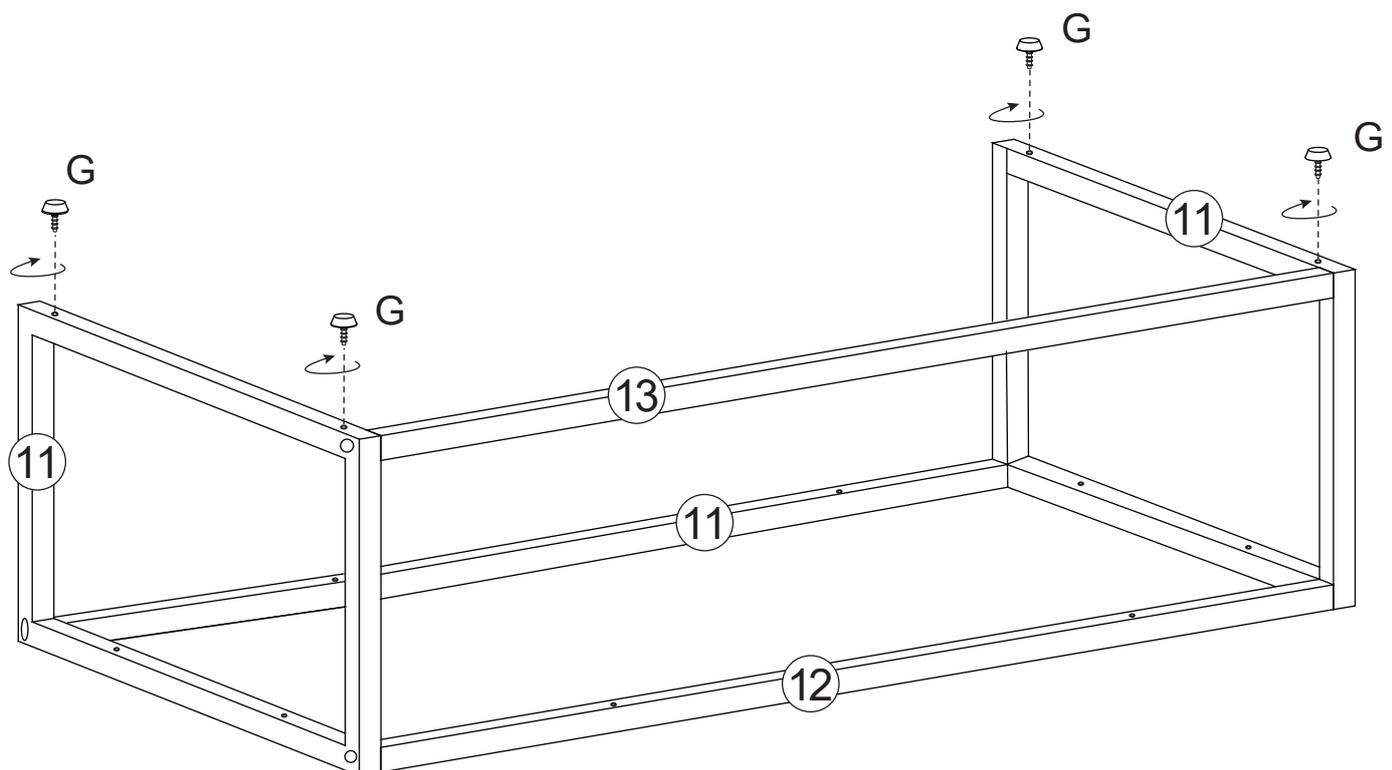


ASSEMBLY STEPS

STEP 11.


Fix Iron frame to part 8 using screws (Q).

Turn Allen key (I) clockwise to tighten, as shown.

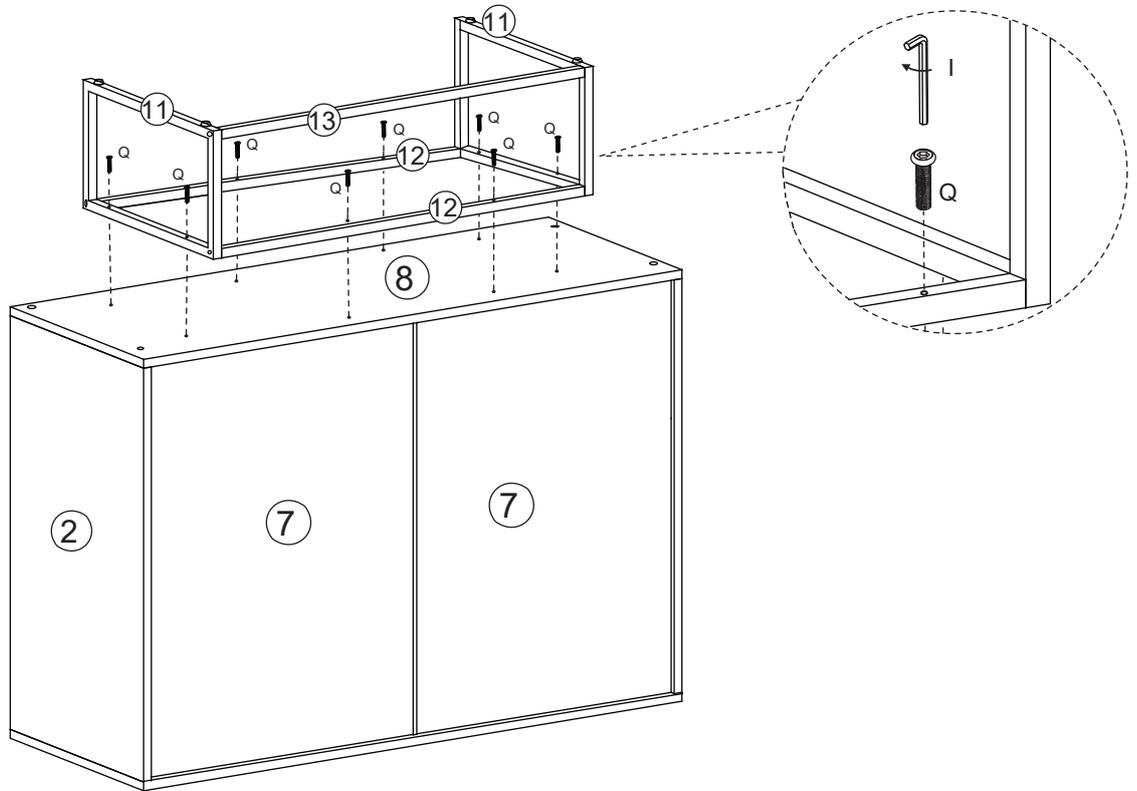

STEP 12.


Fit shelf supportors (P) to the inside of parts 2 and 4, as shown.

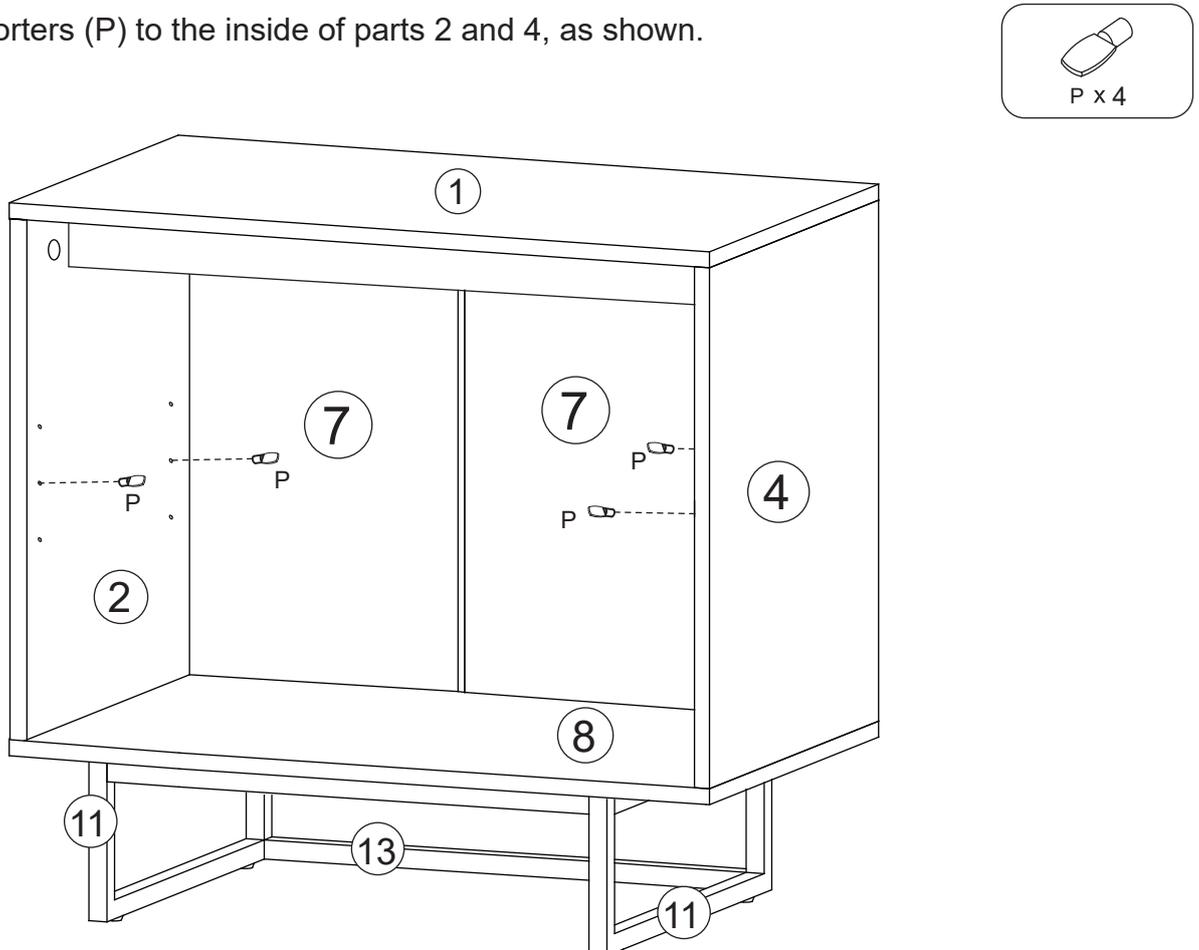

ASSEMBLY STEPS




STEP 13.

Place part 6 on shelf supporters, as shown.

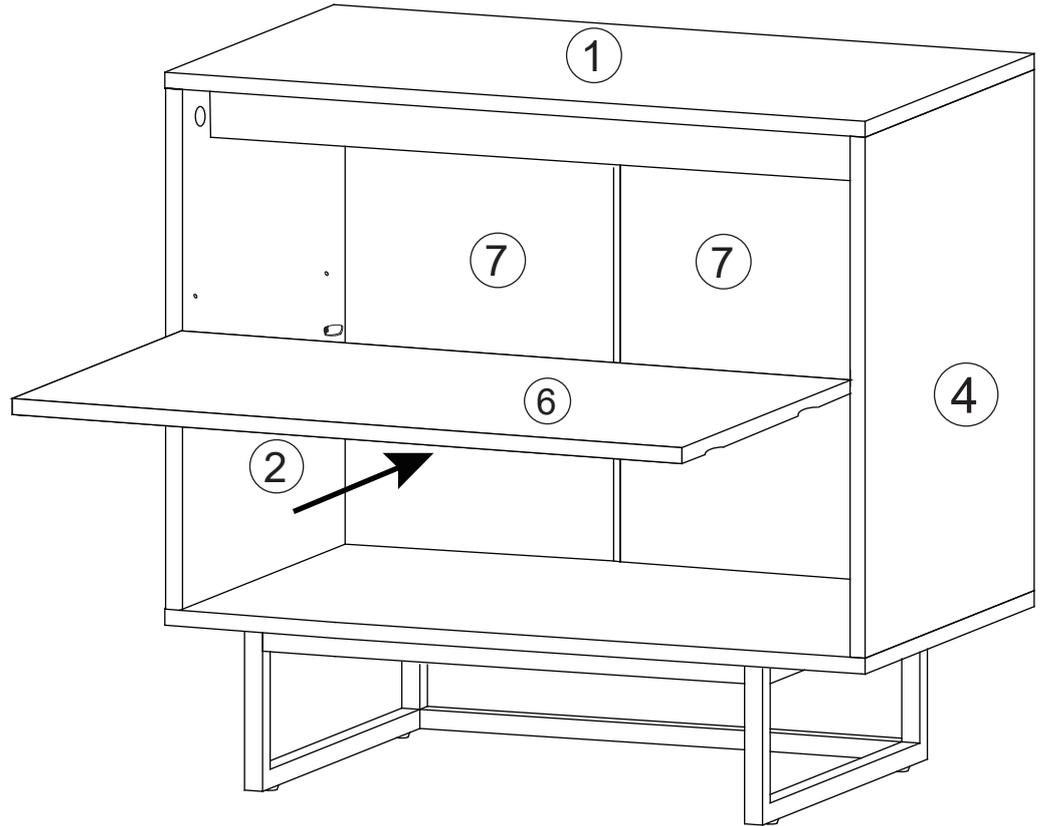

STEP 14.




Fix door 9 to the assembled unit using hinges and screws (F), as shown.

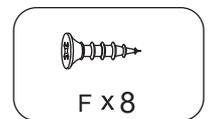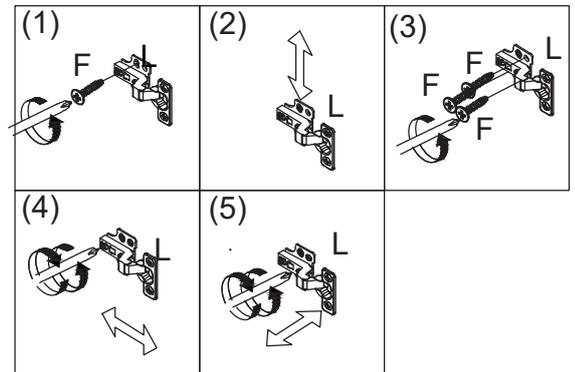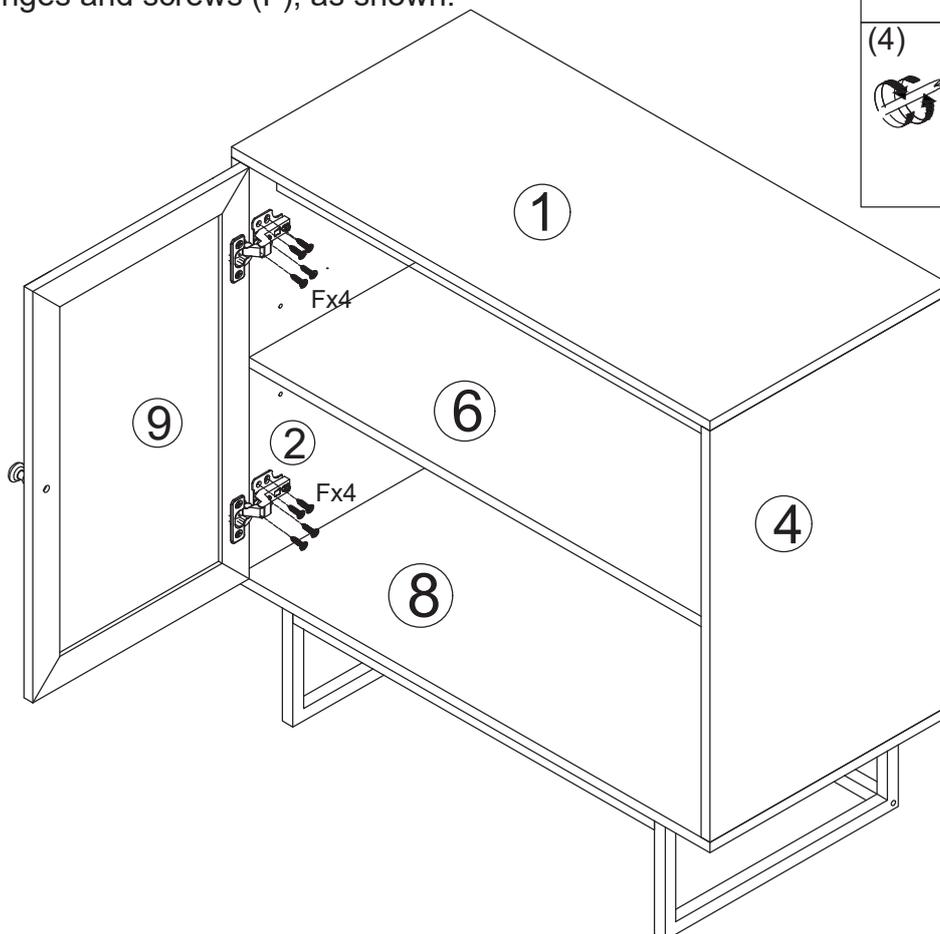

ASSEMBLY STEPS



STEP 15.

Fix door 9 to the assembled unit using hinges and screws (F), as shown.

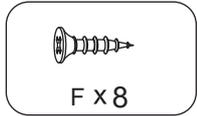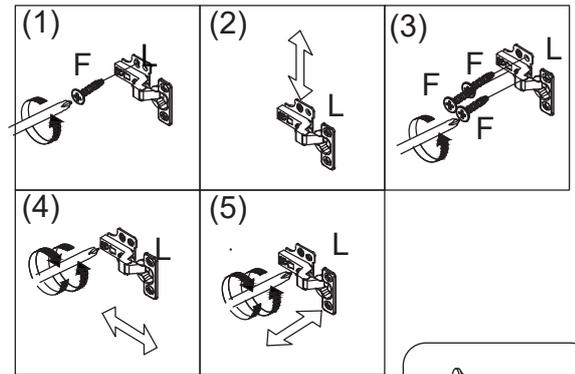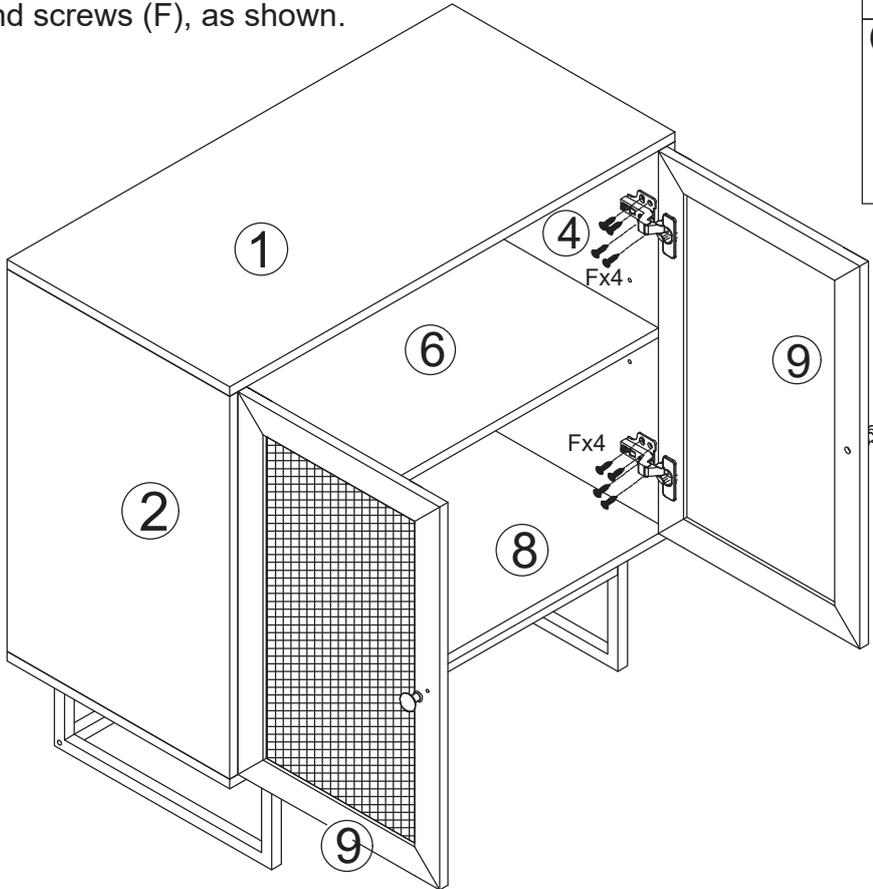

STEP 16.

Fix corner brackets (J) to parts 7 using screws (K), as shown.

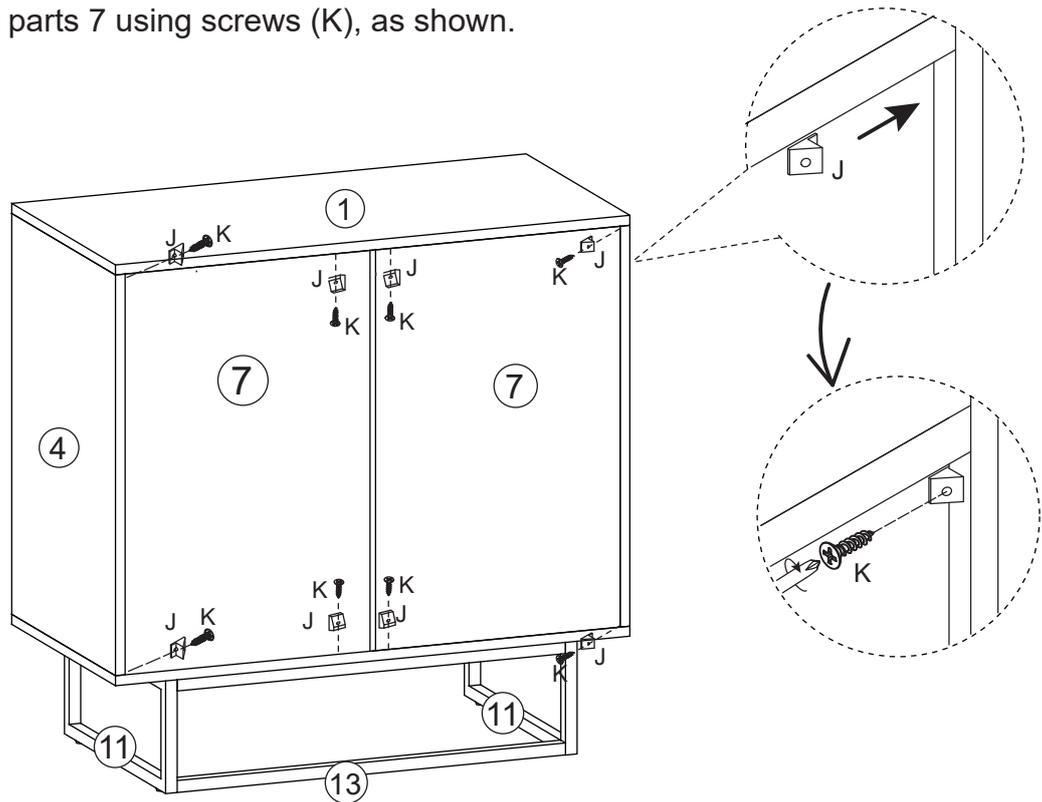
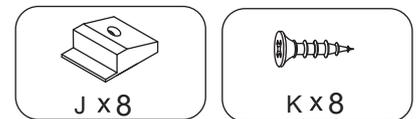


ASSEMBLY STEPS

STEP 17.

Fix wall straps (O) on to assembled unit using screws (N) and washers (R), as shown.

O

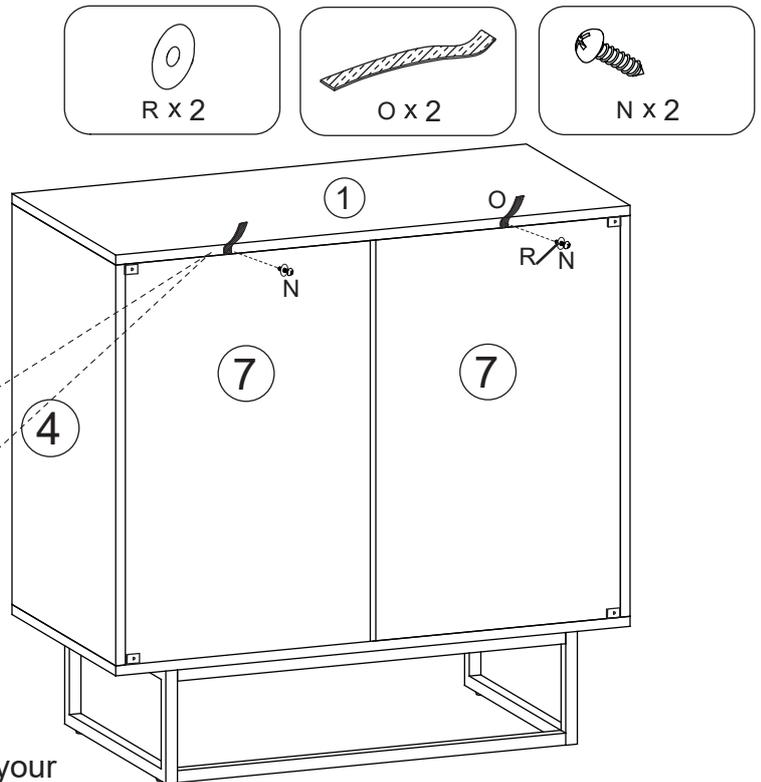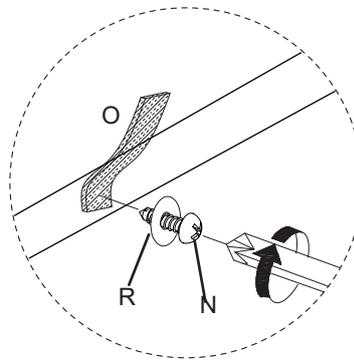

STEP 18.

For extra stability, it is recommended that you fix your cabinet to the wall using additional hardware (E,R and M), as shown.

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

