#### Item #: AF20MATST

#### **Assembly Instruction**







Please visit our website for the most current instructions, assembly tips report damage, or request parts. www.walkeredison.com


### **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.




VI. Power tools should not be used to assemble this product.



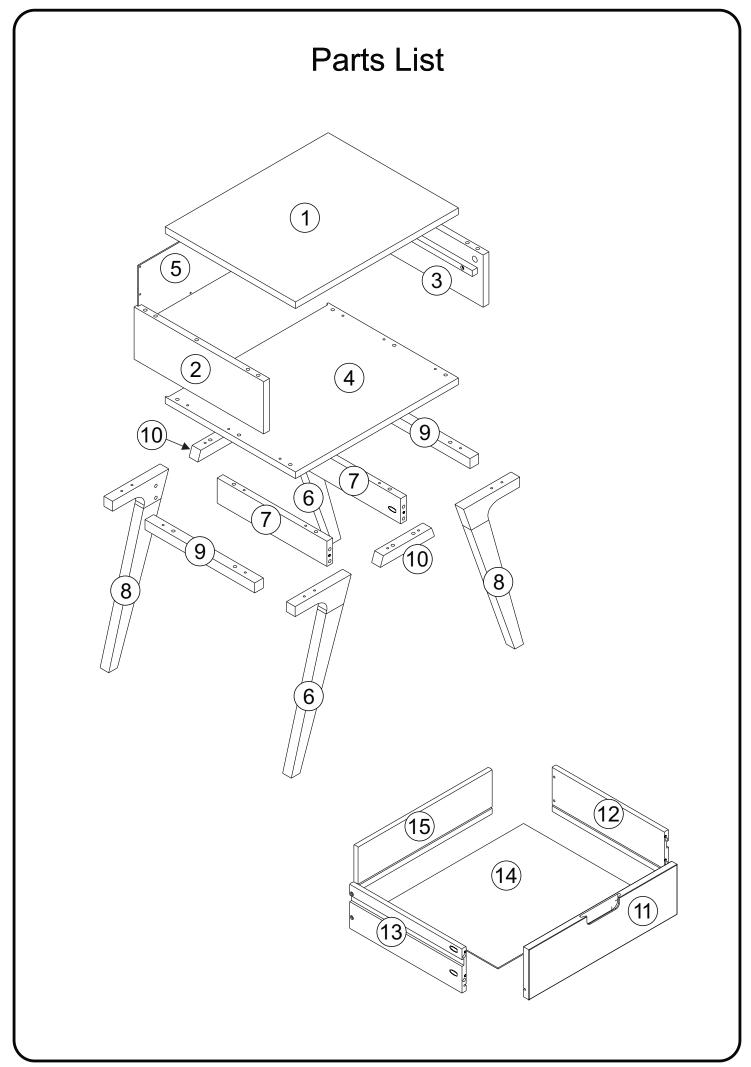

### **Hardware List**

Α		Ø 5,5x28mm	Cam Bolt	06 pcs
В		Ø 14x14mm	Cam Lock	06 pcs
С	<b>E</b> Manimanian	Ø 4,0x40 mm	Screw	24 pcs
D		Ø 4,0x30 mm	Screw	14 pcs
E		Ø 3,0x16 mm	Screw	11 pcs
F		Ø 8,0x30 mm	Wood dowel	34 pcs
G			Drawer Limiter	01 pc




Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly.


Some extra hardware may also have been included.


# Step 1 Place Wood Dowel (F) in parts 2,3,7,9,10,12,13.

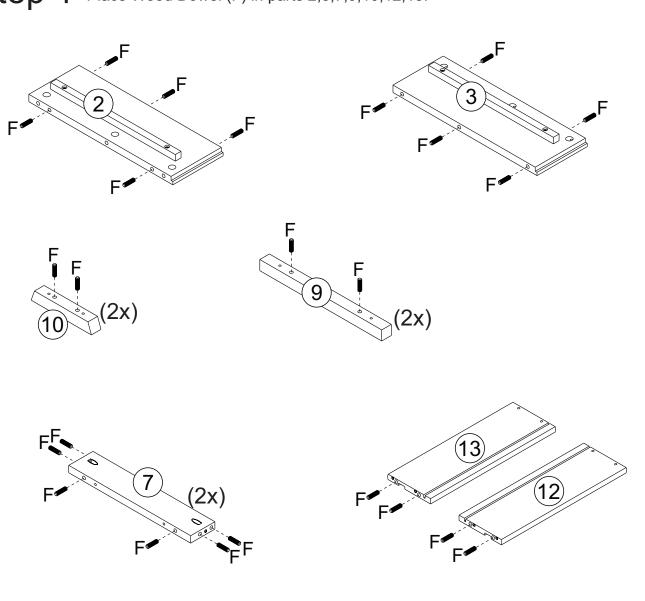


## Step 2


Attach Cam Bolt (A) to Part 1. Use Screw (E) to attach Drawer Limiter (G) to Part 1.

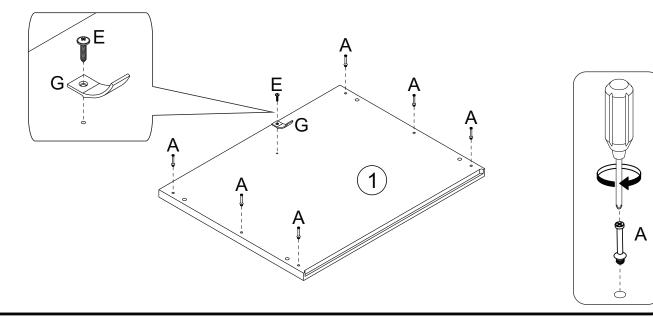

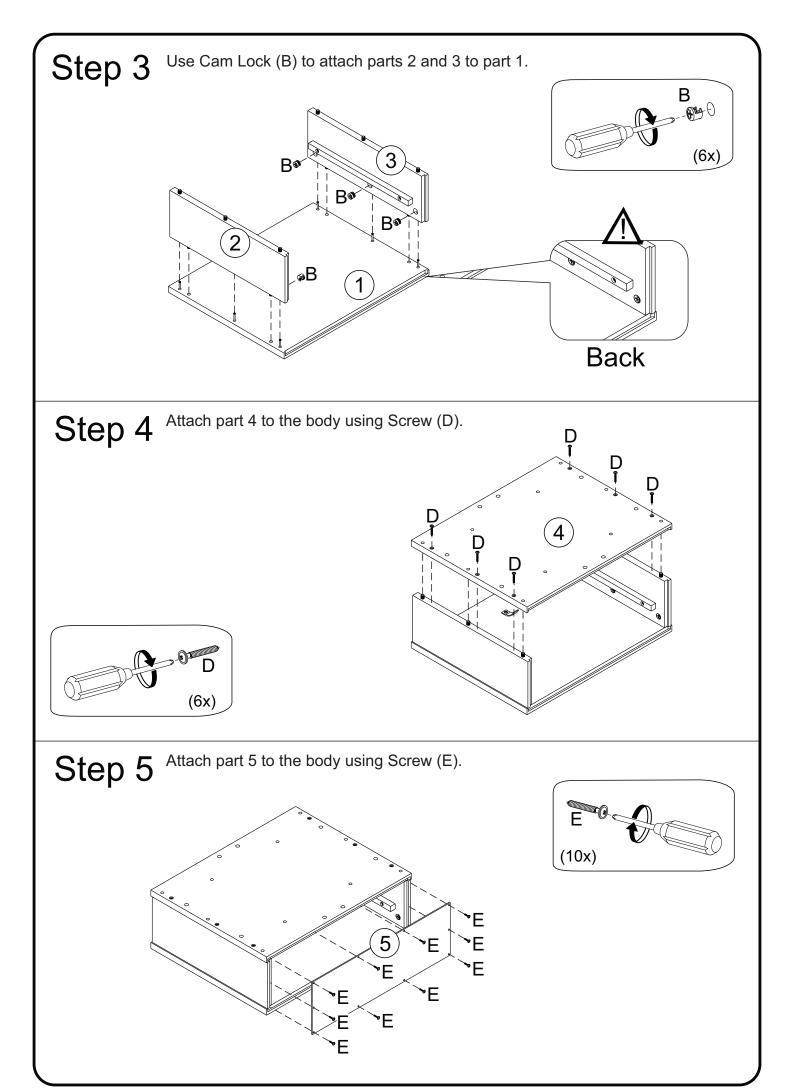

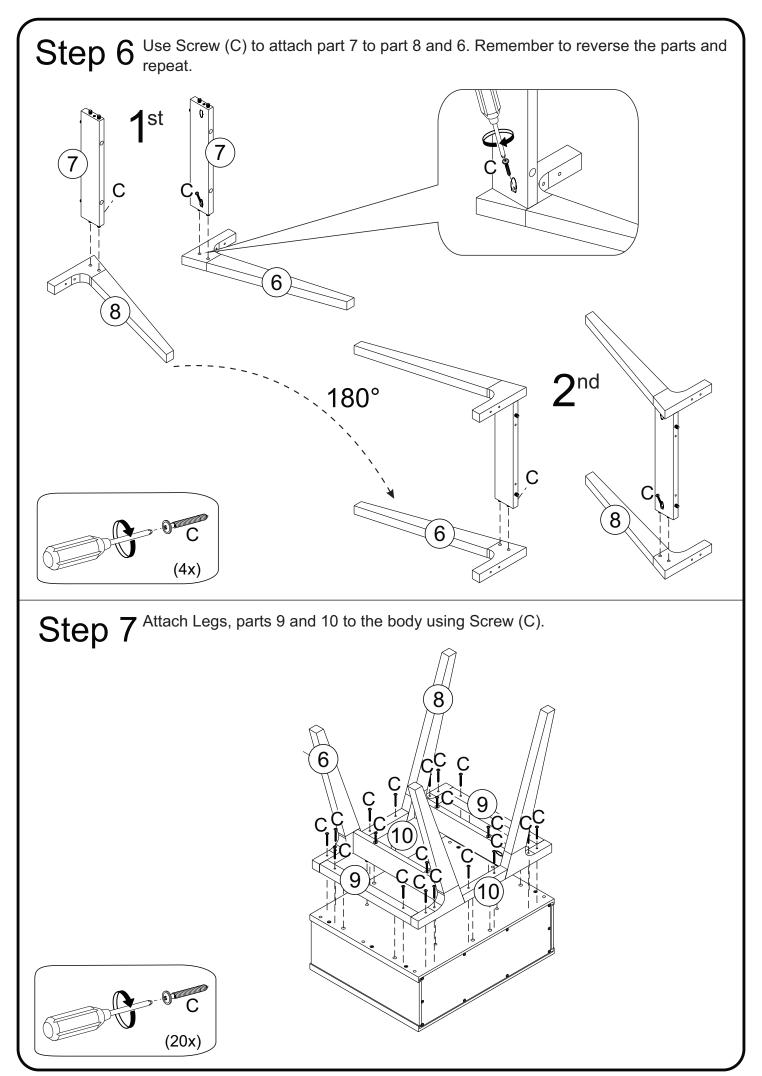

Step 8 Attach parts 13 and 12 to part 11 using Screw (D). Insert part 14 into the drawer and attach part 15 to the drawer using Screw (D).

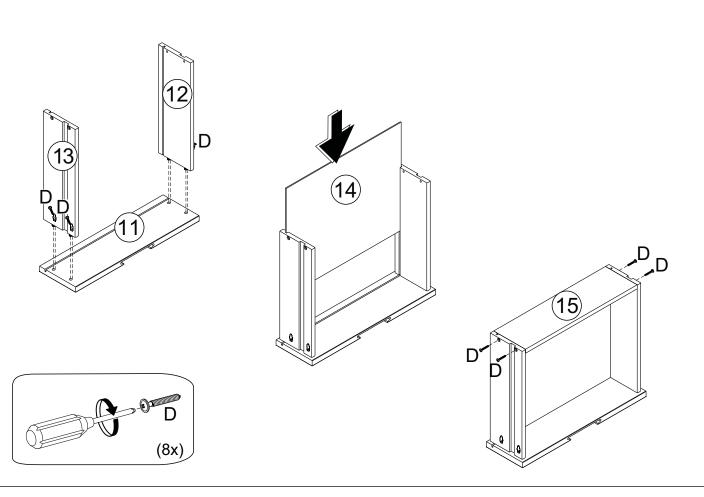

Step 9

