

ASSEMBLY INSTRUCTION

Curved Desk, (59401, 59402)







- ! Do not throw away packaging materials until assembly is complete.
- ! Assemble this item on a soft surface, such as cardboard or carpet, to protect finish.
- ! Proper assembly of this item requires 2 people & would require approx 10 minutes to assemble.

CARE INSTRUCTIONS

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners. Any liquid spilled onto the table should be cleaned up immediately with a damp cloth.

PARTS

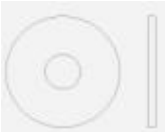

<div>D</div> <div></div> <div>Allen Bolt M8, 50mm, 6x</div>	<div>E</div> <div></div> <div>Allen Bolt M8, 60mm, 2x</div>	<div>F</div> <div></div> <div>Washer 25mm 6x</div>
<div>G</div> <div></div> <div>Spring Washer 6x</div>	<div>H</div> <div></div> <div>Allen Key M6, 1 x</div>	<div>I</div> <div></div> <div>Allen Key M5, 1 x</div>

Step 1- Lay the Table top panel (A) upside down on to a clean smooth surface. Take legs assembly (B) and match it with its respective side.

The slots on the Top and legs are numbered. Match the number on the leg assembly with that on the Top, while attaching.

Insert Allen Bolt (D) with washer (F) & spring washer (G) & Loosely Tighten with Allen Key (H).

Step 2- Now align the bottom Stretcher (C) with legs (B) as shown. Insert the stretcher tenon in the front leg's slot.

Step 3- Insert Allen Bolt (E) & in back legs & loosely Tighten with Allen Key (I).

Step 4 - Now fully tighten all Allen Bolts (D) & (E) with Allen Key (H) & (I).

Step 5 - With help flip the Table upright.



STEP - 1



STEP - 2



STEP - 3



STEP - 4



STEP - 4



STEP - 5

