



# ASSEMBLY INSTRUCTION

SPOL 1790 Chairside Table

SKU#

Thank you for purchasing our product, please study the diagram and inventory all parts before assembling.







Important Note:

Follow instructions listed below in the proper sequence to assure fast, easy and correct assembly.





Do not completely tighten until the item has been fully assembled.

1. Upon opening thoroughly clean all wood surfaces with a clean soft cloth and furniture polish to remove dust and dirt that may have settled during shipment.


## PARTS TABLE

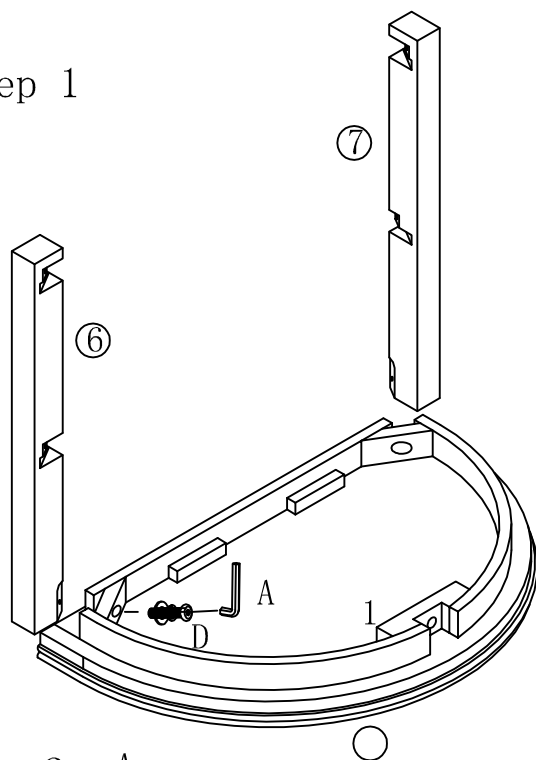①	TOP 	1 PC	④	BASE 	1 PC
②	SHELF 	1 PC	⑤	FRONT LEG 	1 PC
			⑥	LEFT BACK LEG 	1 PC
			⑦	RIGHT BACK LEG 	1 PC


## HARDWARE LIST

A		ALLEN WRENCH ( $\varnothing 1/4$ )	1Pc	C		6PCS
B		Bolt: $\varnothing 1/4 \times 1/2$ " 8 threads per inch Lock washer: $\varnothing 1/4$ " Washer: $\varnothing 1/4 \times 16$ mm	12PCS	D		3PCS

### Step 1



### Step 2

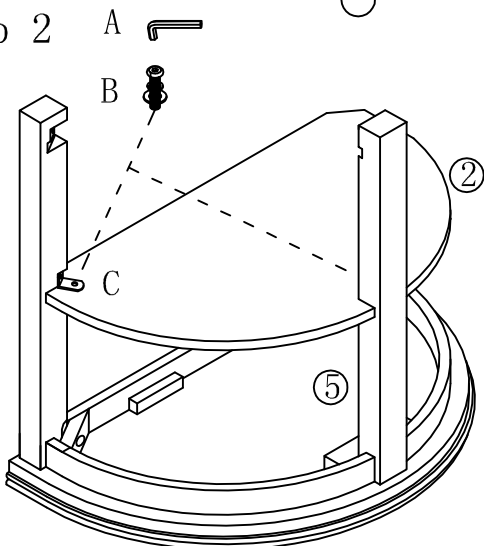


## ASSEMBLY INSTRUCTION


DO NOT COMPLETELY TIGHTEN UNTIL ALL ITEMS HAVE BEEN FULLY ASSEMBLED

1. Assembly ① with ⑥⑦ use A and D
2. Assembly ② with ⑤⑥⑦ use A B and C
3. Assembly ④ with ⑤⑥⑦ use A B and C
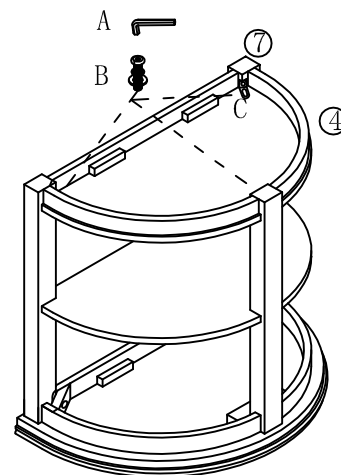
### Step 3



### Step 4

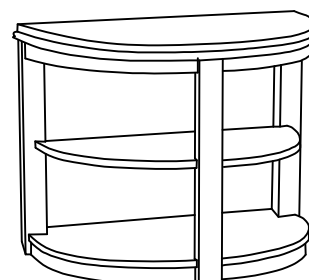

MADE IN CHINA