








Factory Code: KKBB


Manufactured by (KKBB) for Rooms To Go

Assembly Instruction  
Item No. - 23162427


Thank you for purchasing this quality product . be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment .  
(note : Loosely thread all screw/bolts first . once the item is assembled then completely tighten.

PART LIST				HARDWARE LIST				
No.	Description	Sketch	QTY					
1	TOP		1	3		WASHER	8 MM	9
2	LEG		1	4		SMALL BOLT WITH 11 THREADS	20X6 MM	5
				5		BIG BOLT WITH 15 THREADS	25X6 MM	5
				6		ALLEN WRENCH	4 MM	1
				7		SPRING WASHER	6 MM	9


STEP : 1

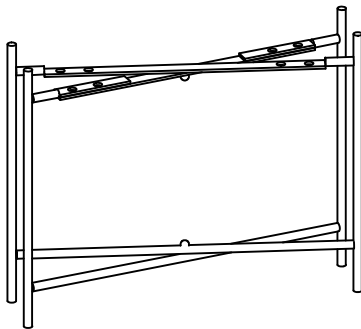

STEP : 2

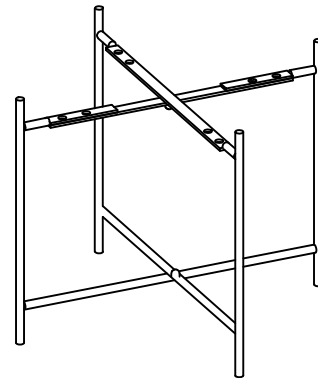


STEP : 3

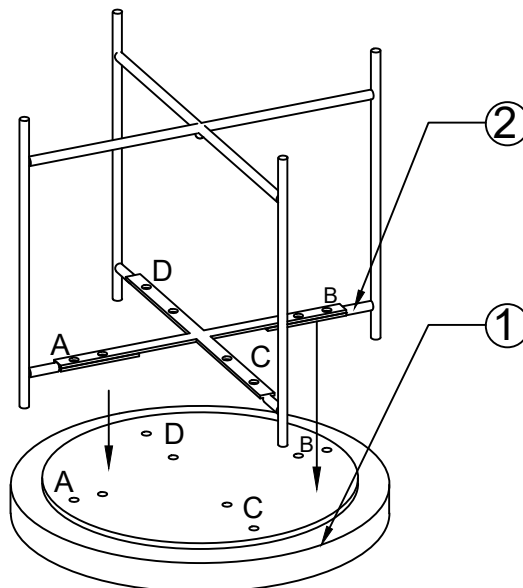


# Assembly Instruction Item No. - 69217

## STEP : 4

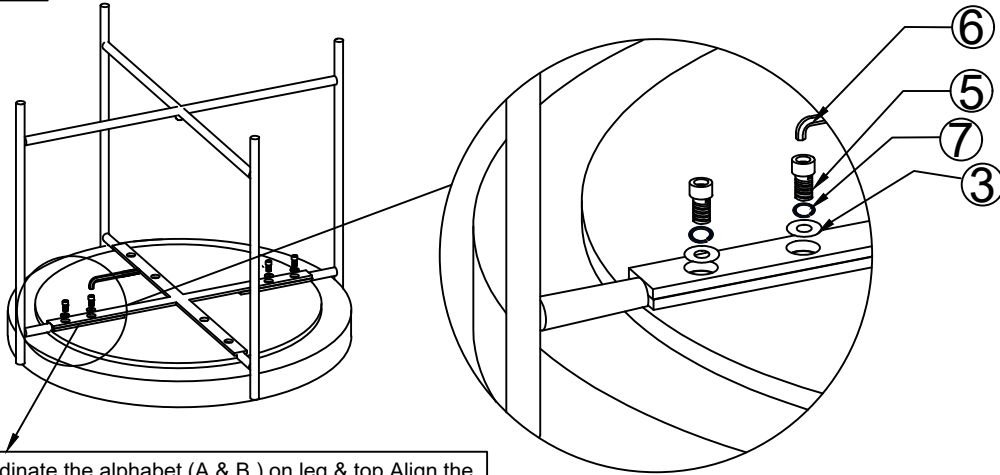



Coordinate the alphabet (A & B ) on leg & top.Align the holes on the top (1) with the holes on leg (2).Insert the large bolts (5) & metal washers (3) & use the Allen wrench (6) to tighten all the bolts to 100%.

## STEP : 5

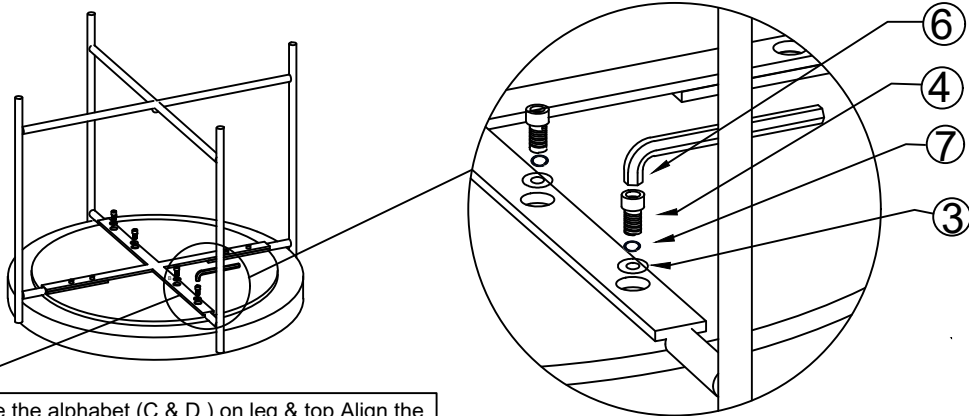

Coordinate the alphabet (C & D ) on leg & top.Align the holes on the top (1) with the holes on leg (2).Insert the small bolts (4) & metal washers (3) & use the Allen wrench (6) to tighten all the bolts to 100%.

## FINAL PRODUCT

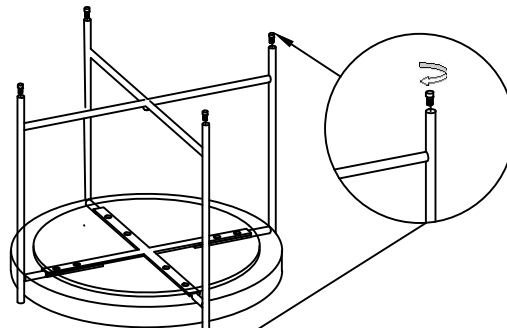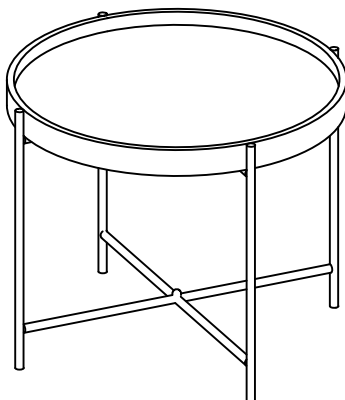

Some times the furniture will not balance because of an uneven floor surface its rests on. In that case ,try adjusting the levelers found on the bottom of each foot to aid in correcting.