







Step	Code	Hardware		Q'TY
	A	Allen key M4x110mm		1 Pc


PARTS LIST

1.Top glass - 1 Pc	
2.Shelf glass - 1 Pc	
3. Side Legs - 2 Pcs	
4. Middle Legs - 1 Pc	
5. Stretcher Metal - 1 Pc	

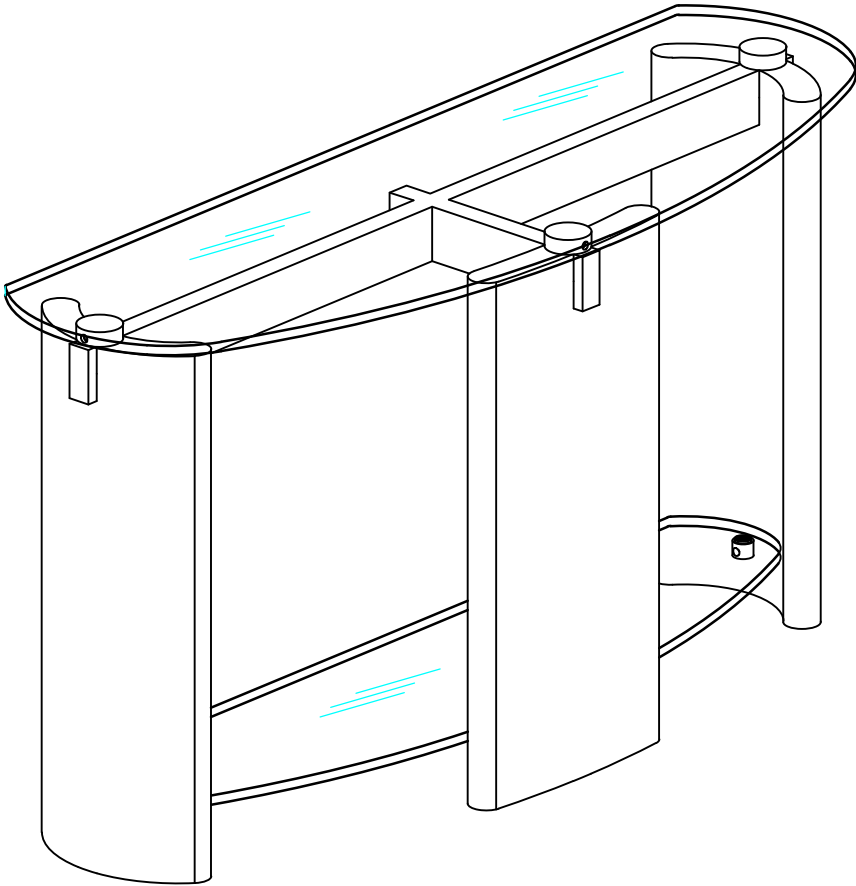


***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

Step 1


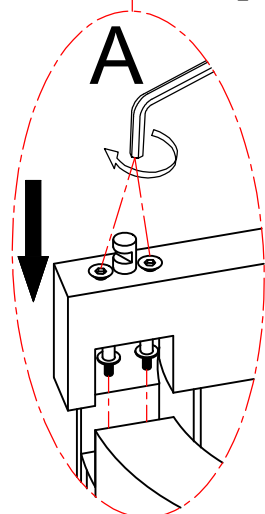


Allen bolt is already attached to the stretcher metal.

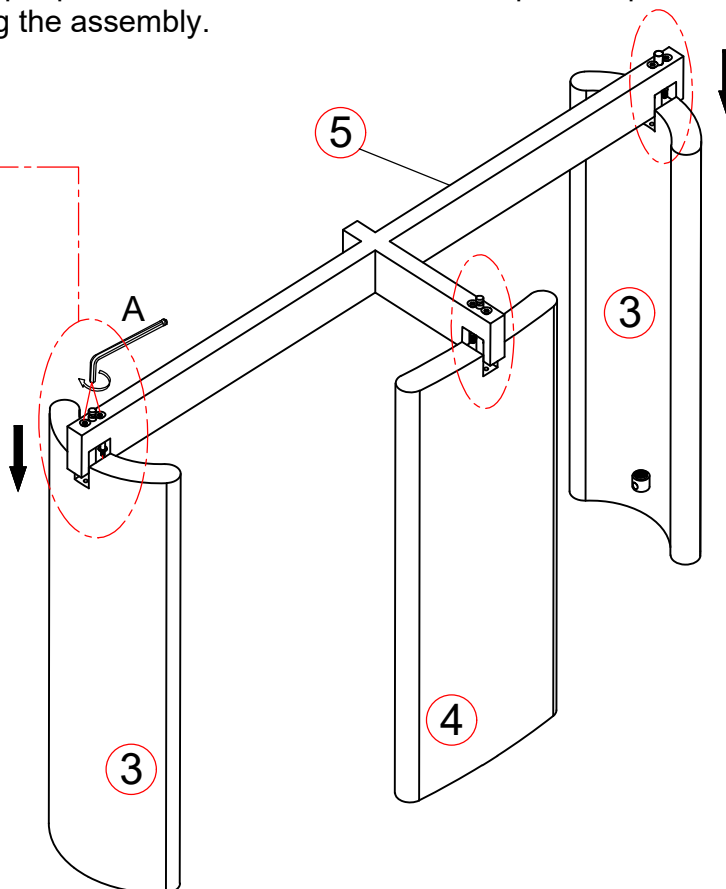


Step 2

Tilt the glass shelf then put in

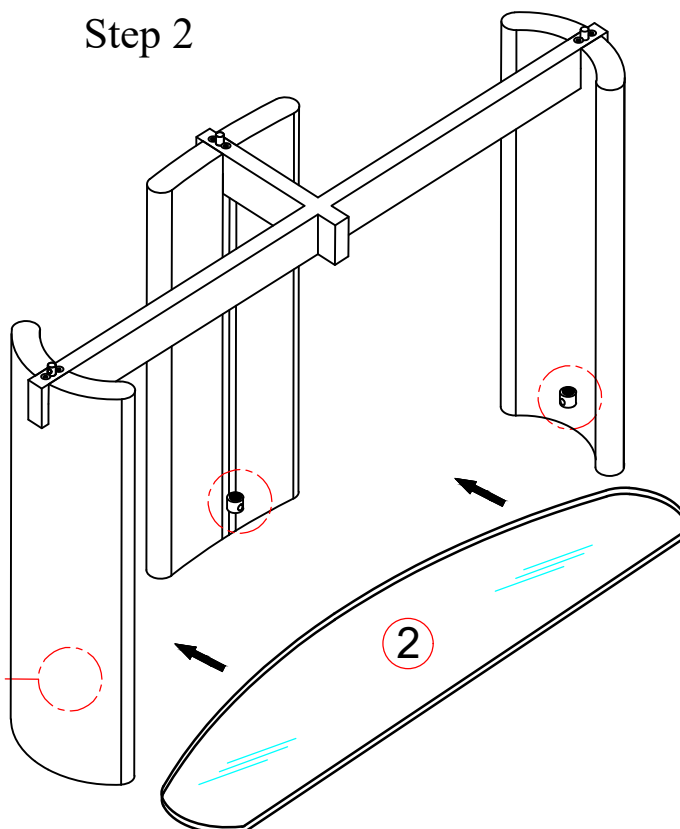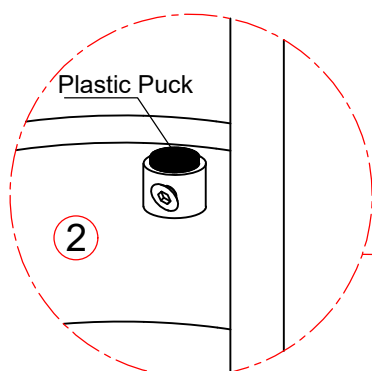

***Cautions: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

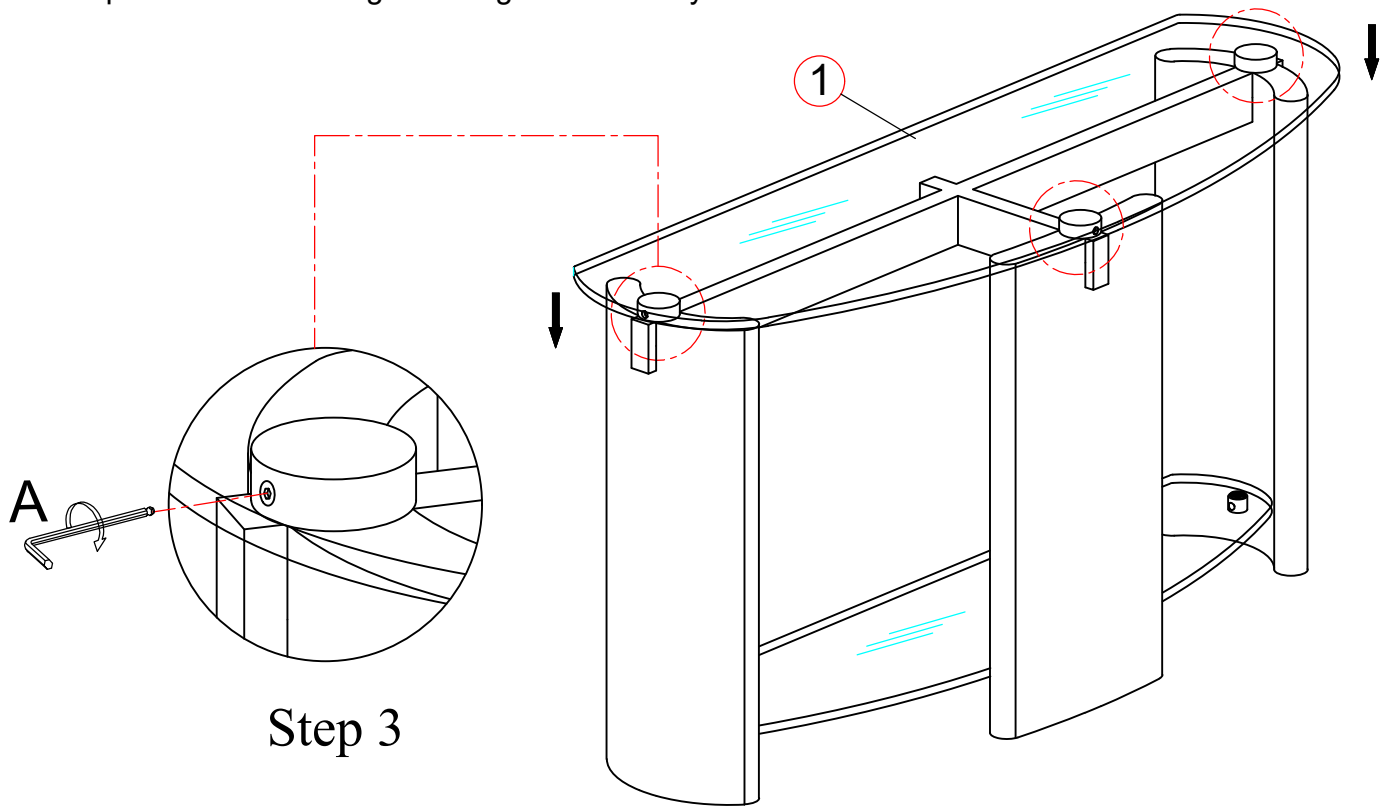

Step 4

