



Assembly Instructions





ASPN I3189-225 OPEN DISPLAY CASE/PIER SKU # 24231893

Version #1 - 2025/04/30

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


No.	Parts List	Q'ty
1	OPEN DISPLAY CASE/PIER 	1 PC

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER 

HARDWARE LIST			
No.	Description	Sketch	Quantity
A	Allen Bolt - Ø1/4"x20x3/4"		4 PCS
	Lock Washer - Ø1/4"		4 PCS
	Flat Washer - Ø1/4"x3/4"x1/16"		4 PCS
B	Metal Plate		1 PC
C	Allen Key - 4mm		1 PC
D	Anti-Tip Device		1 Set

**ANTI-TIP DEVICE MUST BE
INSTALLED BY CUSTOMER**

FUNCTIONALITY INSTRUCTION

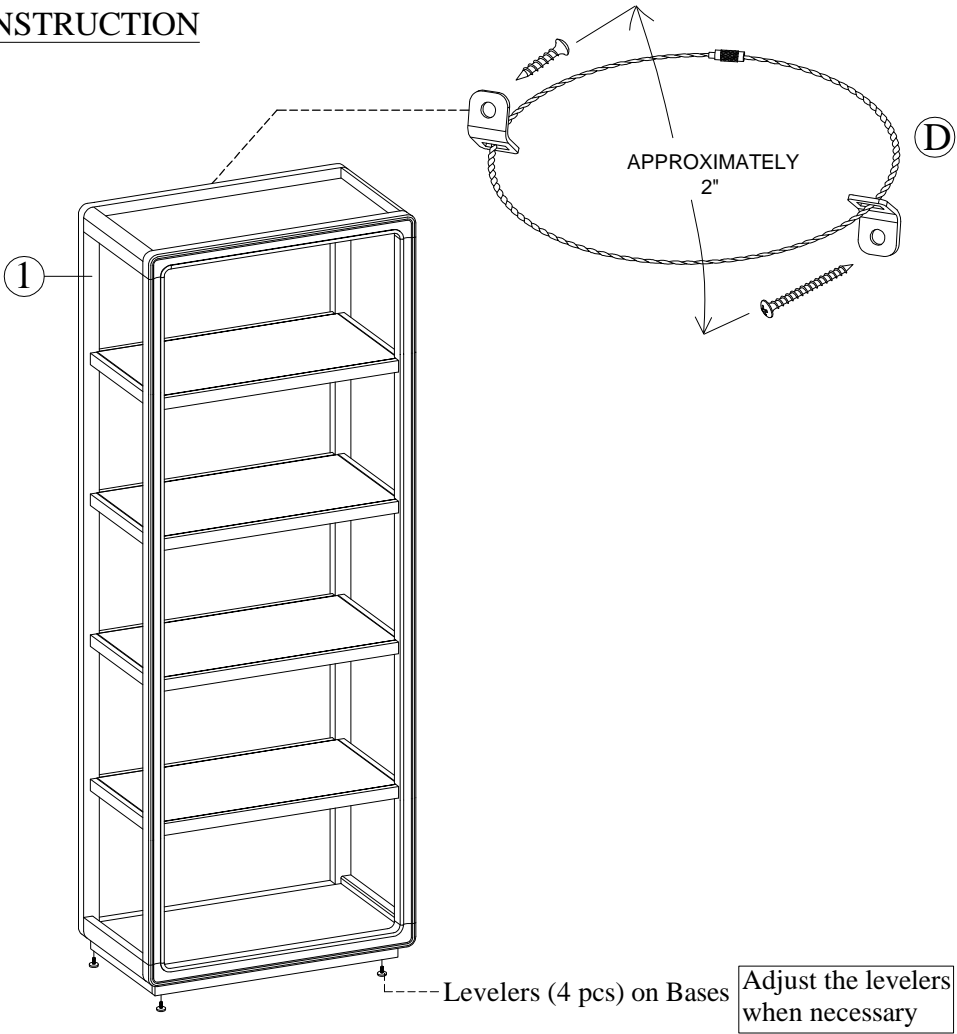

Hardware Pack Location(S):

ASPN I3189-225 OPEN DISPLAY CASE/PIER SKU # 24231893

This product is manufactured by ASPN for

MADE IN VIETNAM

ROOMS TO GO 

Assembly Instructions

ASPEN I3189-225 OPEN DISPLAY CASE/PIER SKU # 24231893

Version #1 - 2025/04/30


***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

This DISPLAY CASE / PIER is not only to set up on its own, but also to set up with consoles by both Option 1 & Option 2.

STEP 1: Attach each Pier to the console with the metal plate (B) using 4 bolts (A) with an allen key (C) as shown right. Completely tighten all bolts.


OPTION 1:

ASPEN I3189-272 70" CONSOLE
W/ 6 DRAWERS - SKU: 24131891
(sold separately)

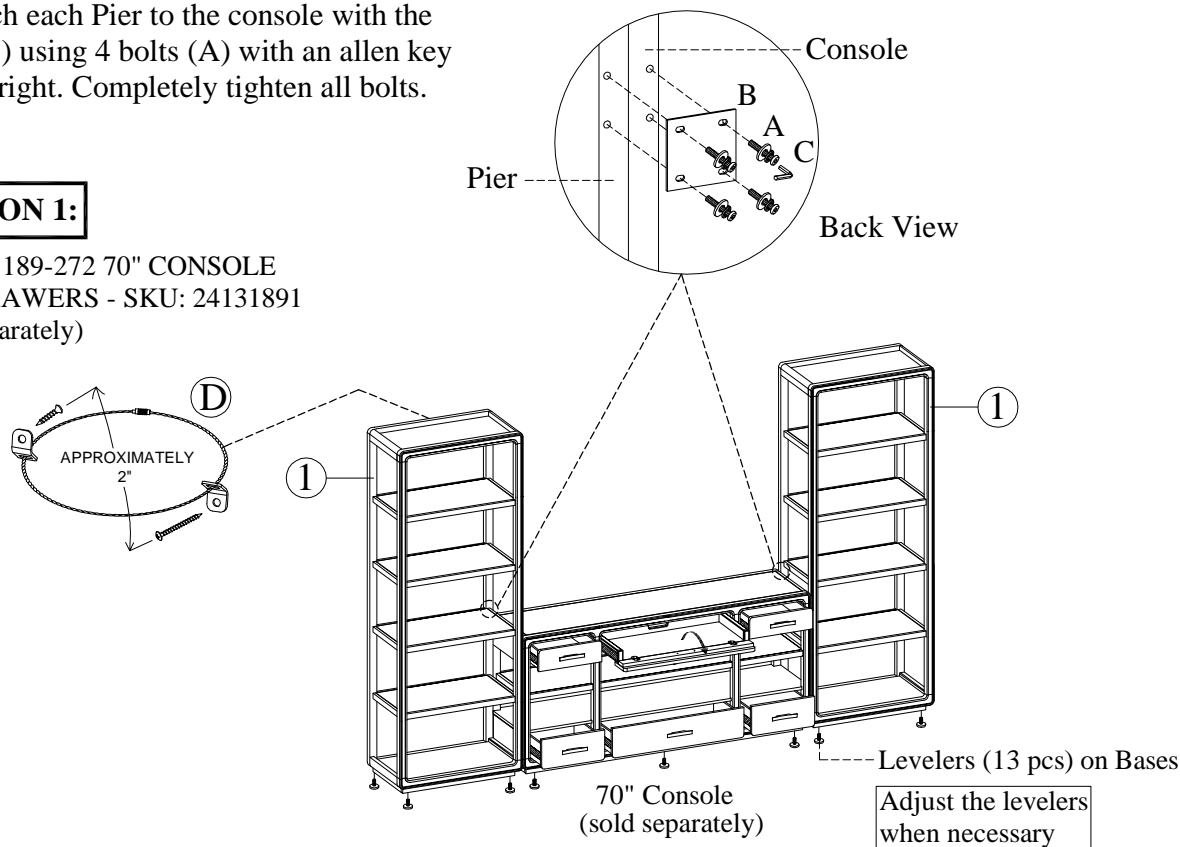

OPTION 2:

ASPEN I3189-284 84" CONSOLE
W/ 6 DOORS - SKU: 24031899
(sold separately)

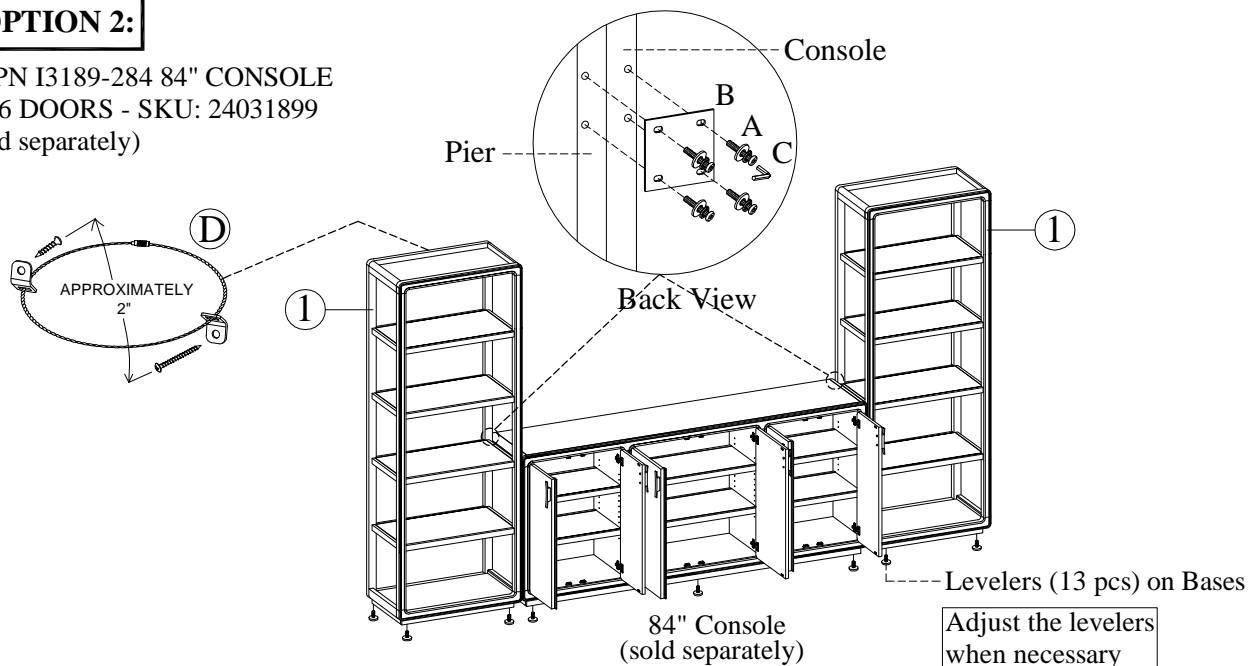


This product is manufactured by ASPEN for

ROOMS TO GO ►

MADE IN VIETNAM

2 OF 2

ANTI-TIP DEVICE

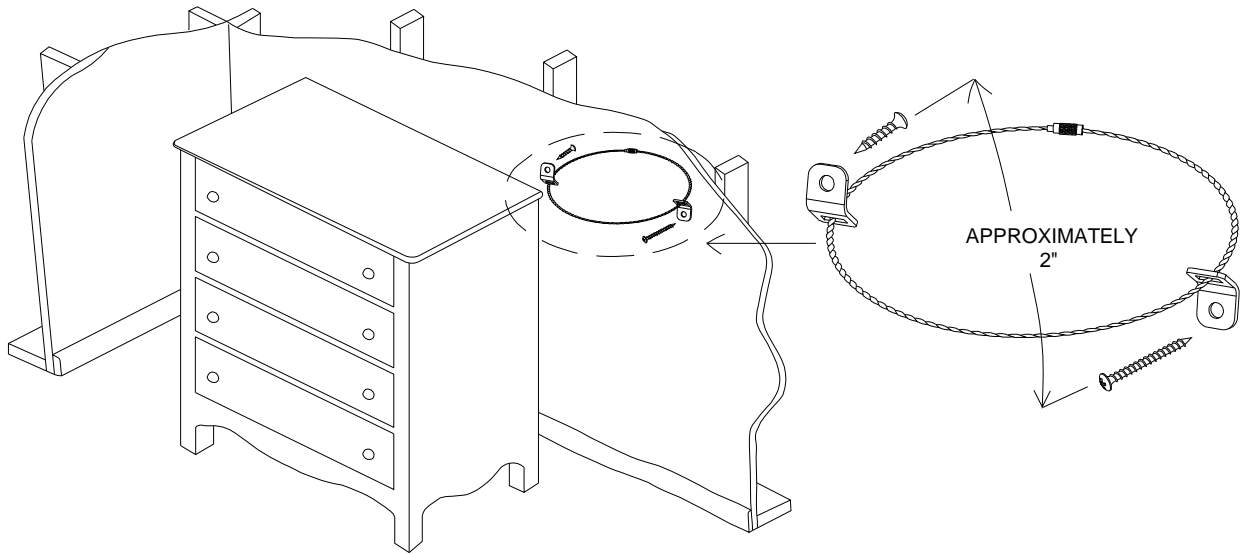

Installation Instructions:

This anti-tip device must be attached to a wall stud using the 2" screw enclosed.

1. Attach a bracket securely to the back top rail or back top edge of the furniture using the 5/8" screw provided, through the smaller hole in the bracket.
2. Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole in the bracket.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the threaded end of the restraint cable through the rectangular hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight .
5. Confirm that the cable is securely laced and locked.

MADE IN VIETNAM