

Assembly Instructions

600-076 76" Console

SKU 24160133

This product is manufactured by HLLM for

ROOMS TO GO ►


HARDWARE

QTY	DESCRIPTION
1	1 Allen key. 

STEP 1: Remove the screw using the allen key provided and slide out the the central back panel.

STEP 2: Place the firebox inside the cabinet

STEP 3: Slide the panel back in and secure it with the screw using the allen key.

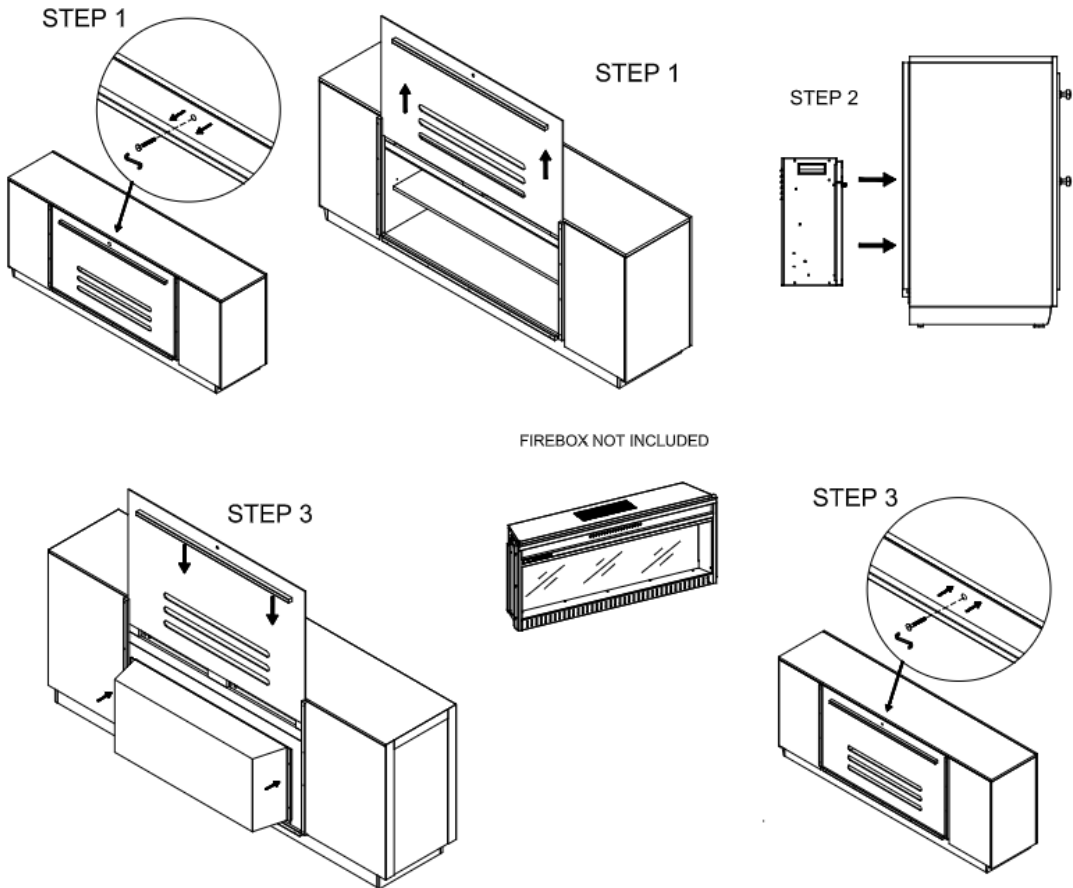

VERSION 01 CREATED 04/2026

Assembly Instructions


600-076 76" Console

SKU 24160133


This product is manufactured by HLLM for

ROOMS TO GO ►


STEP 1

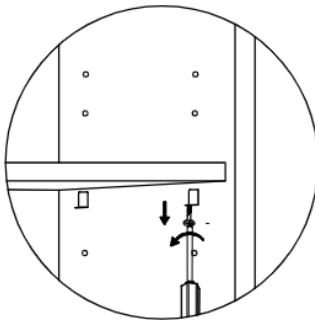

STEP 2

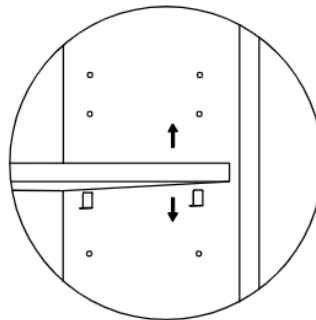

STEP 3

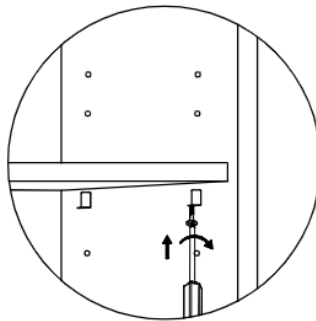

NOTE: SCREWDRIVER NOT INCLUDED

VERSION 01 CREATED 04/2026