



Assembly Instructions


ASPEN I3314-227-BLU OPEN PIER / BOOKCASE SKU # 24333142






ASPEN I3314-227-WHT OPEN PIER / BOOKCASE SKU # 24333154

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


No.	Parts List	Q'ty
1	OPEN PIER / BOOKCASE 	1 PC
2	LEG 	4 PCS

TOOLS REQUIRED (NOT PROVIDED)	
PHILLIPS SCREWDRIVER	

HARDWARE LIST			
No.	Description	Sketch	Quantity
A	Allen Key - 4mm		1 PC
B	Metal Plate		1 PC
C	Anti-Tip Device		1 Set
Pre-installed on Part 1	Allen Bolt -Ø1/4"x20x3/4"		4 PCS
	Lock Washer -Ø1/4"		4 PCS
	Flat Washer -Ø1/4"x3/4"x1/16"		4 PCS
	Allen Bolt Ø5/16"x18x2"		8 PCS
	Lock Washer Ø5/16"		8 PCS
	Flat Washer Ø5/16"x3/4"x1/16"		8 PCS
	T Nut Ø5/16"x3/4"x3/8"		8 PCS

FUNCTIONALITY INSTRUCTION

ANTI-TIP DEVICE MUST BE INSTALLED BY CUSTOMER

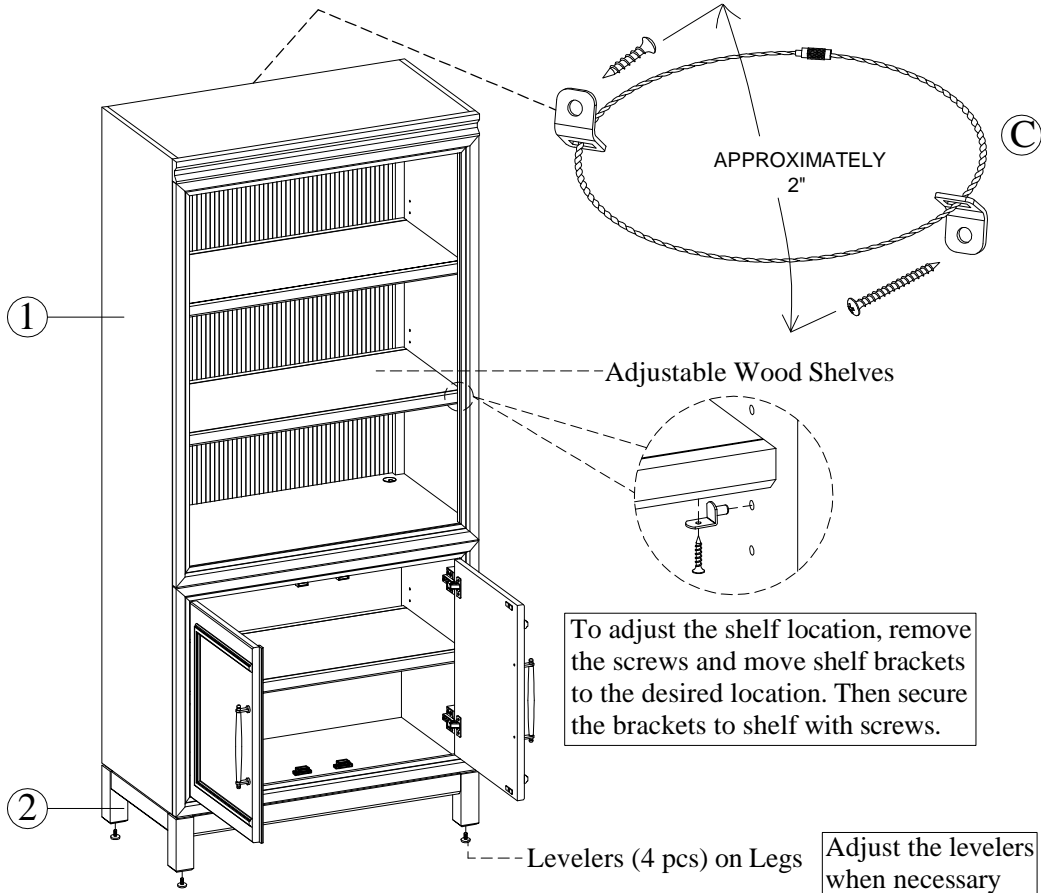

Hardware Pack Location(S):

ASPEN I3314-227-BLU OPEN PIER / BOOKCASE SKU # 24333142

ASPEN I3314-227-WHT OPEN PIER / BOOKCASE SKU # 24333154

This product is manufactured by ASPEN for

ROOMS TO GO

MADE IN VIETNAM

1 OF 3

Assembly Instructions

ASPN I3314-227-BLU OPEN PIER / BOOKCASE SKU # 24333142


ASPN I3314-227-WHT OPEN PIER / BOOKCASE SKU # 24333154

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


STEP 1: Put the open pier (1) backside down on a soft surface.

STEP 2: Attach the legs (2) to the bottom of open pier (1), then use an allen wrench (A) to tighten all the bolts.

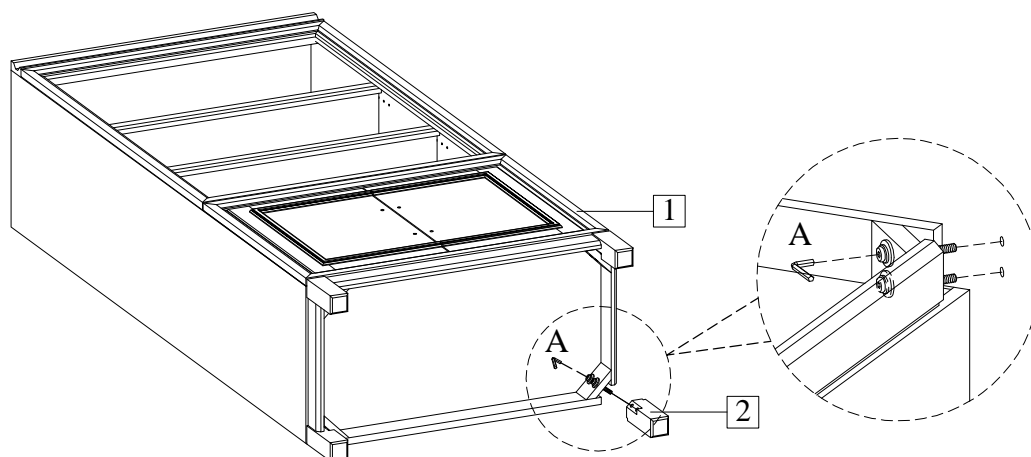

STEP 3: Return the assembled open pier to the upright position.

STEP 4: Reverse each handle by removing the screws while each door are open and attach all handles to the front of the doors with screws as shown below.

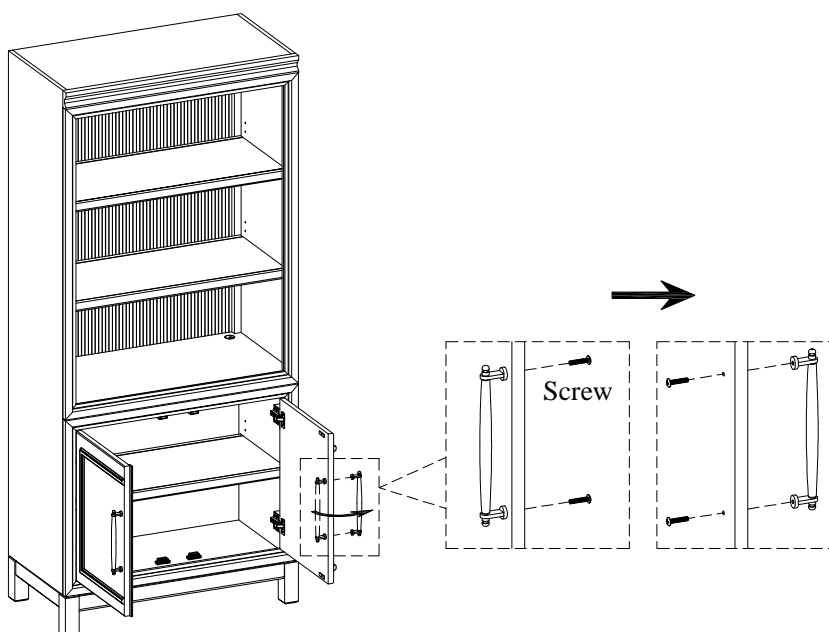

This product is manufactured by ASPN for

MADE IN VIETNAM

ROOMS TO GO ►

2 OF 3

Assembly Instructions

ASPN I3314-227-BLU OPEN PIER / BOOKCASE SKU # 24333142

ASPN I3314-227-WHT OPEN PIER / BOOKCASE SKU # 24333154

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

This OPEN PIER/BOOKCASE is not only to set up on its own, but also to set up with consoles by both Option 1 & Option 2.


STEP 1: Attach each Pier to the console with the metal plate (B) using 4 bolts (D) with an allen key (A) as shown below. Completely tighten all bolts.

Remark: Depending on your purchasing preference, AI3314-226-BLU/I3314-226-WHT (sold separately) may serve as an alternative to AI3314-227 BLU/ I3314-227-WHT on the opposite side, using the same setup instructions.

OPTION 1:

ASPN I3314-272-BLU 72" CONSOLE
W/ 4 DRAWERS - SKU: 24033146


ASPN I3314-272-WHT 72" CONSOLE
W/ 4 DRAWERS - SKU: 24033158
(sold separately)

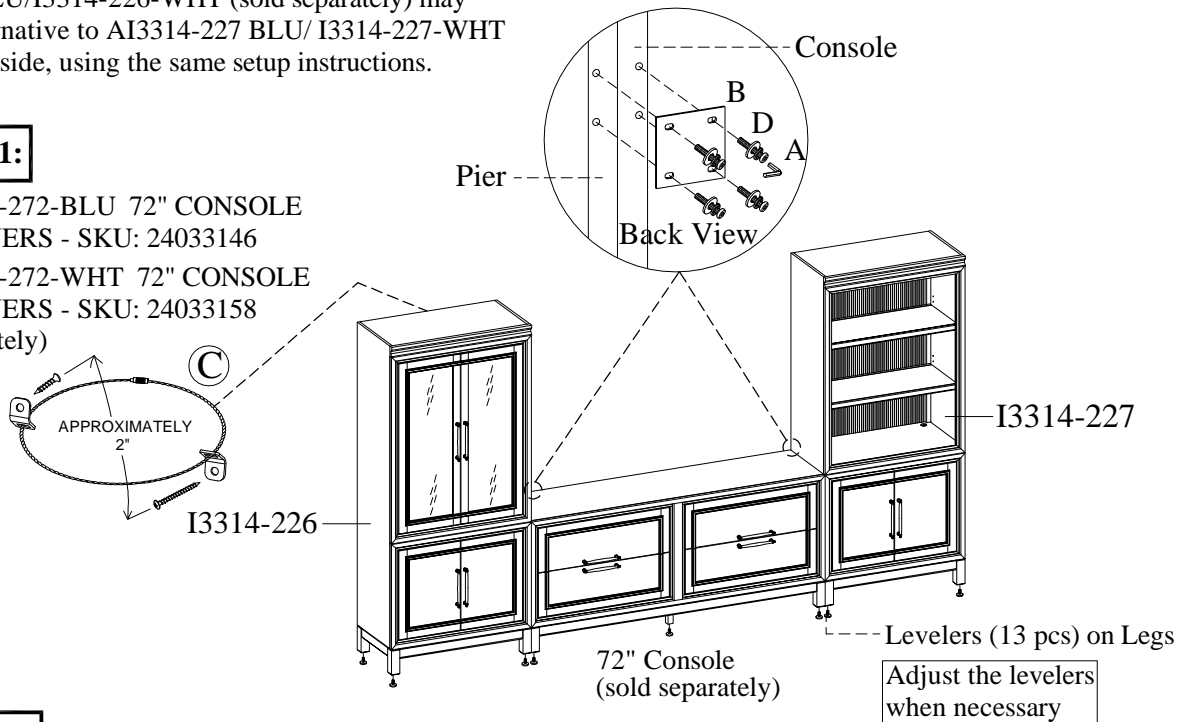

OPTION 2:

ASPN I3314-284-BLU 84" CONSOLE
W/ 2 DOORS - SKU: 24233140

ASPN I3314-284-WHT 84" CONSOLE
W/ 2 DOORS - SKU: 24233152
(sold separately)

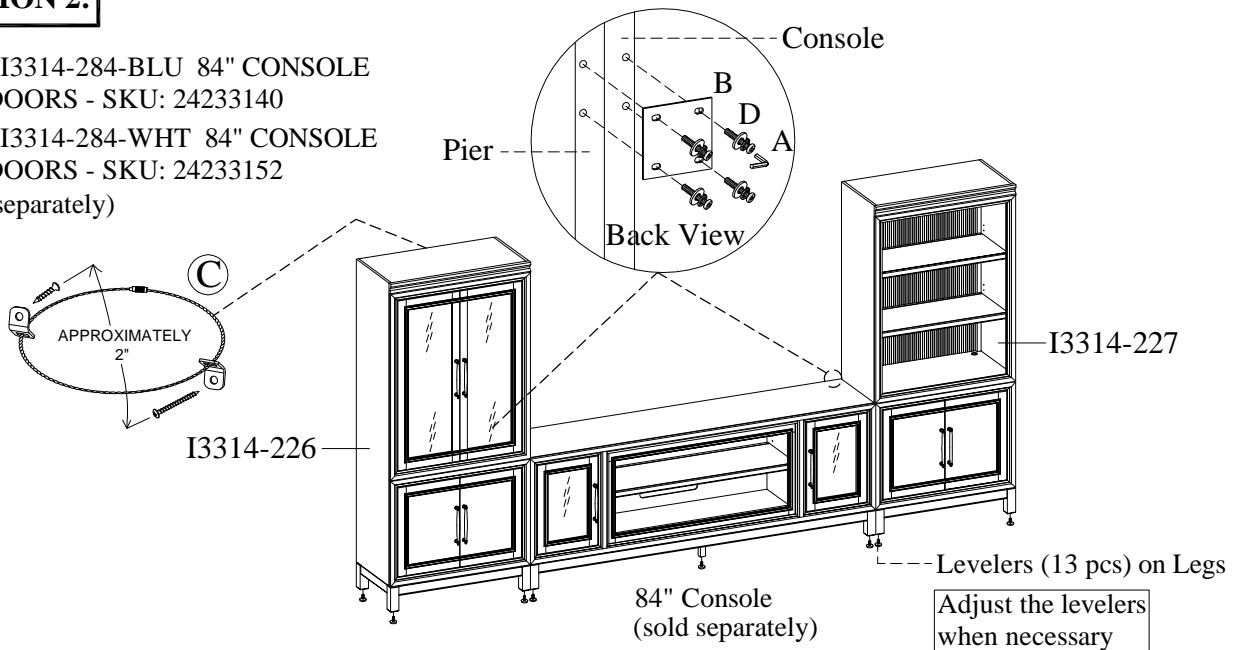


This product is manufactured by ASPN for

MADE IN VIETNAM

ROOMS TO GO ►

3 OF 3

ANTI-TIP DEVICE

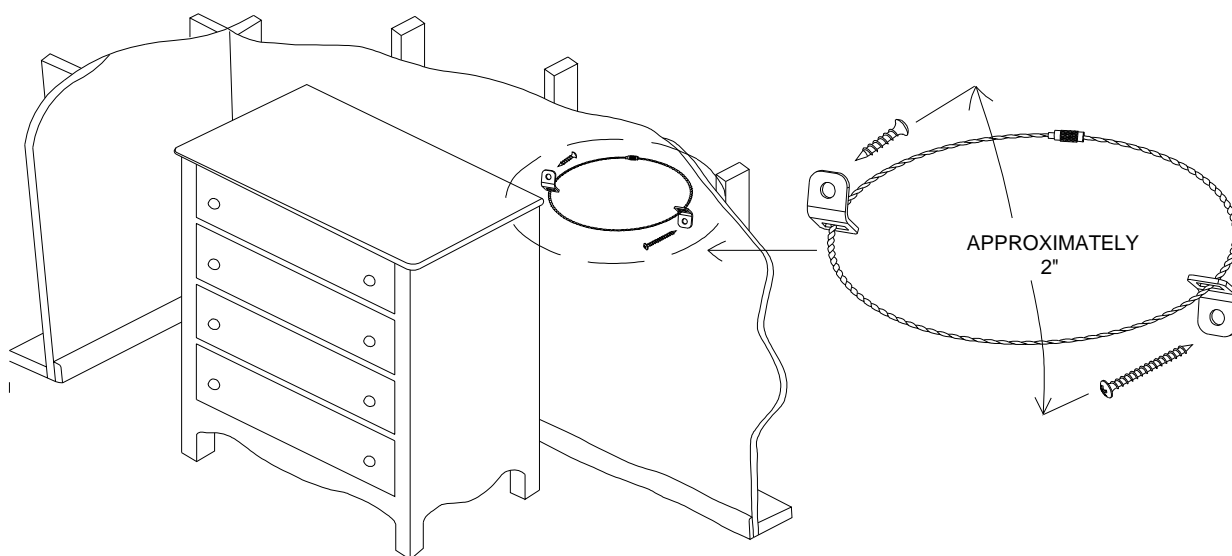

Installation Instructions:

This anti-tip device must be attached to a wall stud using the 2" screw enclosed.

1. Attach a bracket securely to the back top rail or back top edge of the furniture using the 5/8" screw provided, through the smaller hole in the bracket.
2. Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole in the bracket.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the threaded end of the restraint cable through the rectangular hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight .
5. Confirm that the cable is securely laced and locked.

MADE IN VIETNAM