

Assembly Instructions

ASPN I3314-226-BLU DOOR PIER SKU # 24433144
 ASPN I3314-226-WHT DOOR PIER SKU # 24433156

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

No.	Parts List	Q'ty
1	DOOR PIER	1 PC
2	LEG	4 PCS

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER




HARDWARE LIST

No.	Description	Sketch	Quantity
A	Allen Key - 4mm		1 PC
B	Metal Plate		1 PC
C	Anti-Tip Device		1 Set
D	Allen Bolt - \varnothing 1/4" x20x3/4"		4 PCS
	Lock Washer - \varnothing 1/4"		4 PCS
	Flat Washer - \varnothing 1/4" x3/4" x1/16"		4 PCS
Pre-installed on Part 1	Allen Bolt \varnothing 5/16" x18x2"		8 PCS
	Lock Washer \varnothing 5/16"		8 PCS
	Flat Washer \varnothing 5/16" x3/4" x1/16"		8 PCS
	T Nut \varnothing 5/16" x3/4" x3/8"		8 PCS

FUNCTIONALITY INSTRUCTION

ANTI-TIP DEVICE MUST BE INSTALLED BY CUSTOMER

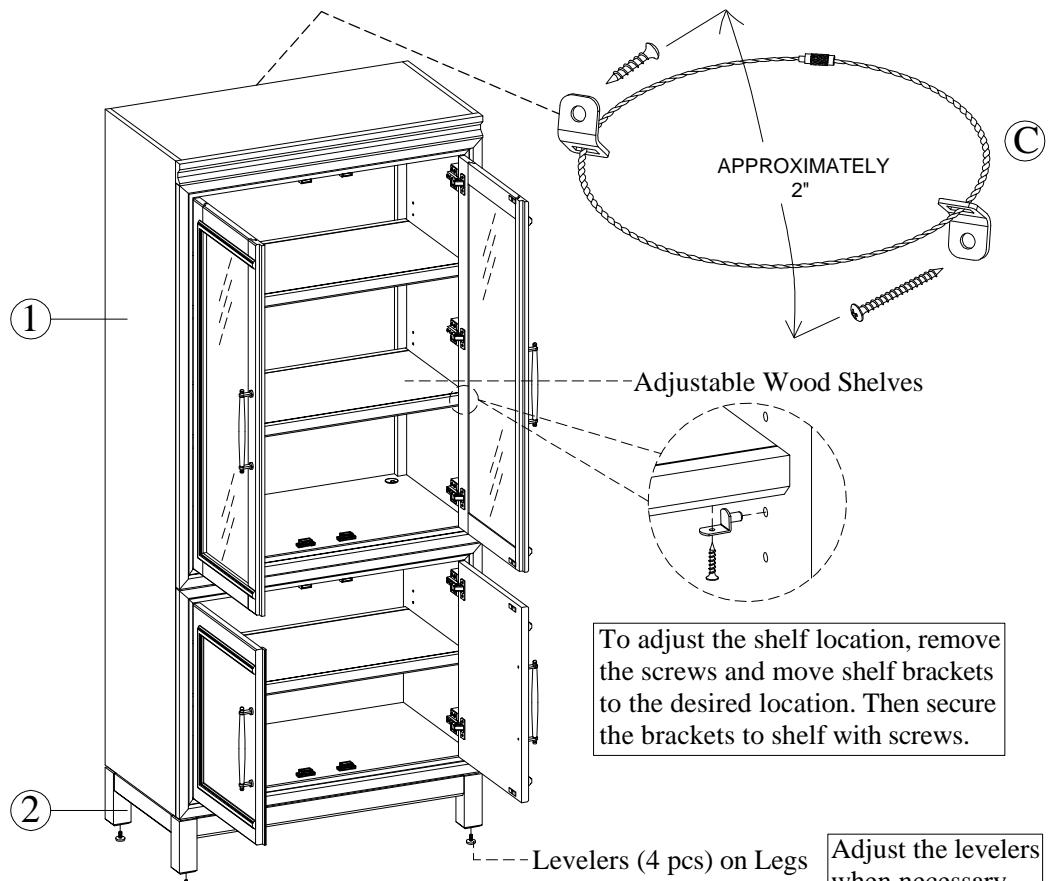

Hardware Pack Location(S):

ASPN I3314-226-BLU DOOR PIER SKU # 24433144
 ASPN I3314-226-WHT DOOR PIER SKU # 24433156

This product is manufactured by ASPN for

ROOMS TO GO

MADE IN VIETNAM

1 OF 3

Assembly Instructions

ASPN I3314-226-BLU DOOR PIER SKU # 24433144


ASPN I3314-226-WHT DOOR PIER SKU # 24433156

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.


STEP 1: Put the door pier (1) backside down on a soft surface.

STEP 2: Attach the legs (2) to the bottom of door pier (1), then use an allen wrench (A) to tighten all the bolts.

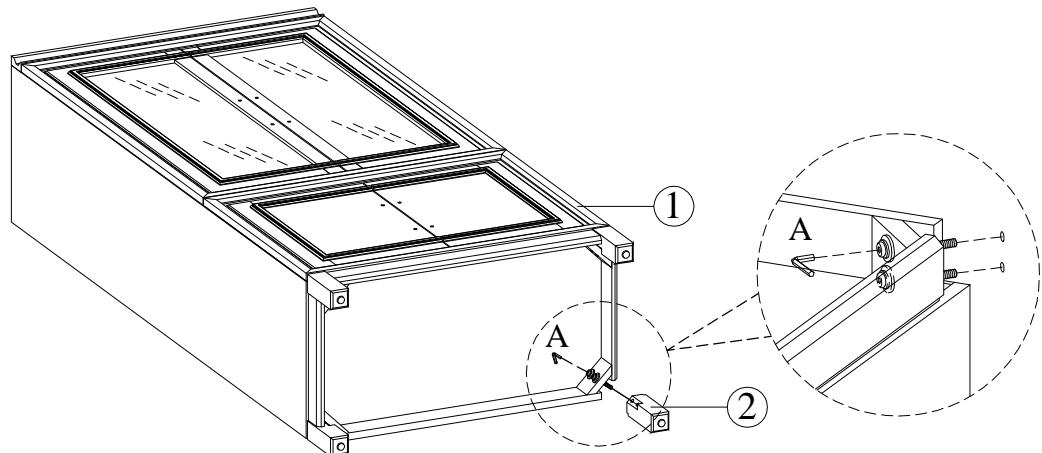

STEP 3: Return the assembled door pier to the upright position.

STEP 4: Reverse each handle by removing the screws while each door are open and attach all handles to the front of the doors with screws as shown below.

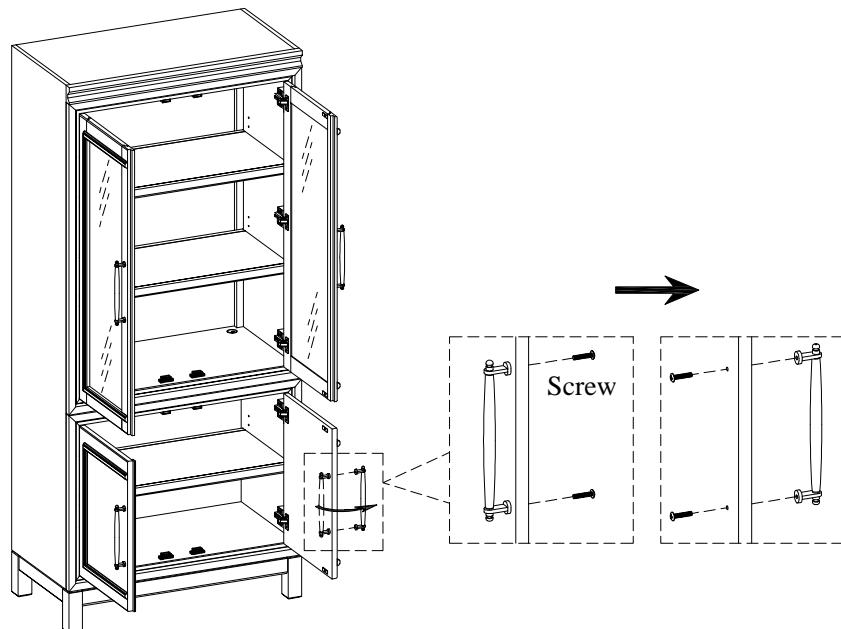

Assembly Instructions

ASPN I3314-226-BLU DOOR PIER SKU # 24433144

ASPN I3314-226-WHT DOOR PIER SKU # 24433156

Version #1 - 2025/06/09

***Caution: Please read all instructions carefully before starting the assembly process. These parts are cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury and ensure the parts are not damaged during the assembly.

This DOOR PIER is not only to set up on its own, but also to set up with consoles by both Option 1 & Option 2.


STEP 1: Attach each Pier to the console with the metal plate (B) using 4 bolts (D) with an allen key (A) as shown below. Completely tighten all bolts.

Remark: Depending on your purchasing preference, AI3314-227-BLU/I3314-227-WHT (sold separately) may serve as an alternative to AI3314-226 BLU/ I3314-226-WHT on the opposite side, using the same setup instructions.


OPTION 1:

ASPN I3314-272-BLU 72" CONSOLE
W/ 4 DRAWERS - SKU: 24033146


ASPN I3314-272-WHT 72" CONSOLE
W/ 4 DRAWERS - SKU: 24033158
(sold separately)

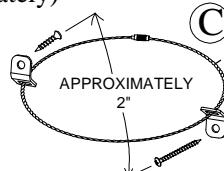

I3314-226

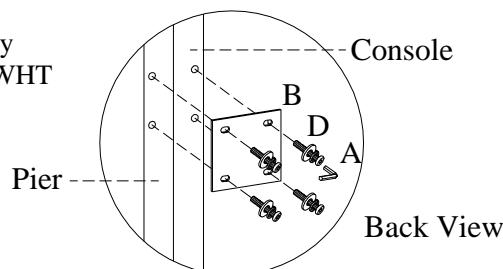


Back View

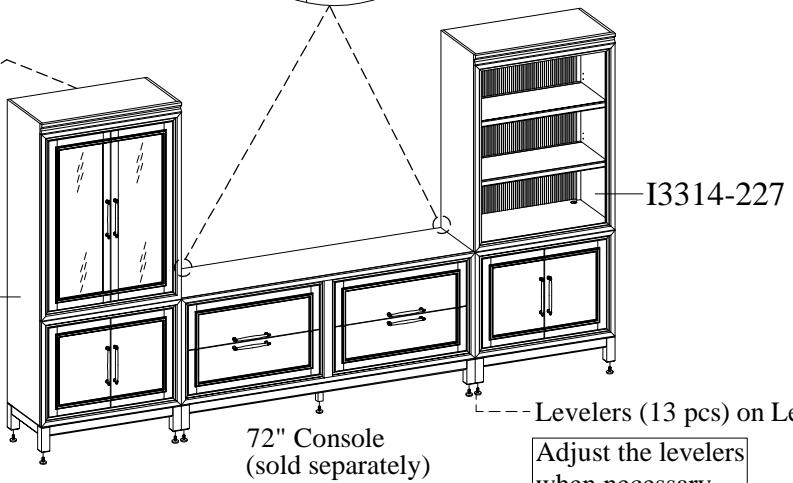


OPTION 2:

ASPN I3314-284-BLU 84" CONSOLE
W/ 2 DOORS - SKU: 24233140


ASPN I3314-284-WHT 84" CONSOLE
W/ 2 DOORS - SKU: 24233152
(sold separately)

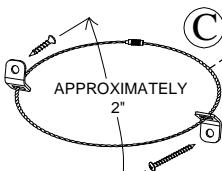


I3314-226

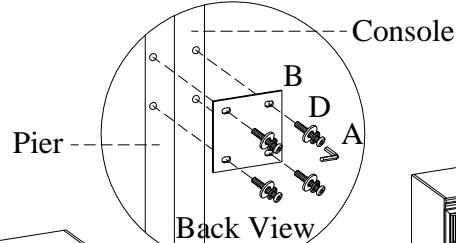

Back View

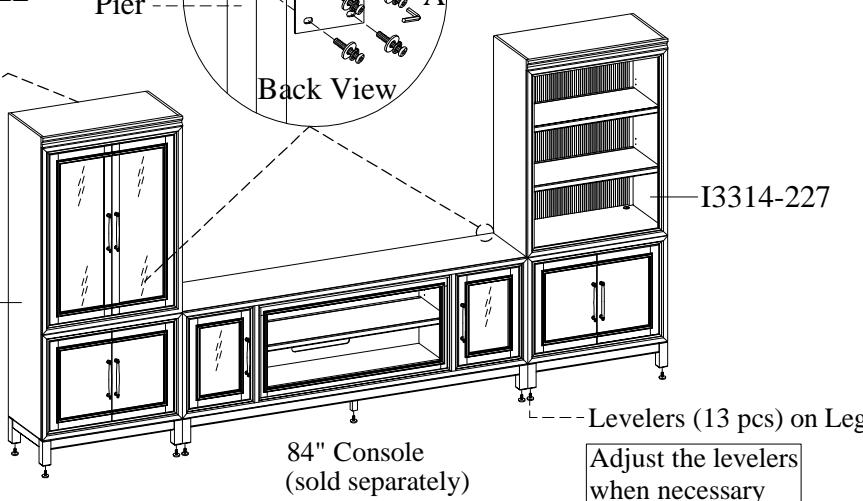

ANTI-TIP DEVICE

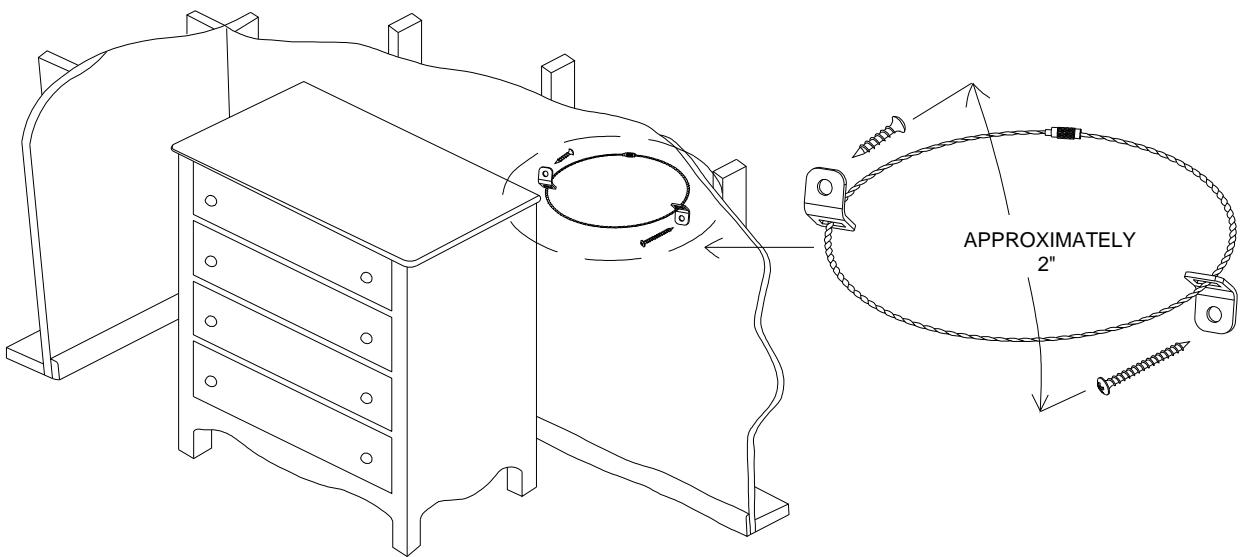

Installation Instructions:

This anti-tip device must be attached to a wall stud using the 2" screw enclosed.

1. Attach a bracket securely to the back top rail or back top edge of the furniture using the 5/8" screw provided, through the smaller hole in the bracket.
2. Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole in the bracket.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the threaded end of the restraint cable through the rectangular hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
5. Confirm that the cable is securely laced and locked.