




ASSEMBLY INSTRUCTIONS

FNR671 Barcia Two-Door Curio Cabinet

Manufactured by (CPLX) for RTG stock order

SKU#: 26006711


PARTS

S.NO.	DESCRIPTION	QTY.
P	 BASE	1 PC
Q	 LEG SUPPORT	1 PC

HARDWARE


S.NO.	DESCRIPTION	QTY.
A	 NUT Size : 38x6 mm	4 PCS
B	 SPANNER No: 14/15	1 PC
C	 HANDLE	2 PC
D	 NUT Size : 32x4 mm	4 PCS
E	 SCREW DRIVER	1 PC

STEP-1

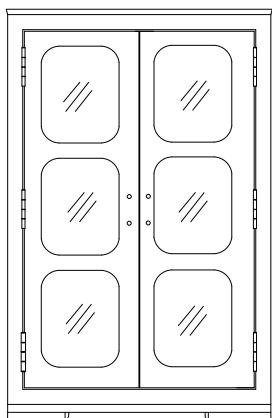


P

STEP-2

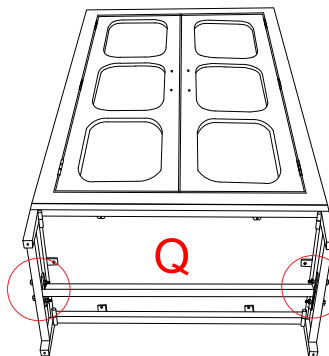


Note: Extend the folded metal legs of cabinet and place the leg support "Q" aligning the holes with cabinet leg. Insert the Nut in designated hole Tighten the nuts "A" using Spanner "B" as shown if figure. Ensure both bolts are firmly fastened to stabilize the frame.

STEP-3

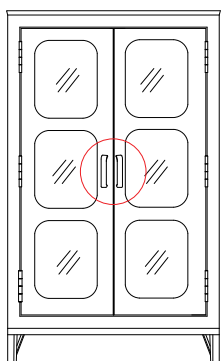

Note: Place the Handle "C" against the pre-drilled hole on the door and tighten them using Nut(D) and Screw driver(E) to complete handle assembly.

FINAL PRODUCT

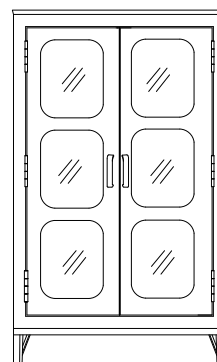

Note: Levellers are provided at bottom to balance the product on uneven surface.




ASSEMBLY INSTRUCTIONS

FNR671 Barcia Two-Door Curio Cabinet


Manufactured by (CPLX) for RTG stock order

SKU#: 26006711

ANTI TIP HARDWARE

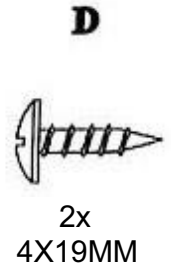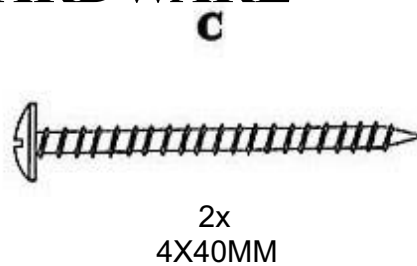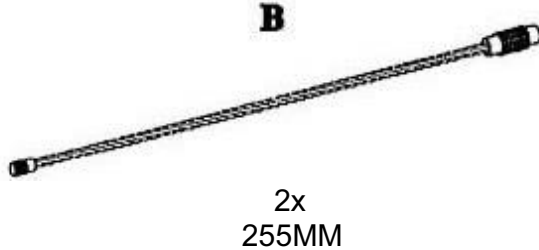

STEP 1

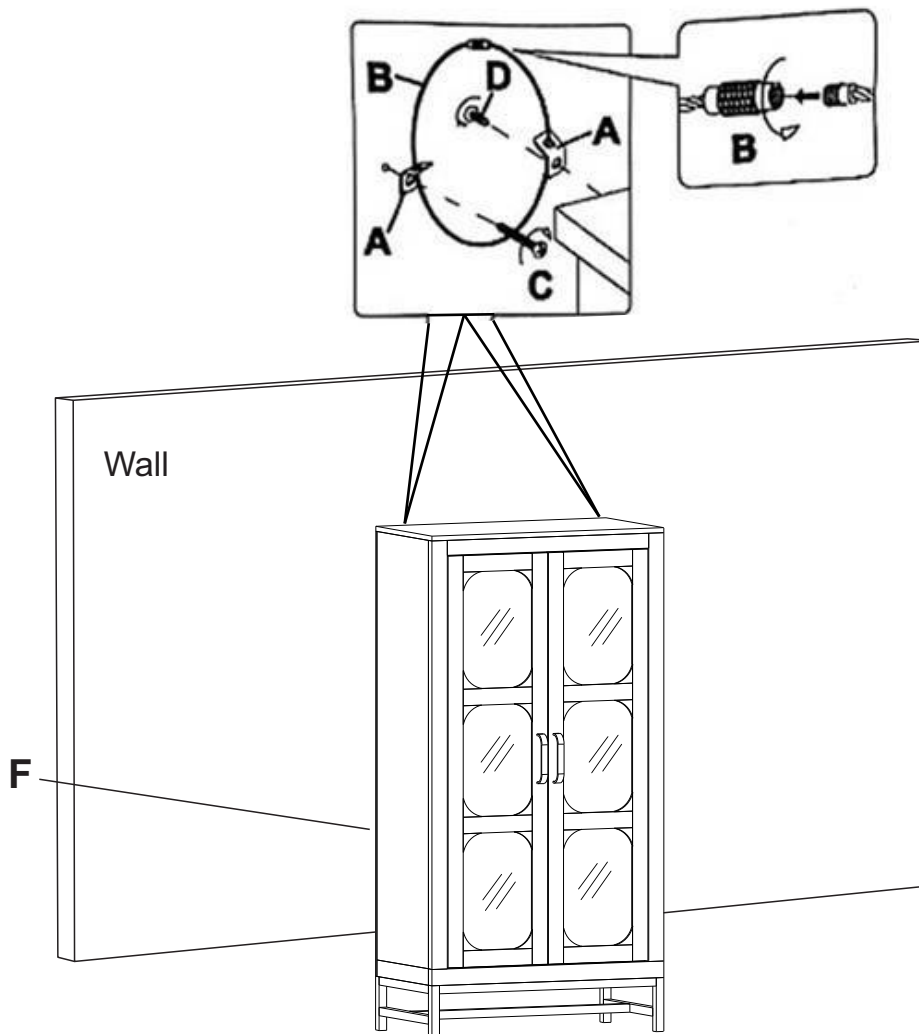

The Instruction on the bottom is:

To prevent the cabinet (F) from tipping, mount one side of the Tipping Restraint to the backside of the cabinet (F) and the other side to the wall.