



UTTERMOST

\_\_\_\_\_ GLASS "D"

\_\_\_\_\_ SPANNER(INCLUDED)


\_\_\_\_\_ NUT "C"

\_\_\_\_\_ WASHER

\_\_\_\_\_ METAL TABLE

\_\_\_\_\_ BOARD "B"

\_\_\_\_\_ TABLE "A"

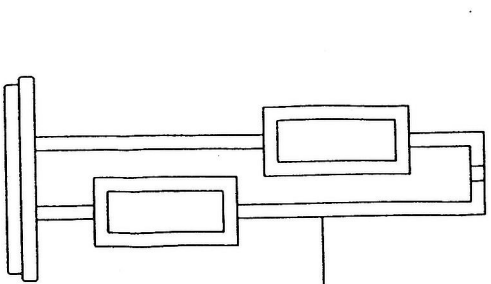

## Assembly Instruction STYLE NO:24344

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Put the metal table-board(B) onto the table base(A).
3. Screw the nut(C) with the spanner to tighten the metal table board(B) .
4. put the glass(D) into the metal table board(B).

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

[www.uttermost.com](http://www.uttermost.com)